




Ref #	Part Number	Qtv	Description
	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
			· · · · · · · · · · · · · · · · · · ·
	650494		Screw, 6-40 x 5/16"
	30700		Yoke, Governor
	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
19	33857		Spring Assy., Extension (Incl. 19B)
	35319		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knockout)
25	23300		(Use as required)
0.5	050504		,
25	35256A		Blower Housing Baffle (With electric starter knockout) (Use
			as required)
	35326		Baffle, Blower housing
26	650561		Screw, 1/4-20 x 5/8"
30	35495A		Crankshaft
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	30322		Nut & Lockwasher, 8-32
	29216		Locknut, 10-32
	29642		Ring, Retaining
40	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A		Piston, Pin & Ring Set (.010" OS)
	34862A		Piston, Pin & Ring Set (.020" OS)
	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
42	34867A		Ring Set (.010" OS)
42	34868A		Ring Set (.020" OS)
	27888		Ring, Piston Pin retaining
	35373A		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908		Bolt, Connecting rod
	650882		
			Connecting Rod Bolt (2 pcs. on early Specs.)
	34034		Lifter, Valve
	35374		Dipper, Oil
50	35375		Camshaft (MCR)
60	33273A		Extension, Blower housing
64	650802		Screw, 1/4-20 x 5/8"
	650128		Screw, 10-24 x 1/2"
	35262		* Gasket, Flange
	33626B		Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642		Plug, Oil drain
	33625		Seal, Oil
80	31845		Shaft, Mechanical governor
81	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
			•
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832		Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589		Key, Flywheel
90	611094		Flywheel (w/ring gear) (7 Amp)
	650880		Washer, Lock
	650881		Nut, 5/8-18
			·
100	35135		Solid State Assy.


Ref # Part Number	Qty	
101 610118		Cover, Spark plug
102 650872		Stud, Solid state mounting
103 650814		Screw, Torx T-15, 10-24 x 1"
108 29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
		•
109 33245		Gear, Crankshaft
119 34923A		* Gasket, Cylinder head
120 34030A		Head, Cylinder
125 27878A		Exhaust Valve (Std.) (Incl. 151)
125 27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126 34035		Intake Valve (Std.) (Incl. 151)
126 34036		Intake Valve (1/32" OS) (Incl. 151)
127 650691		Washer (Do not use with No. 6021A scr ew.)
128 650690		Washer, Belleville (Use as required)
129 650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130 6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
100 0021/1		650691 washer.)
		•
130 650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130 650694A		Corour E/16 19 v 2" /Lloo on required)
		Screw, 5/16-18 x 2" (Use as required)
131A 650713		Screw, 5/16-18 x 5/8"
131 650737		Screw, 1/4-20 x 1/2" (Use as required)
131 650738		Screw, 1/4-20 x 5/8 (Use as required)
133 650890		Washer, Internal Lock
135 33636		Resistor Spark Plug
139 33369		Bracket, Governor gear
140 650836		Screw, 10-24 x 1/2"
149A 35862		Seal Assy., Intake valve
150 27881		Spring, Valve
151 32581		Cap, Lower valve spring
169 27896A		* Gasket, Breather
170 28423		Body, Breather
171 28424		Element, Breather
172 28425		Cover, Breather
173 35350		Tube, Breather
174 650128		Screw, 10-24 x 1/2"
182 650517		Screw, 1/4-20 x 27/32"
184 33263		* Gasket, Carburetor
186 34661		Link, Governor lever
187A 30196		Screw, 5/16-18 x 3/4"
187 34349A		Flange, Carburetor mounting
200 34784		Control Bracket (Incl.19, 203, 204, 2 06, 209)
200 34764 203 31342		
		Spring, Compression
204 650549		Screw, 5-40 x 7/16"
207 34785		Link, Governor lever-to-throttle
209 650821		Screw, 10-32 x 1/2"
210 27793		Clip, Conduit
211 28942		Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
224 27915A		* Gasket, Intake pipe
250B 33269A		Cover, Air cleaner
260 33375D		Blower Housing (For electric starter)
261 650788		Screw, 5/16-18 x 3/4"
262 29747B		Screw, 5/16-24 x 21/32"
265 33272B		Cover, Cylinder head
276 35741		Plate, Muffler locking
210 001 11		. isite, mainer restaing


Ref #	Part Number	Otv	Description
	650729	Qty	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	35287		Cup, Starter
	35446		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	34237		Clamp, Fuel line
	650665		Screw, 1/4-15 x 7/8"
	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000	01100/1		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
			·
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
55 t			required) (1.5" I.D.)
2214	0.40.40		. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	611097		Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	632406		Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page
			A3-8 for breakdown or Fiche 18B, Grid D-1)
200	E00022		,
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
400	222700		,
	33279G 730335		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

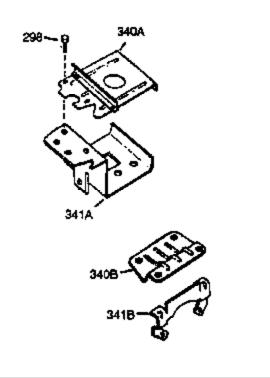


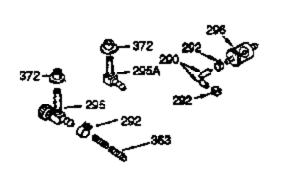


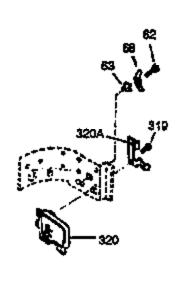


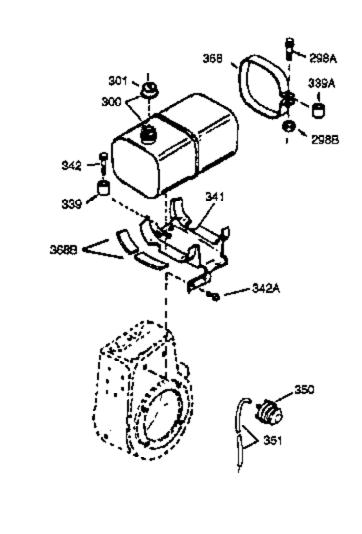

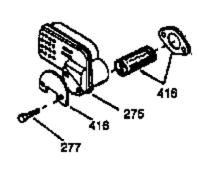  


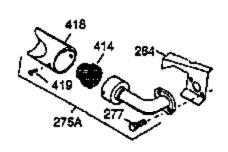






5.1	D (N)	<u> </u>	
	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	30196		Screw, 5/16-18 x 3/4"
	34349A		Flange, Carburetor mounting
222A	01010/1		Pop Rivet (Can be purchased locally)
	33269A		• • • • • • • • • • • • • • • • • • • •
			Cover, Air cleaner
	35865		Gasket, Exhaust
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	34390		Deflector
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
292	34237		Clamp, Fuel line
	650665		Screw, 1/4-15 x 7/8"
	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000	01100/1		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			· • · · · · · · · · · · · · · · · · · ·
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3∩1∆	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	3 1 210		
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	611097		Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
	650874		Screw, 10-32 x 15/32"
	611098		Regulator (7 Amp D.C.)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
419	650578		Screw, 8-18 x 3/8" (use as required)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•

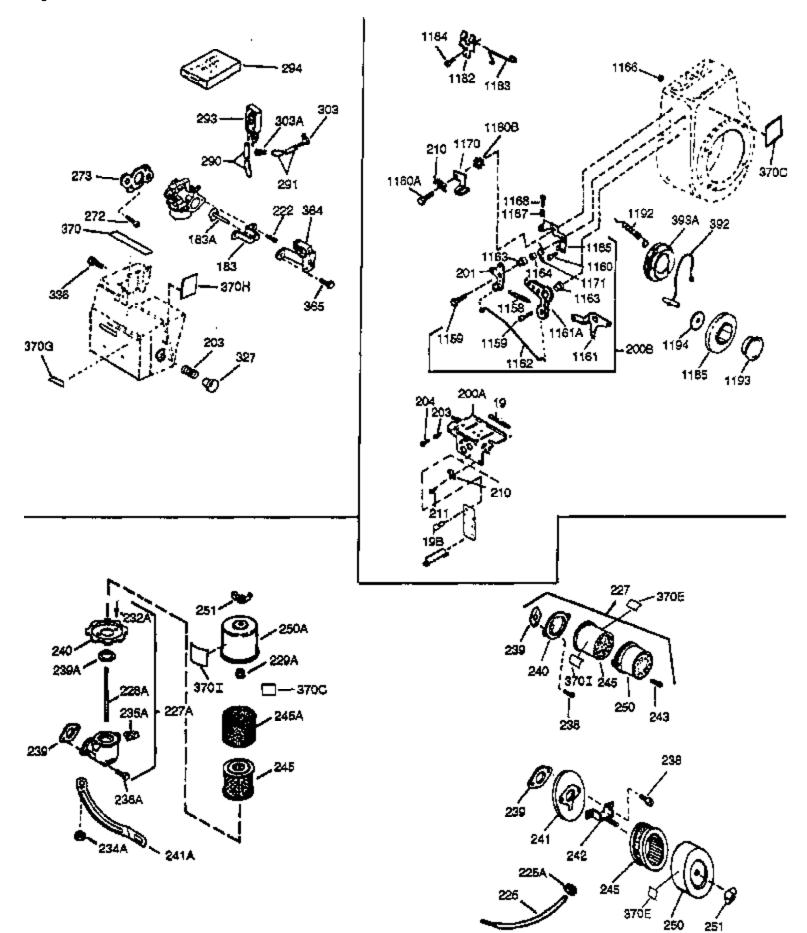

Ref #	Part Number Qty	Description
19B	28942	Screw, 10-32 x 3/8"
19	33857	Spring Assy., Extension (Incl. 19B)
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	34349A	Flange, Carburetor mounting
	30196	Screw, 5/16-18 x 3/4"
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
	631334	Gasket, Carburetor
	35043	Tube Assy., Carburetor
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
<u></u> ;	700127	required)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
293	34385	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
203	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
255	00/10	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
		• •
294	33010	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
20/1	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
234	33791	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
		, ,
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301Δ	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	3303 <u>2</u>	required) (1.5" I.D.)
		. , , , , ,
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
3014	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
555		

Ref #	Part Number	Qty	Description
303	33713	-	Fitting, Fuel line elbow
303A	34237		Fitting, Fuel
306	29673		* Gasket, Oil filler
316	611097		Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
327	35392		Plug, Starter
338A	31291		Plug, Cover
370	34346		Decal, Instruction
370	35274		Decal, Instruction
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional
1159	30312		Screw, 10-32 x 1/2"
1160	28820		Screw, 10-32 x 1/2"
1160	27070		Lockwasher
1185	33816		Hub & Screen Assy.

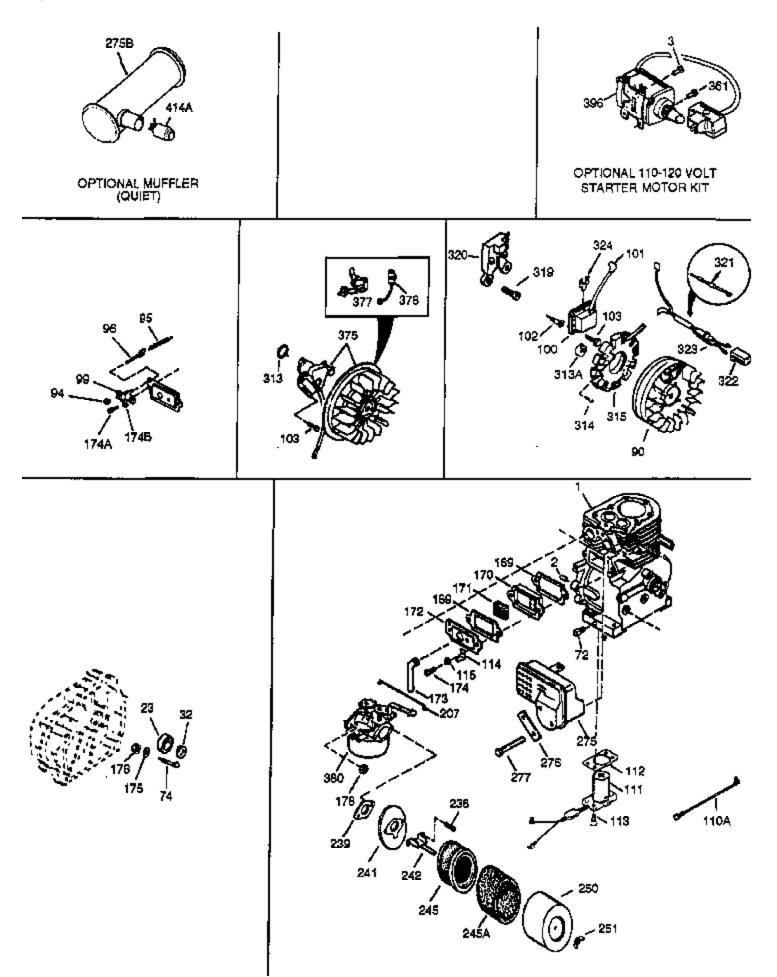

Ref #	Part Number Qty	Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611094	
		Flywheel (w/ring gear) (7 Amp)
	35135	Solid State Assy.
	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
175	650778	Lockwasher
176	650580	Nut, Lock
187	34349A	Flange, Carburetor mounting
187A	30196	Screw, 5/16-18 x 3/4"
207	34785	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
2130	331020	mufflercan be used on any model.)
		municican be used on any model.
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
0044	00000	
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
35 t	0.2.0	as required) (1.5" I.D.)
		. , , ,
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	650873	Screw, 1/4-20 x 3/4"
316	611097	Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
319	650874	Screw, 10-32 x 15/32"
320	611098	Regulator (7 Amp D.C.)
	610921	Connector, Body
	610824	Connector, Flat
		•

Ref #	Part Number	Qty	Description
323	610922		Terminal, Female
338A	31291		Plug, Cover
361	30063		Screw, Torx T-30, 1/4-20 x 1/2"
377	30547A		Breaker Points (Use with Std. point i gn.)
380	632406		Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page A3-8 for breakdown or Fiche 18B, Grid D-1)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional