



	Part Number Qt	
	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
15A	30700	Yoke, Governor
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
19	33857	Spring Assy., Extension (Incl. 19B)
	35319	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
25	23000	(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
20		as required)
	35326	Baffle, Blower housing
26	650561	Screw, 1/4-20 x 5/8"
	35495A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
		Dicton, Din & Ding Sot (010° (05°)
	34861A	Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
49	35374	Dipper, Oil
50	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
64	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
75	33625	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	011001	
90	611091 650880	Flywheel (w/ring gear) Washer, Lock

		y Description
93	650881	Nut, 5/8-18
100	35135	Solid State Assy.
	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	
		Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
	33245	Gear, Crankshaft
	35183	Wire, Ground
	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
125	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
126	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, $1/4-20 \times 1/2$ " (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650517	Screw, 1/4-20 x 27/32"
	33263	* Gasket, Carburetor
	34661	Link, Governor lever
	34349A	Flange, Carburetor mounting
	30196	Screw, 5/16-18 x 3/4"
	34784	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
207	34785	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788 20747B	Screw, 5/16-18 x 3/4" Scrow, 5/16-24 x 21/22"
202	29747B	Screw, 5/16-24 x 21/32"

	Part Number	Qty	Description
	33272B		Cover, Cylinder head
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285	35287		Cup, Starter
286	35446		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
306	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	34246		Clip, Ground wire
	31291		Plug, Cover
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	632406		Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page A3-8 for breakdown or Fiche 18B, Grid D-1)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for breakdown or Fiche 18B, Grid G-1)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown or Fiche 18B, Grid G-6)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional

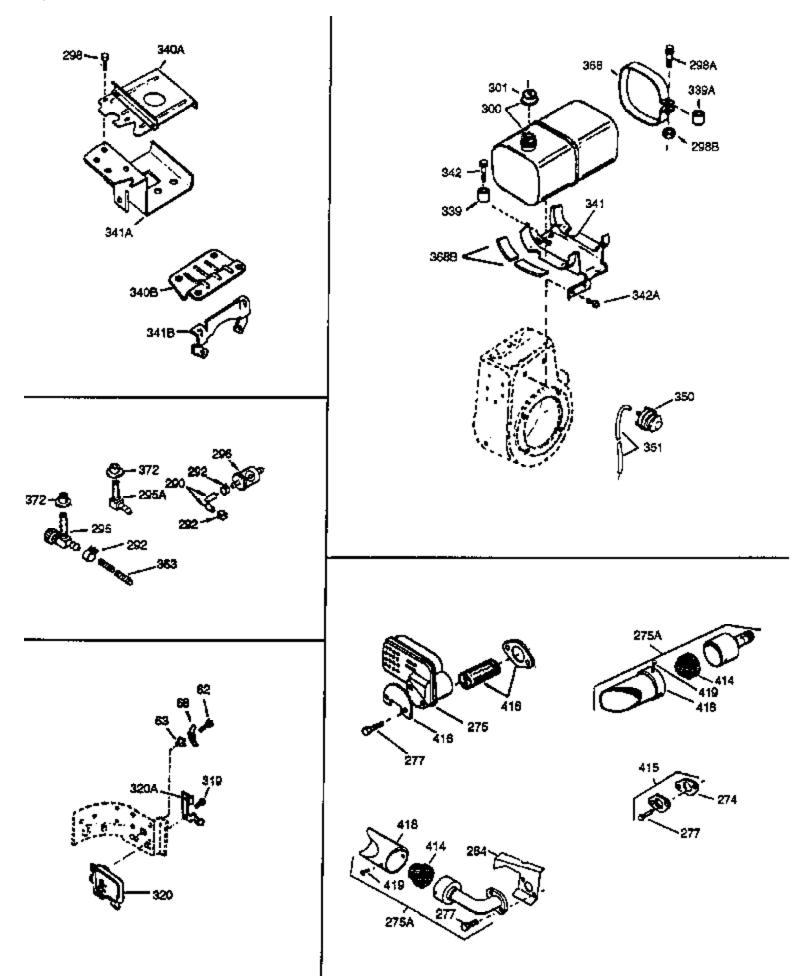


62 650760 Screw, 8 63 28545 Gromme 64 650802 Screw, 1 68 33356 Tab, Gro 129 650727 Screw, 5 131 650737 Screw, 1 131 650738 Screw, 5 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive	ackwasher, 8-32 -32 x 3/8" et, Plastic /4-20 x 5/8" und terminal /16-18 x 1-3/4 (Use as required) /4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner Exhaust
63 28545 Gromme 64 650802 Screw, 1 68 33356 Tab, Gro 129 650727 Screw, 5 131 650737 Screw, 1 131 650738 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	et, Plastic /4-20 x 5/8" und terminal /16-18 x 1-3/4 (Use as required) /4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
64 650802 Screw, 1 68 33356 Tab, Gro 129 650727 Screw, 5 131 650737 Screw, 1 131 650738 Screw, 1 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	/4-20 x 5/8" und terminal /16-18 x 1-3/4 (Use as required) /4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
68 33356 Tab, Gro 129 650727 Screw, 5 131 650737 Screw, 1 131 650738 Screw, 1 131 650738 Screw, 5 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	und terminal /16-18 x 1-3/4 (Use as requir ed) /4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
129 650727 Screw, 5 131 650737 Screw, 1 131 650738 Screw, 1 131 650738 Screw, 5 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	/16-18 x 1-3/4 (Use as required) /4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
131 650737 Screw, 1 131 650738 Screw, 1 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	/4-20 x 1/2" (Use as required) /4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
131 650738 Screw, 1 187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	/4-20 x 5/8 (Use as required) /16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
187A 30196 Screw, 5 187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	/16-18 x 3/4" Carburetor mounting et (Can be purchased locally) ir cleaner
187 34349A Flange, 0 222A Pop Rive 250B 33269A Cover, A	Carburetor mounting et (Can be purchased locally) ir cleaner
222A Pop Rive 250B 33269A Cover, A	et (Can be purchased locally) ir cleaner
250B 33269A Cover, A	ir cleaner
274 35865 Gasket	Exhaust
275A 33714 Muffler (I	ncl. 284, 284A & 414)
277 650729 Screw, 5	/16-18 x 3-3/16" (Use as requ ired)
277 651002 Screw, 5	/16-18 x 4-1/4" (Use as requi red)
284 34390 Deflector	•
290 29774 Fuel Line	e (Braided 8-1/4")(21cm)(As r equired)
290 30962 Fuel Line	e (Braided 32")(80cm)(As requ ired)
292 26460 Fuel Line	e Clamp (Use as required)
301A 410144B Fuel Cap I.D.)	o (White Plastic)(Standard) (Use as required) (1.5"
	o (Red Plastic) (Spurt Resistant, Low Profile) (Use as (1.5" I.D.)
306 29673 * Gasket	t, Oil filler
338A 31291 Plug, Co	
	orx T-30, 1/4-20 x 1/2"
	ler Screen (Mini-Bike applica tion)
	aust adapter (Incl. 274 & 277)
	Tube, Muffler (use as require d)
	-18 x 3/8" (use as required)
	30 4-Cycle Engine Oil (Quart)
422 35824 Muffler C	

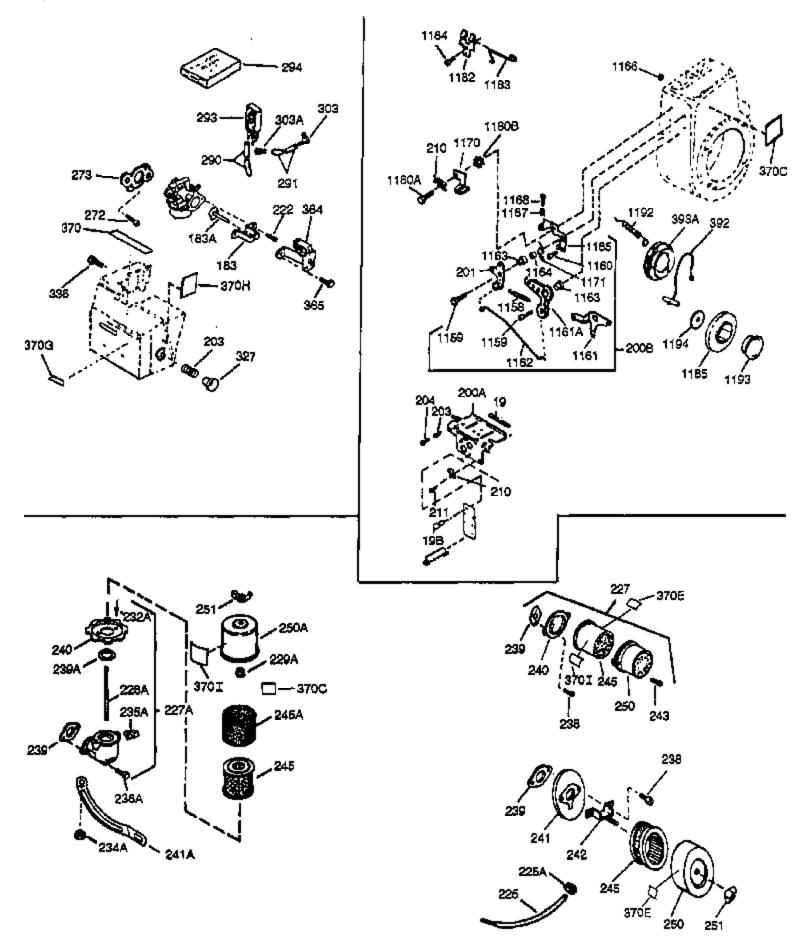

		ty Description
	28942	Screw, 10-32 x 3/8"
	33857	Spring Assy., Extension (Incl. 19B)
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
187	34349A	Flange, Carburetor mounting
187A	30196	Screw, 5/16-18 x 3/4"
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	20342	
222A	25042	Pop Rivet (Can be purchased locally)
	35043	Tube Assy., Carburetor
	631334	Gasket, Carburetor
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
228	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	
		Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
293	34385	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	33010	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
204	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
234	55791	
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
201 A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
JUIA		required) (1.5" I.D.)
202	22059	. , . ,
	32958	Fitting, Fuel
	33713	Fitting, Fuel line elbow
	34237	Fitting, Fuel
	29673	* Gasket, Oil filler
338A	31291	Plug, Cover

Ref #	Part Number Qty	Description
370	34346	Decal, Instruction
370	35274	Decal, Instruction
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional
1159	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
1185	33816	Hub & Screen Assy.

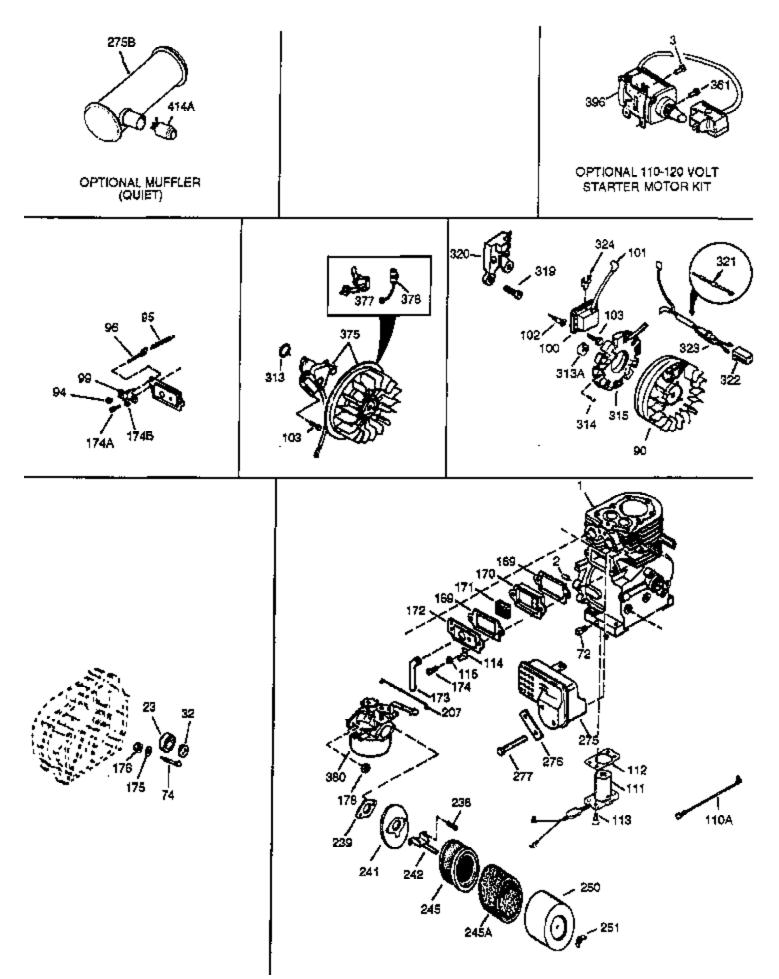

Ref #	Part Number Qty	
1	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
23	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611091	Flywheel (w/ring gear)
	35135	Solid State Assy.
	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
169	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	Nut, Lock
	30196	•
		Screw, 5/16-18 x 3/4"
	34349A	Flange, Carburetor mounting
	34785	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
		• /
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
201 4	22022	Fuel Can (Bad Diastia) (Court Desistant Law Drafile) (Lies as
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
306	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	30547A	
		Breaker Points (Use with Std. point i gn.)
380	632406	Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page
		A3-8 for breakdown or Fiche 18B, Grid D-1)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional