




Ref #	Part Number C	tty Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	30699C	
		Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
23	30230A	· · · · · · · · · · · · · · · · · · ·
		as required)
25	35326	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	35420A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
47	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034	Lifter, Valve
49	35374	Dipper, Oil
50	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	35378	Gear Assy., Governor (Incl. 81)
83	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	650880	Washer, Lock
	650881	Nut, 5/8-18
	35135	Solid State Assy.
102	650872	Stud, Solid state mounting


D-1.11	Deat Marchan	<u> </u>	December 1
		Qty	Description
103	650814		Screw, Torx T-15, 10-24 x 1"
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
100	207.00		
			to crank.)
100	22245		Coar Crankshaft
	33245		Gear, Crankshaft
119	34923A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126	34035		Intake Valve (Std.) (Incl. 151)
126	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
128	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	002 IA		
			650691 washer.)
400	050744		O F/40 40 4 F/0 /
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
			,
130	650694A		Screw, 5/16-18 x 2" (Use as required)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
133	650890		Washer, Internal Lock
	30747		
			Clip, Spark plug shorting
135	33636		Resistor Spark Plug
139	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
150	27881		Spring, Valve
151	32581		Cap, Lower valve spring
			•
	27896A		* Gasket, Breather
170	28423		Body, Breather
171	28424		Element, Breather
	28425		Cover, Breather
			·
1/3	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
184	33263		* Gasket, Carburetor
185	34707		Pipe, Intake
	34661		Link, Governor lever
			·
	34677		Control Bracket (Incl.19, 203, 204, 2 06, 209)
203	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
			•
	33878		Link, Governor lever-to-throttle
209	650821		Screw, 10-32 x 1/2"
215	32410		Knob, Speed control
222A	<u></u>		
	050070		Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
224	27915A		* Gasket, Intake pipe
	33269A		Cover, Air cleaner
			·
	33375D		Blower Housing (For electric starter)
261	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
275	33280A		Muffler
	31588		Plate, Muffler locking
2,0	-		, ·····


Ref #	Part Number	Qty	Description
276	35741	•	Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	34130A		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
204.4	22222		•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
000	00070		
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31297		Dipstick (Incl. 307)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
370B	33962		Decal, Control
370A	34686		Decal, Name
370	34346		Decal, Instruction
370	35274		Decal, Instruction
379	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
000	E00000		,
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722	00021		Manior Optional

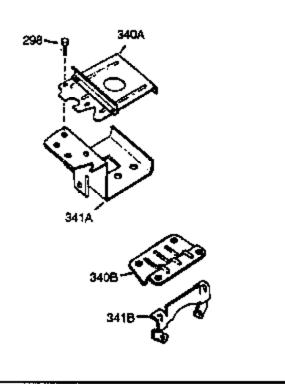

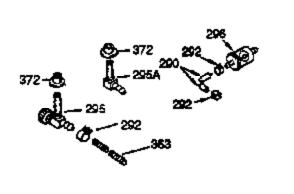


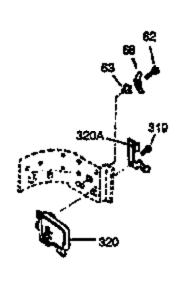

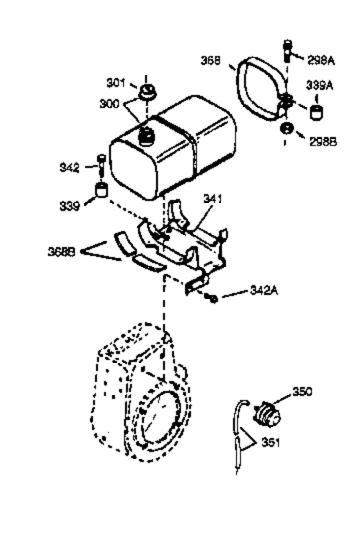

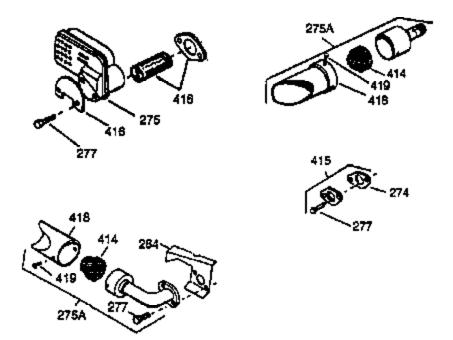

Ref #	Part Number	Qty D	Description
37A	30322	N	lut & Lockwasher, 8-32
64	650802	So	Screw, 1/4-20 x 5/8"
129	650727	So	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	So	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	So	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	So	Screw, 5/16-18 x 5/8"
222A		Po	op Rivet (Can be purchased locally)
250B	33269A	C	Cover, Air cleaner
274	35865	G	Sasket, Exhaust
275	33280A	М	<i>fluffler</i>
277	650729	So	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	So	Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774	Fu	uel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fι	iuel Line (Braided 32")(80cm)(As requ ired)
292	26460	Fu	uel Line Clamp (Use as required)
298	650665	So	Screw, 1/4-15 x 7/8"
300	34156A	Fu	uel Tank (Incl. 292 & 301) NOTE: These tanks were
		bu	uiltwith different size fuel inlet openings. Tanks with the
		1-	-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-	-1/2" I.D. opening use fuel cap 35355.
301Δ	410144B	Fı	uel Cap (White Plastic)(Standard) (Use as required) (1.5"
30171	4101410		D.)
301A	33032		ruel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		re	equired) (1.5" I.D.)
301A	34210	Fu	uel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			s required) (1.5" I.D.)
206	29673	* /	Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		lug, Cover
	34155		racket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		it, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		
	730226		Screw, 8-18 x 3/8" (use as required) SAE 5W30 4-Cycle Engine Oil (Quart)
	750226 35824		Muffler Optional
422	0002T	IVI	пишег Орионаг

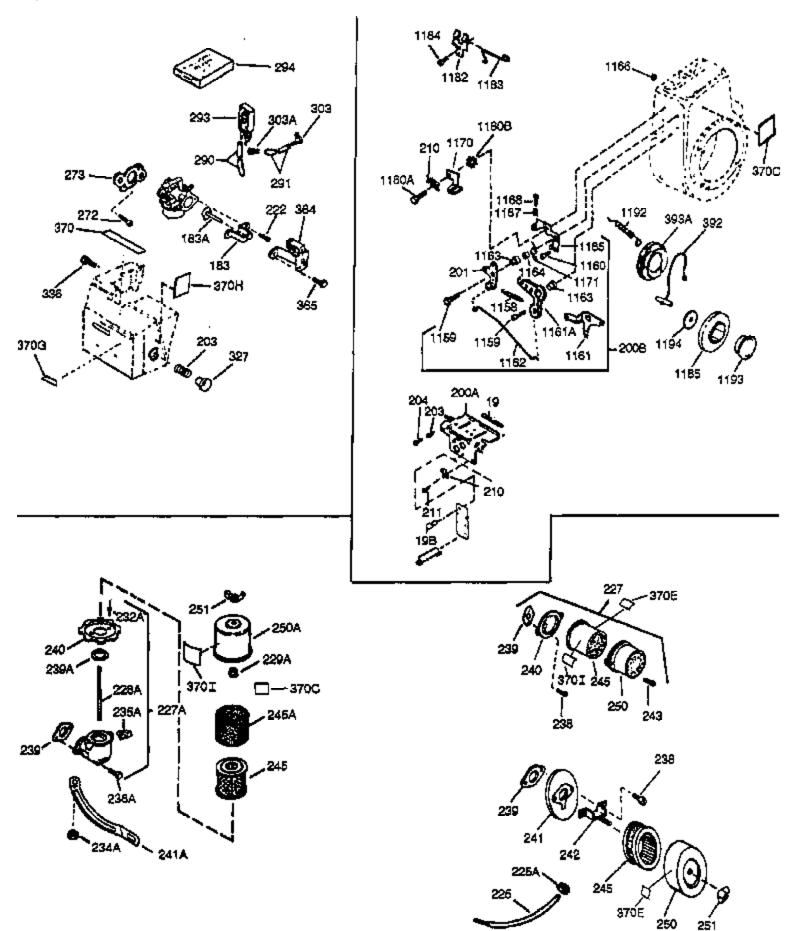

Ref #	Part Number	Qty	Description
37A 64 129 131 131A 200B 203 204 222A	30322 650802 650727 650737 650738 650713 730152 31342 650549	.,	Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
239 241 242 245 250B 251 290 290 291	28820 27272A 33266 33267 33268 33269A 650513 29774 30962 30705 33715		Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
306 310B 327 338A 370 370 421 422 1159 1160 1160	32958 29673 35941 35392 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fitting, Fuel * Gasket, Oil filler Dipstick (Incl. 306) Plug, Starter Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.



1 2 23 32 37A 64 72 74 90 100 102 103 129 131 131A 169 170 171 172 173 174 175 176 178 207 222A 238 239 241 242 245 250B 251 275	Part Number 35371 27652 33627 33628 30322 650802 27642 31855 611090 35135 650872 650872 650737 650738 650738 650713 27896A 28423 28424 28425 35350 650128 650778 650580 29752 33878 28820 27272A 33266 33267 33268 33269A 650513 33280A 391026	Qty	Description Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72) Pin, Dowel Bearing, Ball Washer, Thrust Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Plug, Oil drain Retainer, Bearing Flywheel Solid State Assy. Stud, Solid state mounting Screw, Torx T-15, 10-24 x 1" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Lockwasher Nut, Lock Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Nut, Wing 1/4-20 Muffler Muffler (Incl. 284, 284A & 416) (This spark arrester
276 277 277	31588 35741 650729 651002 410144B		mufflercan be used on any model.) Plate, Muffler locking Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) Screw, 5/16-18 x 4-1/4" (Use as required) Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
310B 313A 338A 377 380	29673 35941 33876 31291 30547A 632242		* Gasket, Oil filler Dipstick (Incl. 306) Gasket, Stator (Used only on Std. poi nt ign.) Plug, Cover Breaker Points (Use with Std. point i gn.) Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)

Ref # Part Number	Qty Description	
422 35824	Muffler Optional	