




		ty Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30700	Yoke, Governor
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15B	650494	Screw, 6-40 x 5/16"
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
	35319	Seal, Oil
	35256A	Blower Housing Baffle (With electric starter knockout) (Use
	33_33.	as required)
	35326	Baffle, Blower housing
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
oe.	650564	Corour 1/4 20 v E/0"
	650561	Screw, 1/4-20 x 5/8"
	35372A	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
40	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	
		Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
50	35375	Camshaft (MCR)
60	33273A	Extension, Blower housing
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
64	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	35376	Cover, Cylinder (Incl. 71, 75 & 80)
	35377	Bushing, Crankshaft
	27642	Plug, Oil drain
	35319	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
87	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel
	611091	Flywheel (w/ring gear)
	650880	Washer, Lock
3 <b>2</b>	<del>-</del>	


93 100 101 102 103	Part Number 650881 35135 610118 650872 650814 29783	Qty	Description Nut, 5/8-18 Solid State Assy. Cover, Spark plug Stud, Solid state mounting Screw, Torx T-15, 10-24 x 1" Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
110 119 120 125 125 126 126 127 128	33245 35183 34923A 34030A 27878A 27880A 34035 34036 650691 650690 650727 6021A		Gear, Crankshaft Wire, Ground * Gasket, Cylinder head Head, Cylinder Exhaust Valve (Std.) (Incl. 151) Exhaust Valve (1/32" OS) (Incl. 151) Intake Valve (Std.) (Incl. 151) Intake Valve (1/32" OS) (Incl. 151) Washer (Do not use with No. 6021A scr ew.) Washer, Belleville (Use as required) Screw, 5/16-18 x 1-3/4 (Use as required, but do notuse No. 650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
131 131A 133 135 139 140 149A 150 151 169 170 171 172 173 174 178 182 184 185 207 222A 223 224 250B 260 261 262	650694A 650737 650738 650713 650890 33636 33369 650836 35862 27881 32581 27896A 28423 28424 28425 35350 650128 29752 30088A 33263 34707 33878 650378 27915A 33375D 650788 29747B 33272B 34185A		Screw, 5/16-18 x 2" (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Washer, Internal Lock Resistor Spark Plug Bracket, Governor gear Screw, 10-24 x 1/2" Seal Assy., Intake valve Spring, Valve Cap, Lower valve spring * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1" * Gasket, Carburetor Pipe, Intake Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, Torx T-30, 5/16-18 x 1-1/8" * Gasket, Intake pipe Cover, Air cleaner Blower Housing (For electric starter) Screw, 5/16-24 x 21/32" Cover, Cylinder head Muffler
276	31588 35741 650729		Plate, Muffler locking Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as requ ired)


Ref #	Part Number	Qty	Description
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285	35287		Cup, Starter
286	35194		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
204.4	4404.44D		
<i>3</i> 01A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
204 A	24240		. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
305	33893A		Oil Fill Tube
307	33590		"O" Ring
310	34011A		Dipstick (Incl. 307)
325	34246		Clip, Ground wire
338A	31291		Plug, Cover
340	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
361	30063		Screw, Torx T-30, 1/4-20 x 1/2"
370A	34686		Decal, Name
370	34346		Decal, Instruction
370	35274		Decal, Instruction
379	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
205	35763A		Electric Starter Motor (12 Volt) (Refer to service number
393	33703A		stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
			•
	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

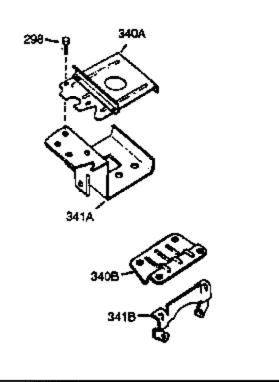


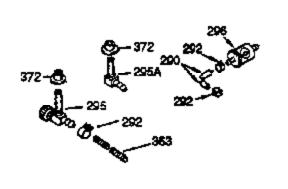

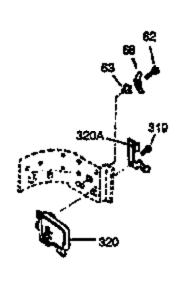


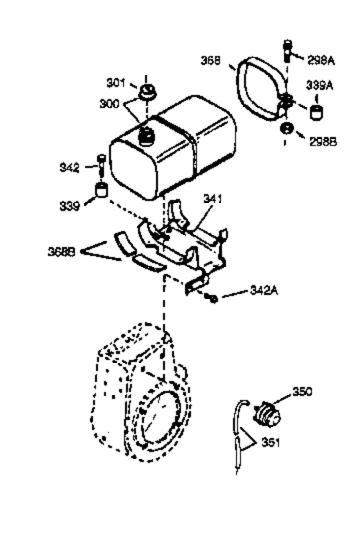

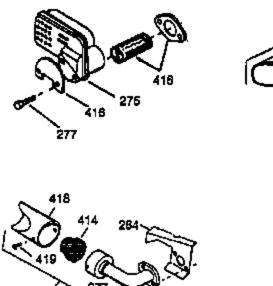

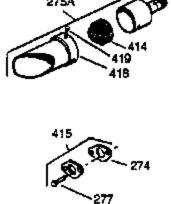

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
64	650802		Screw, 1/4-20 x 5/8"
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust
275	34185A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
338A	31291		Plug, Cover
341	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
414	33323		Opt.Muffler Screen (Mini-Bike applica tion)
415	730130		Kit, Exhaust adapter (Incl. 274 & 277)
418	33700		Cover & Tube, Muffler (use as require d)
419	650578		Screw, 8-18 x 3/8" (use as required)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

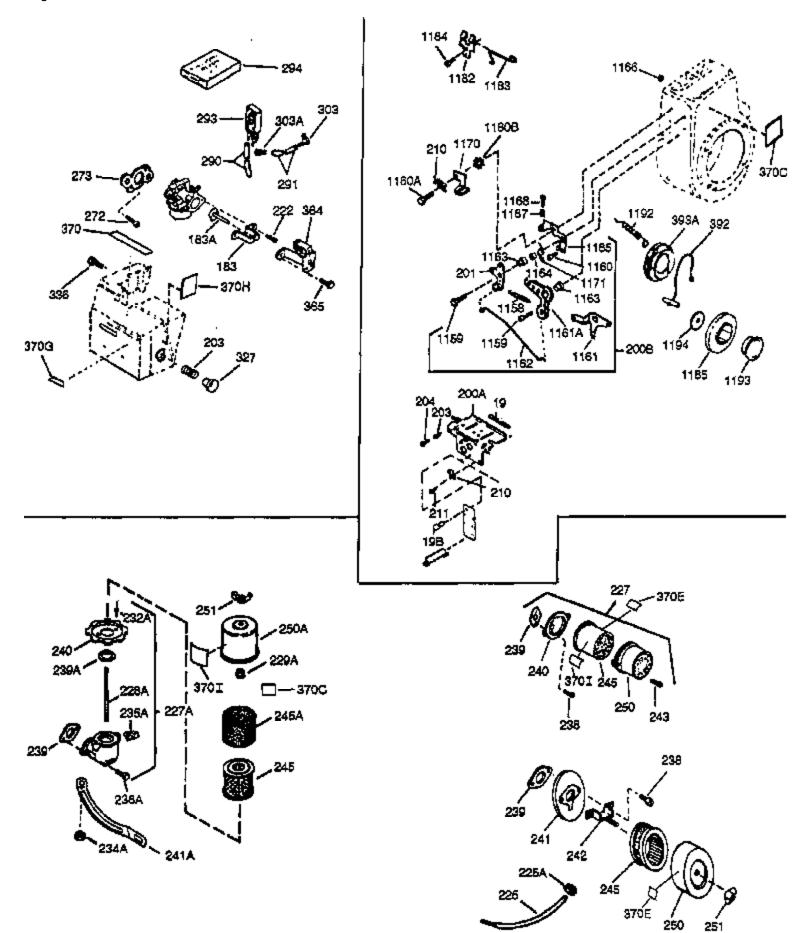

Ref #	Part Number	Qty	Description
37A 64 129 131 131A 200B 222A	30322 650802 650727 650737 650738 650713 730152		Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
239 241 242 245 250B 251 290 290 291	28820 27272A 33266 33267 33268 33269A 650513 29774 30962 30705 33715		required)  Screw, 10-32 x 1/2"  * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
338A 370 370 421 422 1159 1160 1160	32958 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fitting, Fuel Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.



Ref #	Part Number Qt	/ Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	611091	Flywheel (w/ring gear)
	33450	Lock Nut, 10-32
	30886A	Spring, Governor bolt
	30845A	Bolt, Governor adjusting
	35135	· · · · · · · · · · · · · · · · · · ·
		Solid State Assy.
	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	34185A	Muffler
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
2.02	00.020	mufflercan be used on any model.)
		• ,
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00171	00002	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
313A	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	30547A	Breaker Points (Use with Std. point i gn.)
	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
550		page A4-4 for breakdown or Fiche 18B, Grid D-3)
		, ,
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional