




	D. I.M. J. O.	D 10
		y Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15B	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
		·
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
OF.	25226	Doffle Dlover haveing
	35326	Baffle, Blower housing
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
26	650561	Sorow 1/4 20 v E/0"
		Screw, 1/4-20 x 5/8"
	35207	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (0.10" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650760	
		Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
70	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
71	33368	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	31950	Seal, Oil
	31845	Shaft, Mechanical governor
		· · · · · · · · · · · · · · · · · · ·
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
86	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611091	Flywheel (w/ring gear)
	650815	Washer, Belleville
93	8116	Nut, Hex


Dof #	Part Number	Ot /	Description
		Qıy	Description
	35135		Solid State Assy.
101	27276		Cover, Spark plug
102	650872		Stud, Solid state mounting
103	650814		Screw, Torx T-15, 10-24 x 1"
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
100	23703		• • • • • • • • • • • • • • • • • • • •
			to crank.)
109	33245		Gear, Crankshaft
	35183		Wire, Ground
	34923A		* Gasket, Cylinder head
	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		
			Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
			•
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
120	6506044		Carou, E/16 19 v 2" (Llan an required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
133	650890		Washer, Internal Lock
	30747		Clip, Spark plug shorting
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27881		Spring, Valve
151	32581		Cap, Lower valve spring
169	27896A		* Gasket, Breather
170	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
			·
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
184	33263		* Gasket, Carburetor
185	34707		Pipe, Intake
207	33878		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
			· · · · · · · · · · · · · · · · · · ·
	33269A		Cover, Air cleaner
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4"
262	29747B		Screw, 5/16-24 x 21/32"
265	33272B		Cover, Cylinder head
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
201	33013		Cover, Starter bubble


Ref #	Part Number (Oty Description
282	650760	Screw, 8-32 x 7/16"
285	32125	Cup, Starter
	35446	Screen, Starter
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
		•
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	01210	as required) (1.5" I.D.)
		, , ,
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Oil filler
310	31297	Dipstick (Incl. 307)
310B	35941	Dipstick (Incl. 306)
311	27625	Oil Fill Plug (Incl. 312)
312	29673	* Gasket, Oil filler plug
	34246	Clip, Ground wire
	35392	Plug, Starter
	31291	Plug, Cover
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34346	Decal, Instruction
	35274	Decal, Instruction
	631021	
		Inlet Needle, Seat & Clip Assy.
300	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590633	Rewind Starter (Refer to Division 5, Section C, page 30 for
		breakdown or Fiche 18B, Grid G-1)
400	000700	•
	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional

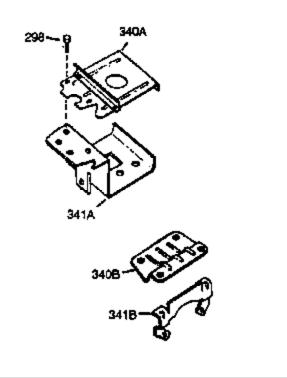


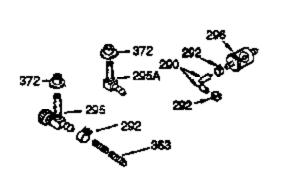


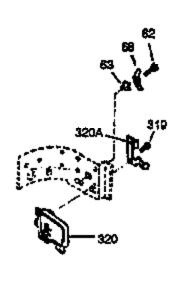


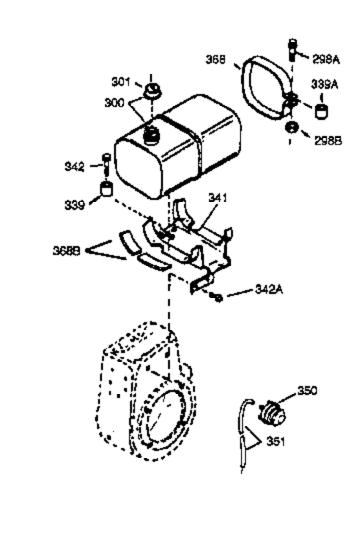

 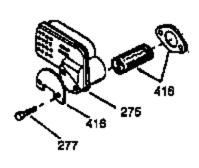


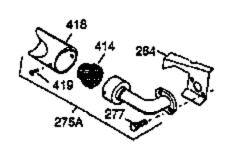




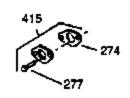

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171			I.D.)
0014			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201Λ	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722	000 <u>2</u> 1		Manior Optional

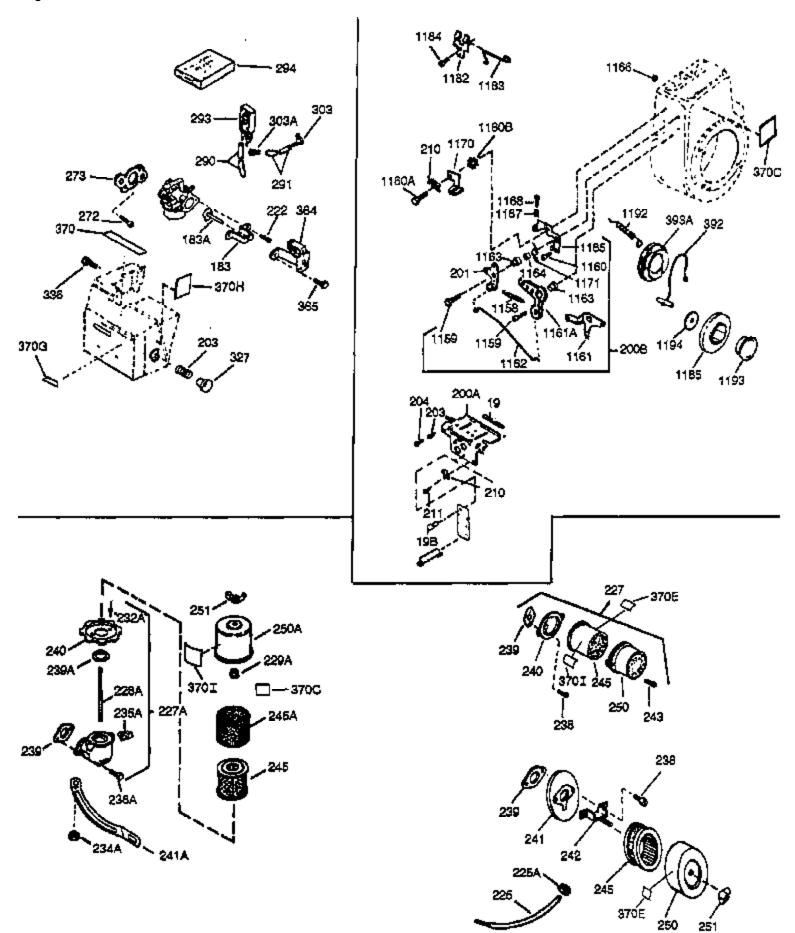

Rof #	Part Number	Otv	Description
	30322	ωιy	Nut & Lockwasher, 8-32
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
238	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		·
			Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	25704		Fuel Dump Beneix Kit NOTE, 24205 and 22745 (MID) number
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00 17 1	0.2.0		as required) (1.5" I.D.)
			• • • • • • • • • • • • • • • • • • • •
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
310B	35941		Dipstick (Incl. 306)
327	35392		Plug, Starter
338A	31291		Plug, Cover
370	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
1100	00010		1145 & 30100117100y.

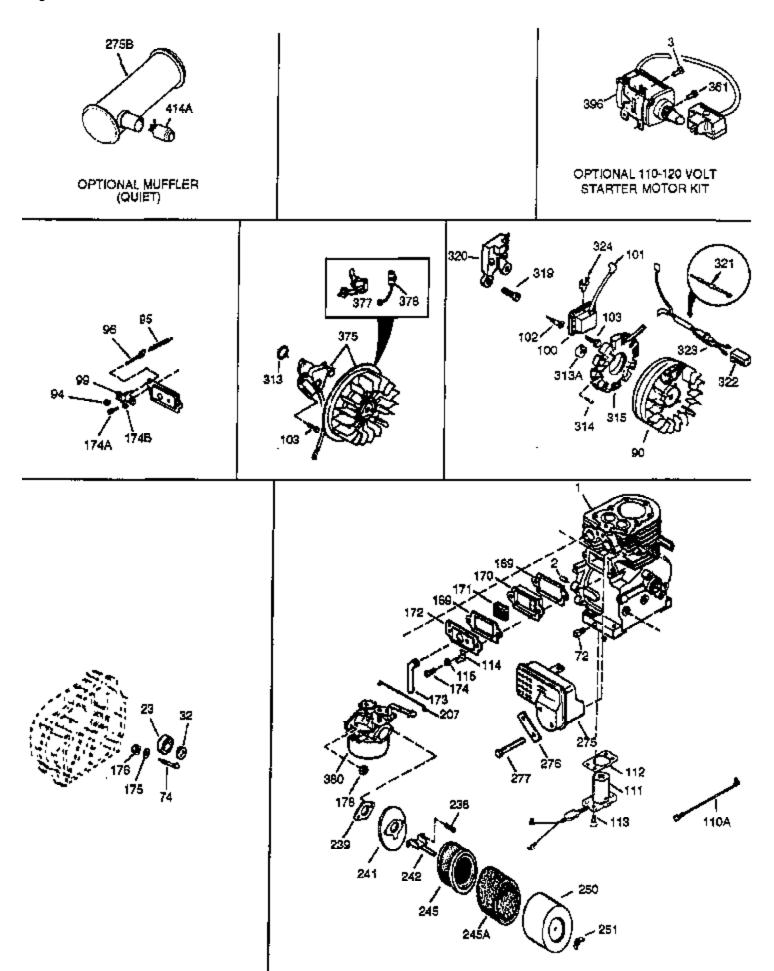

Ref #	Part Number Qty	Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	611091	Flywheel (w/ring gear)
	33450	Lock Nut, 10-32
	30886A	Spring, Governor bolt
	30845A	Bolt, Governor adjusting
	35135	Solid State Assy.
	27276	Cover, Spark plug
	650872	
	650814	Stud, Solid state mounting
		Screw, Torx T-15, 10-24 x 1" Screw, E/16, 18 x 1, 2/4 (Lips on require of)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
241	33266	Bracket, Air cleaner
242	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
070	05744	• ,
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
30171	30002	required) (1.5" I.D.)
		1 , (,
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 /	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	35941	Dipstick (Incl. 306)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
<i>∆</i> 21	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
722	000 <u>L</u> T	mainor Optional