




Ref #	Part Number	Qtv	Description
	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	650494		Screw, 6-40 x 5/16"
	30700		
			Yoke, Governor
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	33454		Governor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
20	35319		Seal, Oil
25	35256A		Blower Housing Baffle (With electric starter knockout) (Use
			as required)
0.5	05000		. ,
	35326		Baffle, Blower housing
25	29536		Blower Housing Baffle (Without electric starter knockout)
			(Use as required)
26	650561		Screw, 1/4-20 x 5/8"
	35372A		Crankshaft (Incl. 108 & 109)
	29826		
			Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
40	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A		Piston, Pin & Ring Set (.010" OS)
40	34862A		Piston, Pin & Ring Set (.020" OS)
41	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
	34867A		Ring Set (.010" OS)
	34868A		Ring Set (.020" OS)
	27888		Ring, Piston Pin retaining
	35373A		•
			Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908 650883		Bolt, Connecting rod
	650882		Connecting Rod Bolt (2 pcs. on early Specs.)
	34034		Lifter, Valve
	35374		Dipper, Oil
	35375		Camshaft (MCR)
	33273A		Extension, Blower housing
	650802		Screw, 1/4-20 x 5/8"
	650128		Screw, 10-24 x 1/2"
69	35262		* Gasket, Flange
	35376		Cover, Cylinder (Incl. 71, 75 & 80)
71	35377		Bushing, Crankshaft
72	27642		Plug, Oil drain
75	35319		Seal, Oil
80	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
			• • • • • • • • • • • • • • • • • • • •
	650832		Screw, 1/4-20 x 1-11/16" (Use as required)
	32589		Key, Flywheel
	611090		Flywheel
	650880		Washer, Lock
	650881		Nut, 5/8-18
100	35135		Solid State Assy.


Rof #	Part Number Qty	Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	29783	
100	29765	Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
		to crank.)
	33245	Gear, Crankshaft
110	35187	Wire, Ground
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
125	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
126	34035	Intake Valve (Std.) (Incl. 151)
126	34036	Intake Valve (1/32" OS) (Incl. 151)
127	650691	Washer (Do not use with No. 6021A scr ew.)
128	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
120	650711	Sorow 5/16 19 v 1 5/9 " (Lleo ac required) (Can use 6021)
130	030711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
		but discard 00009 i washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
133	650890	Washer, Internal Lock
135	33636	Resistor Spark Plug
139	33369	Bracket, Governor gear
140	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
203	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
206	610973	Terminal Assy.
207	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A		Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
		•


Ref #	Part Number Qt	/ Description
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	
		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	35287	Cup, Starter
	35446	Screen, Starter
	29752	Nut, 1/4-28
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705	Fuel Line (Braided 16")(40cm)(As required)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
		·
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00 17 1	55552	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301Δ	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	35554	Oil Fill Tube
	29673	* Gasket, Oil filler
	35941	Dipstick (Incl. 306)
	31297	Dipstick (Incl. 307)
	27625	Oil Fill Plug (Incl. 312)
	29673	* Gasket, Oil filler plug
	29443	Clip, Fuel line
	35392	Plug, Starter
	31291	Plug, Cover
340	34154	Plate, Upper fuel tank mtg.
341	34155	Bracket, Lower fuel tank mtg.
342	650561	Screw, 1/4-20 x 5/8"
370A	34686	Decal, Name
370	34346	Decal, Instruction
	35274	Decal, Instruction
	35344	Decal, Control
	631021	Inlet Needle, Seat & Clip Assy.
	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
500		page A4-4 for breakdown or Fiche 18B, Grid D-3)
		,
390	590633	Rewind Starter (Refer to Division 5, Section C, page 30 for
		breakdown or Fiche 18B, Grid G-1)
<i>/</i> /∩∩	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730225	
		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional

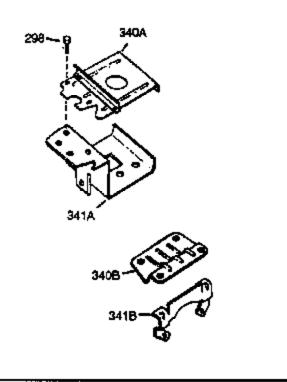


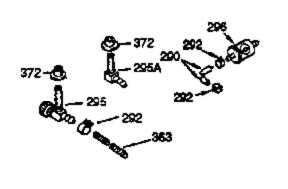


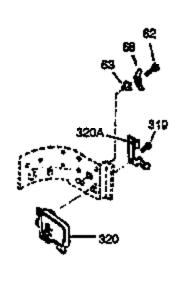


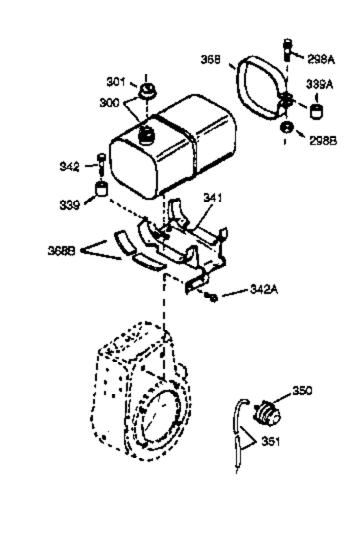

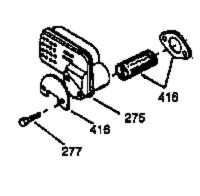 


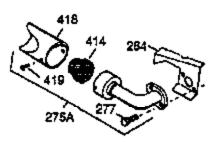

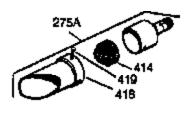


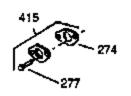

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201 /	33032		·
30 IA	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
			required) (1.5 1.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301Δ	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•

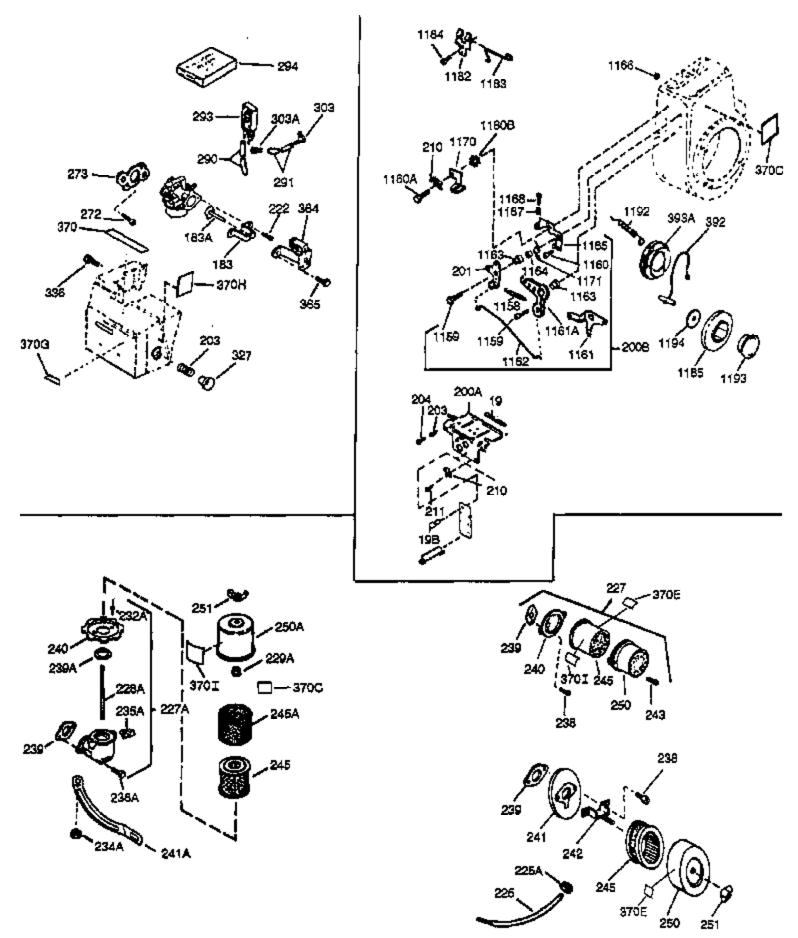

Ref #	Part Number	Qtv	Description
	30322	<u> </u>	Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
238	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
200	00710		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
004	05704		• •
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
3∩1∆	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00171	00002		required) (1.5" I.D.)
			. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	35392		Plug, Starter
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
1185	33816		Hub & Screen Assy.

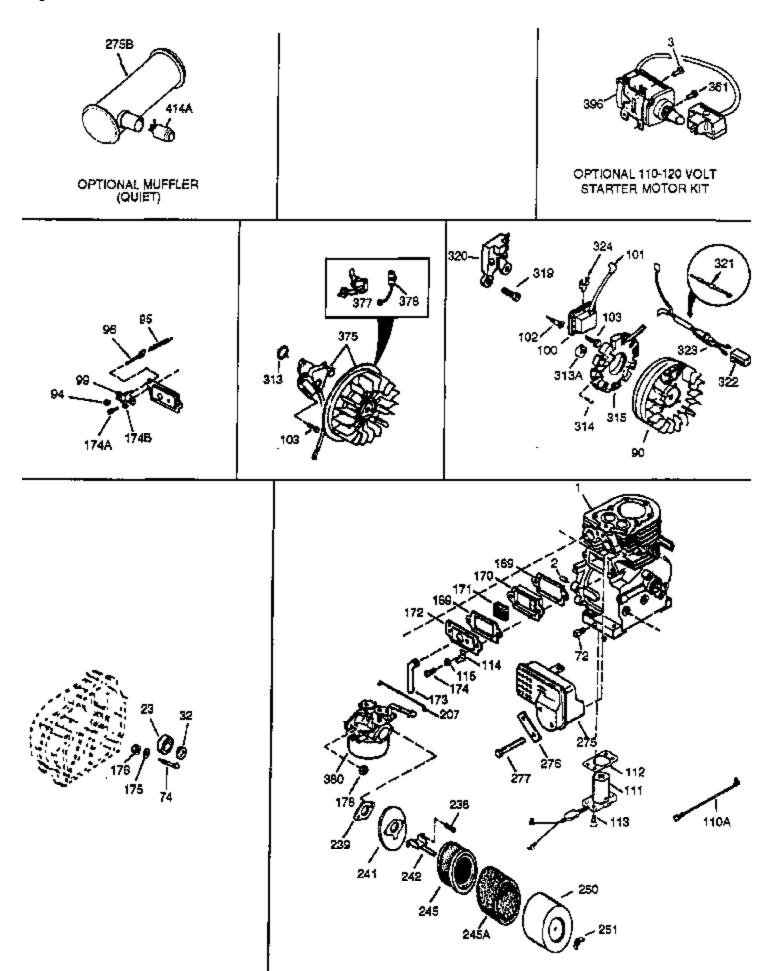

Dof #	Part Number	Otv	Description
	35371	Qly	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	30322		Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	27642		Plug, Oil drain
	611090		Flywheel
	35135		Solid State Assy.
	650872		Stud, Solid state mounting
	650814		•
	650727		Screw, Torx T-15, 10-24 x 1" Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		. ,
			Screw, 5/16-18 x 5/8" Screw, 1/4 20 x 1/2" (Lipa on required.)
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738 27306A		Screw, 1/4-20 x 5/8 (Use as required)
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	33878		Link, Governor lever-to-throttle
222A	0000		Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	33280A		Muffler
275B	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
276	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00 17 (			I.D.)
			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
<b>35</b> t	0.2.0		as required) (1.5" I.D.)
2014	0=0==		
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	31291		Plug, Cover
	30547A		Breaker Points (Use with Std. point i gn.)
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
122			