

	Part Number Qt	
1	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	35319	
		Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
20		as required)
	35326	Baffle, Blower housing
26	650561	Screw, 1/4-20 x 5/8"
30	35389A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
		Diston, $P$ in $Q$ Ding Cat (010) (00)
	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
42	34868A	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
64	650802	Screw, 1/4-20 x 5/8"
65	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	
		Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
75	33625	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
90	611090	Flywheel
	650880	Washer, Lock
	650881	Nut, 5/8-18
U 4	00001	
	25125	Solid State Apon
100	35135 650872	Solid State Assy. Stud, Solid state mounting

		ty Description
103	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	35187	Wire, Ground
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	
		Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, $1/4-20 \times 5/8$ (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	
		Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	
		* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	610973	Terminal Assy.
	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
215	32410	Knob, Speed control
222A		Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	36243	Blower Housing (Incl. 340)
	650788 20747P	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
070	31588	Plate, Muffler locking
	35741	Plate, Muffler locking

## HM100-159145G Engine Parts List #1

		Qty Description
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013	Cover, Starter bubble
282	650760	Screw, 8-32 x 7/16"
285	35287	Cup, Starter
286	35446	Screen, Starter
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
3014	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
30 IA	33032	required) (1.5" I.D.)
		required) (1.5 1.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 4	25255	Fuel Cap (Dad Plactic)(1.75"   D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31297	Dipstick (Incl. 307)
	35941	Dipstick (Incl. 306)
	27625	Oil Fill Plug (Incl. 312)
	29673	* Gasket, Oil filler plug
	29443	Clip, Fuel line
	35392	Plug, Starter
	31291	Plug, Cover
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
370A	34686	Decal, Name
370	34346	Decal, Instruction
370	35274	Decal, Instruction
379	631021	Inlet Needle, Seat & Clip Assy.
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
000	E00633	
390	590633	Rewind Starter (Refer to Division 5, Section C, page 30 for
		breakdown or Fiche 18B, Grid G-1)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

298-

Ø

341A

340B

341B

372

292

372-👧


0


200 95A


363

292


340A

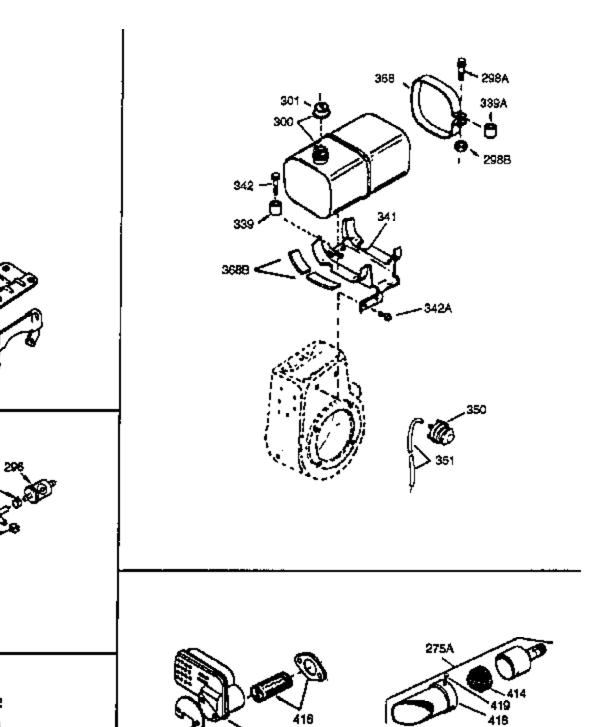

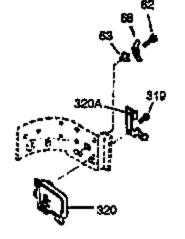

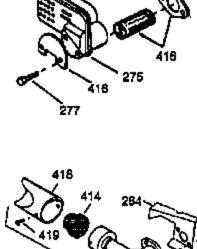


275A

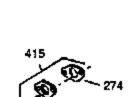




	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
•••			I.D.)
0044	00000		-
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
004 4	25255		
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
310B			Dipstick (Incl. 306)
338A			Plug, Cover Brocket Lower fuel tools mtg
	34155		Bracket, Lower fuel tank mtg.
	650561 33323		Screw, 1/4-20 x 5/8"
			Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578 720226		Screw, 8-18 x 3/8" (use as required)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422			Muffler Optional

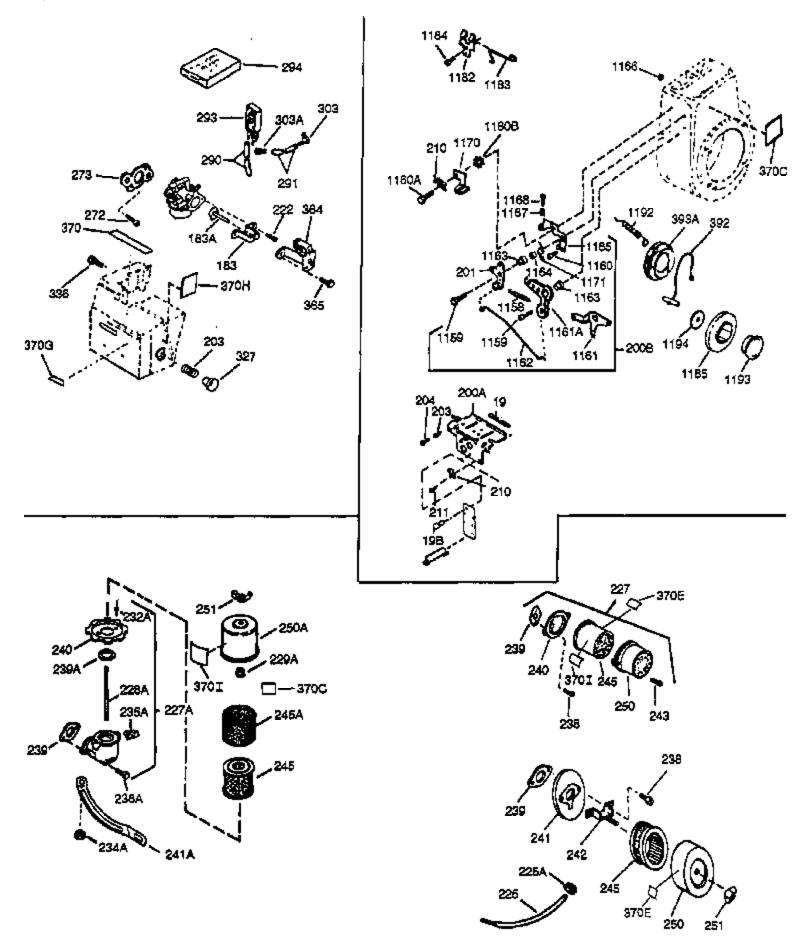

	Part Number	Qty Description
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
2002 222A	100102	Pop Rivet (Can be purchased locally)
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
	100121	required)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
241	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
00/1		
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
••••		as required) (1.5" I.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	29673	* Gasket, Oil filler
	35941	Dipstick (Incl. 306)
327	35392	Plug, Starter
338A	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
7/ 1		Muffler Optional
	35824	
422	35824 30312	
422 1159	30312	Screw, 10-32 x 1/2"
422 1159 1160	30312 28820	Screw, 10-32 x 1/2" Screw, 10-32 x 1/2"
422 1159 1160 1160	30312	Screw, 10-32 x 1/2"

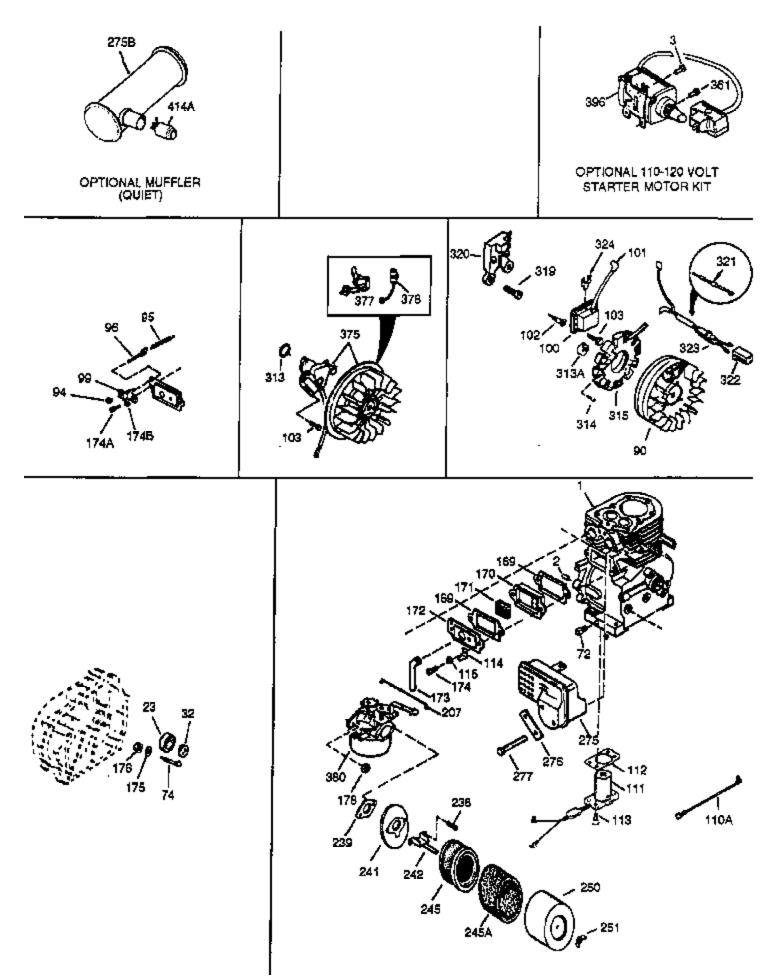

		Description
1	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
23	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
102	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, $1/4-20 \times 1/2$ " (Use as required )
	650738	
		Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33280A	Muffler
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
	0.4 <b>5</b> 00	
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
0017		I.D.)
		1.0.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
~~ <i>·</i> ··	05055	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Oil filler
310B	35941	Dipstick (Incl. 306)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	
		Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)

Ref #	Part Number	Qty	Description
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional