



	Part Number C 35371	Qty Description Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	35319	Seal, Oil
	29536	
20	23000	Blower Housing Baffle (Without electric starter knockout) (Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use as required)
	35326	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	35389A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908	Bolt, Connecting rod
47	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
70	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	35377	Bushing, Crankshaft
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	050000	
92	650880	Washer, Lock
92 93	650880 650881 35135	Washer, Lock Nut, 5/8-18

	Part Number		Description
102	650872	:	Stud, Solid state mounting
103	650814	:	Screw, Torx T-15, 10-24 x 1"
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
109	33245		Gear, Crankshaft
	35187		Wire, Ground
	34923A		* Gasket, Cylinder head
	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer (Do not use with No. 6021A scr ew.)
128	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No
100	002.11		650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
130	650694A	:	Screw, 5/16-18 x 2" (Use as required)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
172	28425		Cover, Breather
173	35350		Tube, Breather
174	650128	:	Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	33263		* Gasket, Carburetor
	34707		Pipe, Intake
	34661		Link, Governor lever
	34677		Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
	33878		Link, Governor lever-to-throttle
	650821		Screw, 10-32 x 1/2"
	32410		Knob, Speed control
222A			Pop Rivet (Can be purchased locally)
223	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
	33269A		Cover, Air cleaner
	36243		Blower Housing (Incl. 340)
200			
	650788		Screw 5/16-18 x 3/4"
261	650788 29747B		Screw, 5/16-18 x 3/4" Screw, 5/16-24 x 21/32"
261 262	650788 29747B 33272B		Screw, 5/16-18 x 3/4" Screw, 5/16-24 x 21/32" Cover, Cylinder head


	Part Number	Qty	Description
	33280A		Muffler
276	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
	29752		
			Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
0044	4404.445		
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
001/1	00002		required) (1.5" I.D.)
			. , . ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	35941		Dipstick (Incl. 306)
	27625		Oil Fill Plug (Incl. 312)
	29673		* Gasket, Oil filler plug
	29443		Clip, Fuel line
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
370	34346		Decal, Instruction
370	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
500			page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
100	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

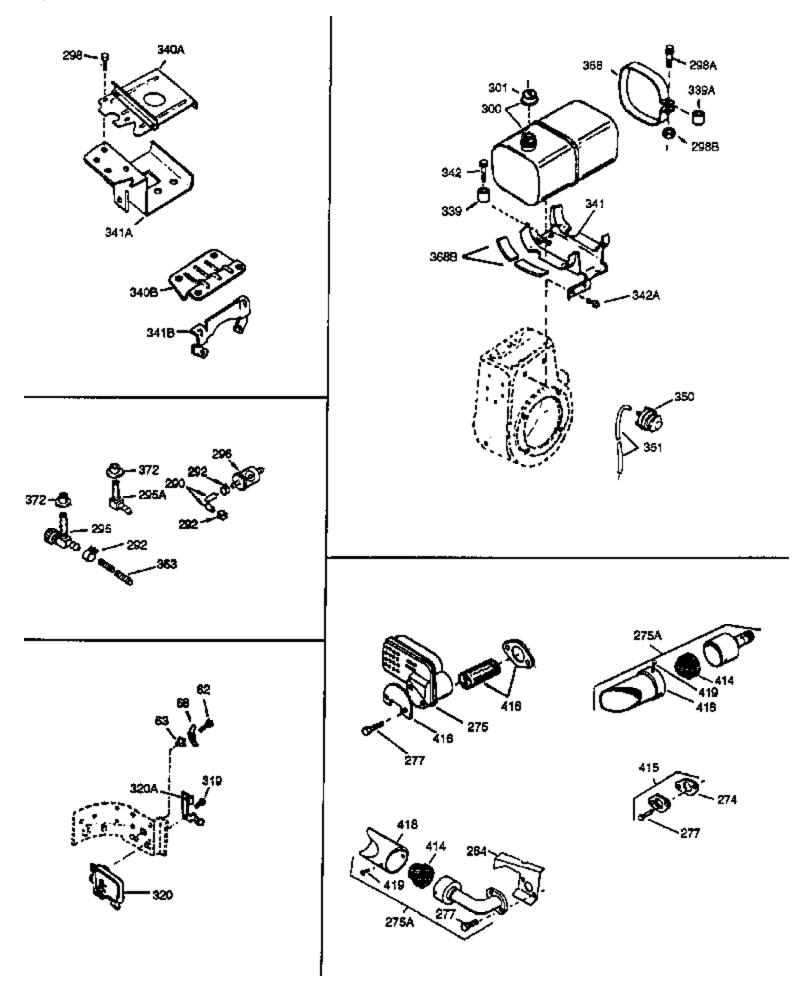

Ref # Part Number	QIY	Description
37A 30322		Nut & Lockwasher, 8-32
64 650802		Screw, 1/4-20 x 5/8"
129 650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A 650713		Screw, 5/16-18 x 5/8"
131 650737		Screw, 1/4-20 x 1/2" (Use as required)
131 650738		Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
250B 33269A		Cover, Air cleaner
274 35865		Gasket, Exhaust
275 33280A		Muffler
277 650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277 651002		Screw, 5/16-18 x 4-1/4" (Use as required)
290 29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290 30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292 26460		Fuel Line Clamp (Use as required)
298 650665		Screw, 1/4-15 x 7/8"
300 34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A 410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301A 33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A 34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
0011101210		as required) (1.5" I.D.)
00/1 07077		
301A 35355		Fuel Cap (Red Plastic)(1.75" I.D.)
306 29673		* Gasket, Oil filler
310B 35941		Dipstick (Incl. 306)
338A 31291		Plug, Cover
341 34155		Bracket, Lower fuel tank mtg.
342 650561		Screw, 1/4-20 x 5/8"
414 33323		Opt.Muffler Screen (Mini-Bike applica tion)
415 730130		Kit, Exhaust adapter (Incl. 274 & 277)
418 33700		Cover & Tube, Muffler (use as require d)
419 650578		Screw, 8-18 x 3/8" (use as required)
421 730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824		Muffler Optional

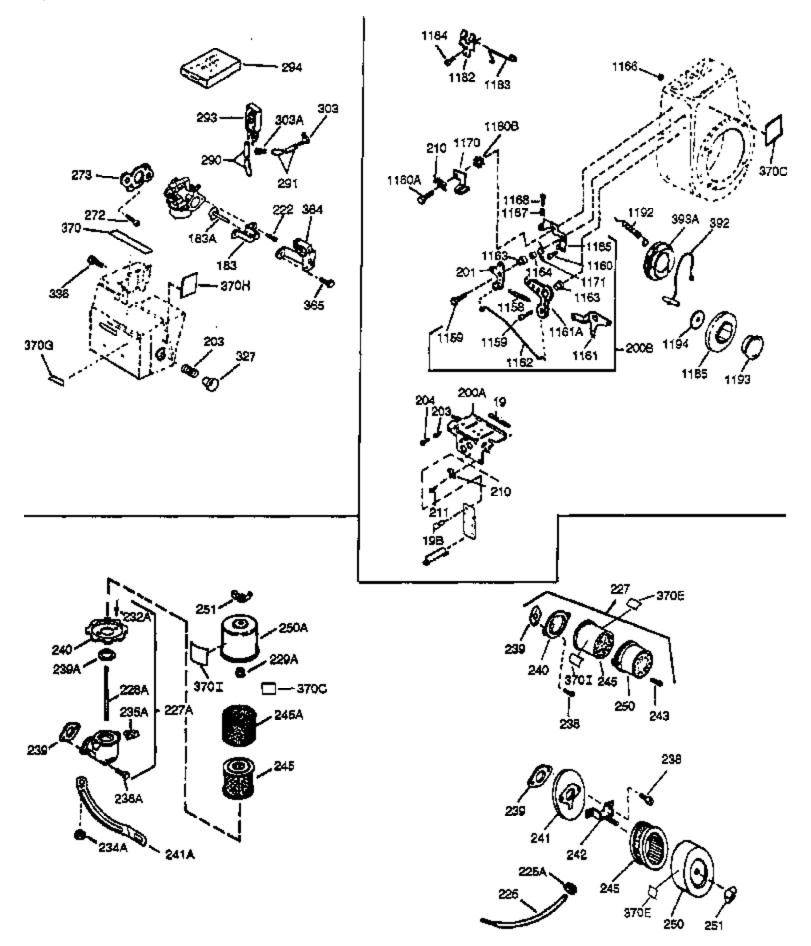

Ref #	Part Number	Qty Description
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
222A	700407	Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
238	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
00.4	05704	
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00 // (I.D.)
		,
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00 // (01210	as required) (1.5" I.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	29673	* Gasket, Oil filler
310B	35941	Dipstick (Incl. 306)
327	35392	Plug, Starter
	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Loolavochor
1160	33816	Lockwasher Hub & Screen Assy.

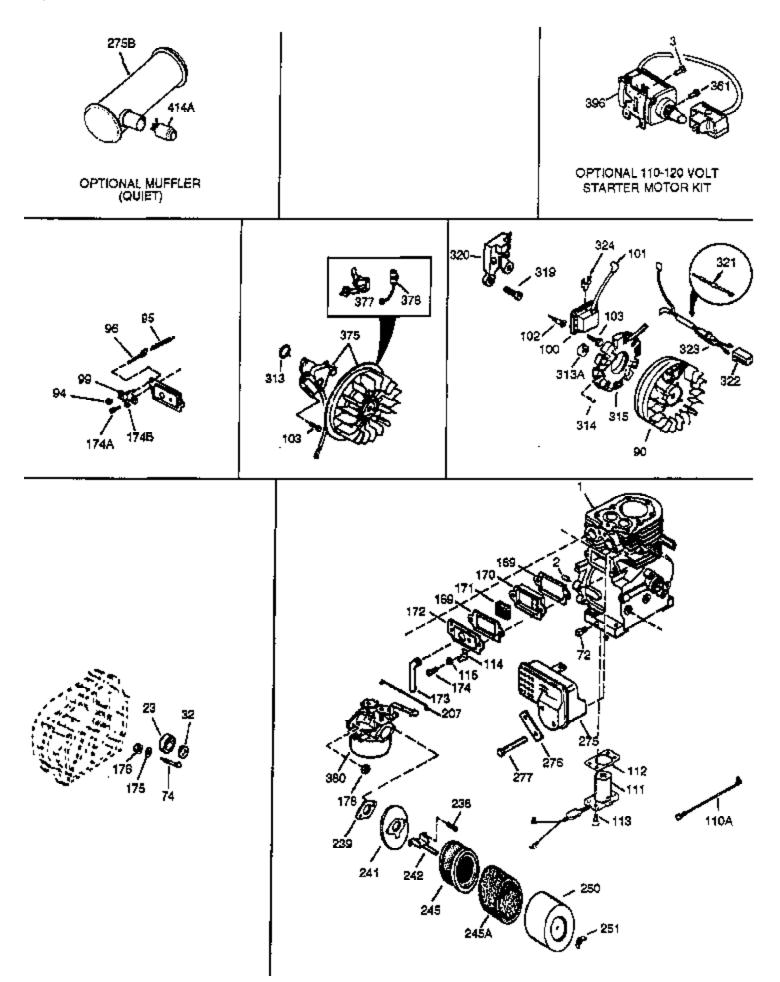

		Description
1	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
23	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
102	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, $1/4-20 \times 1/2$ " (Use as required)
	650738	
		Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33280A	Muffler
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
	0.4 5 00	
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
0017		I.D.)
		1.0.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
~~ <i>·</i> ··	05055	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Oil filler
310B	35941	Dipstick (Incl. 306)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	
		Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)

Ref #	Part Number	Qty	Description
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional