




Dof #	Dort Number	V. Deparintion
		y Description Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	35371	
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
23	33230A	as required)
		as required)
	35326	Baffle, Blower housing
26	650561	Screw, 1/4-20 x 5/8"
30	35420A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (3.010" OS)
	34862A	
		Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
42	34868A	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908	Bolt, Connecting rod
47	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
		Bushing, Crankshaft
	35377	<b>0</b> ,
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
86	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
102	650872	Stud, Solid state mounting


Ref #	Part Number	Qtv	Description
	650814	,	Screw, Torx T-15, 10-24 x 1"
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
100	20700		to crank.)
			to crain.)
109	33245		Gear, Crankshaft
	34923A		* Gasket, Cylinder head
	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
128	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
			,
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
400	CEOCO4A		Coroux E/4C 10 x 2" (Llos on rocalists al)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
133	650890		Washer, Internal Lock
134	30747		Clip, Spark plug shorting
135	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		
			Seal Assy., Intake valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
170	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Breather
173	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	33263		* Gasket, Carburetor
	34707		·
			Pipe, Intake
	34661		Link, Governor lever
	34677		Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
207	33878		Link, Governor lever-to-throttle
209	650821		Screw, 10-32 x 1/2"
215	32410		Knob, Speed control
	28820		Screw, 10-32 x 1/2"
222A			Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
			· ·
	33269A		Cover, Air cleaner
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
265	33272B		Cover, Cylinder head
275	33280A		Muffler


	Part Number	Qty	Description
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446 20752		Screen, Starter
	29752 29774		Nut, 1/4-28  First Line (Project & 1/4")/24 am)/As a squired)
	30962		Fuel Line (Braided 8-1/4")(21cm)(As required)
	30705		Fuel Line (Braided 32")(80cm)(As requ ired) Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	5+150A		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
			, ,
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301Δ	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	3-210		as required) (1.5" I.D.)
			. , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	35554		Oil Fill Tube
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34686		Decal, Name
	34346		Decal, Instruction
	35274 33962		Decal, Instruction Decal, Control
	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	032242		page A4-4 for breakdown or Fiche 18B, Grid D-3)
			,
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•

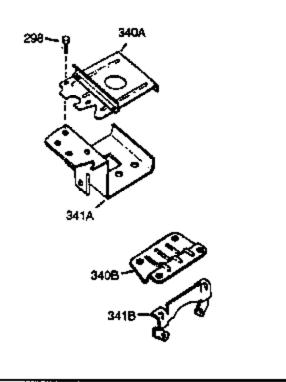


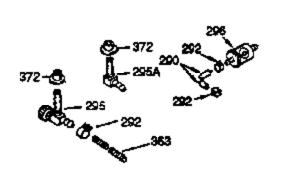


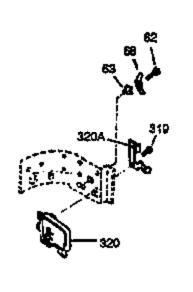


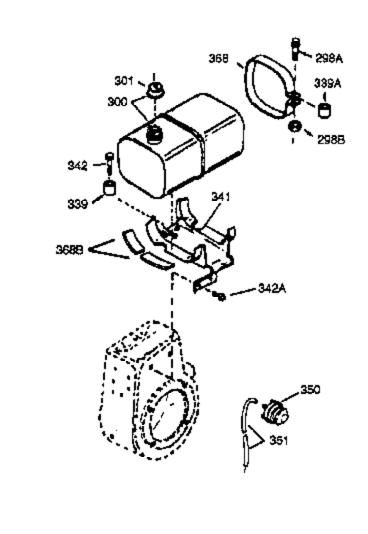

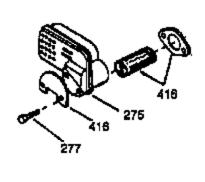 


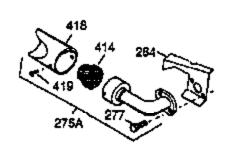

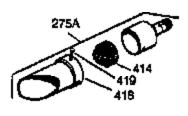




Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
004 A	20000		
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 /	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
122			

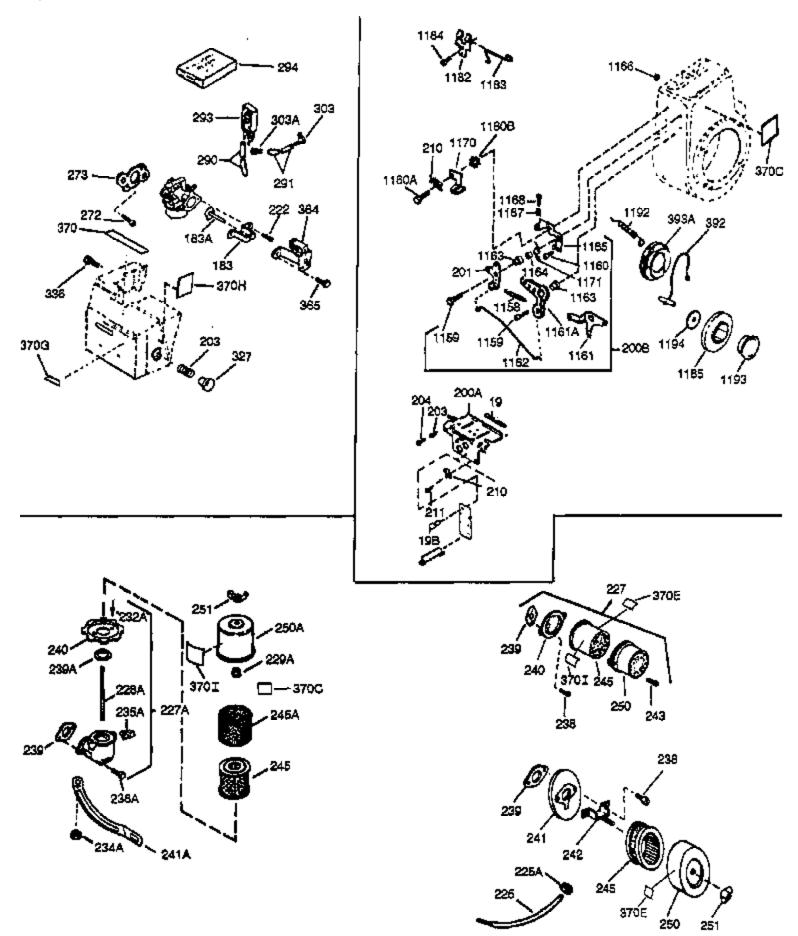

Ref #	Part Number C	Oty Description
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	
		Screw, 5-40 x 7/16"
	28820	Screw, 10-32 x 1/2"
222A	700407	Pop Rivet (Can be purchased locally)
221	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
238	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
20/1	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
204	30731	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
3∩1∆	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	01210	as required) (1.5" I.D.)
		, , ,
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958	Fitting, Fuel
306	29673	* Gasket, Oil filler
327	35392	Plug, Starter
	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
1185	33816	Hub & Screen Assy.

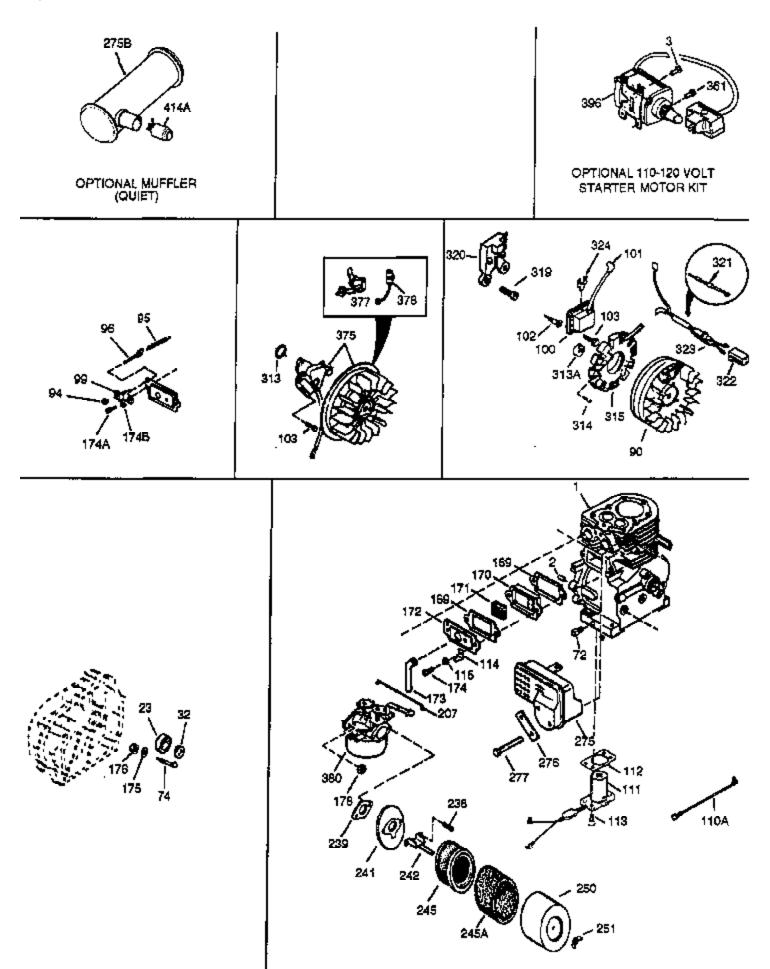

Ref #	Part Number Qty	Description
1	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	
		Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	
		Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
176	650580	Nut, Lock
178	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
		,
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	222004	Muffler
	33280A	
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
204 A	22022	Fire Con (Ded Blootie) (Court Decistors Levy Brofile) (Llee ee
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	0 <del>1</del> 210	as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A 622242	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)

Ref # Part Number	Qty Description
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional