




Def !!	Deat Names on	. Description
		Description Odiodor (Chinas)(2.5/46 \tank2.2.0.8.79)
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30700	Yoke, Governor
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
05	05000	• ,
	35326	Baffle, Blower housing
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
26	650561	Screw, 1/4-20 x 5/8"
	35425A	Crankshaft
	29826	Screw, 10-32 x 3/4"
		•
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908 650993	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
70	35376	Cover, Cylinder (Incl. 71, 75 & 80)
71	35377	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	35319	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
102	650872	Stud, Solid state mounting


Ref #	Part Number	Otv	Description
	650814	αιy	Screw, Torx T-15, 10-24 x 1"
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
100	29703		
			to crank.)
109	33245		Gear, Crankshaft
	34923A		* Gasket, Cylinder head
	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100	000711		but discard 650691 washer.)
			but discard 03009 i washer.)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	30747		Clip, Spark plug shorting
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
173	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	33263		* Gasket, Carburetor
	33877		Pipe, Intake
	33372		Link, Governor lever-to-bellcrank
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	33878		Link, Governor lever-to-throttle
222A	000.0		Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
	33269A		Cover, Air cleaner
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	33280A		Muffler
	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
			, , , , , , , , , , , , , , , , , , , ,


Ref #	Part Number	Qty	Description
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285	35287		Cup, Starter
286	35446		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
3∩1∆	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101410		I.D.)
			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
204.4	05055		. , , , , , , , , , , , , , , , , , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	35554		Oil Fill Tube
	35499		"O" Ring
	36205		Dipstick Plus Starter
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
360	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	750226 35824		Muffler Optional
422	JJ024		

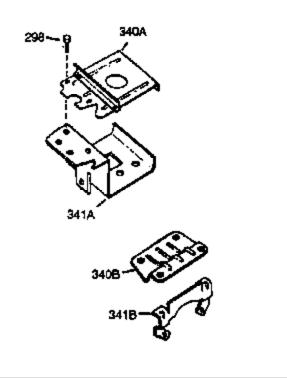


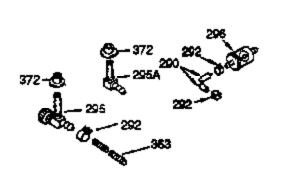


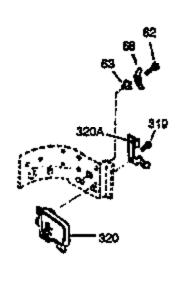


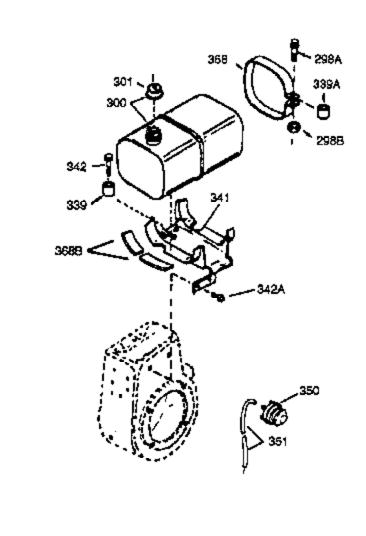

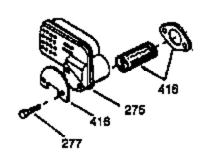  


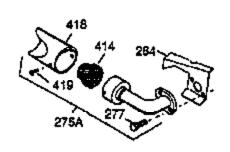






Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
33 17 1			I.D.)
2214	0000		·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 /	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722			Manior Optional

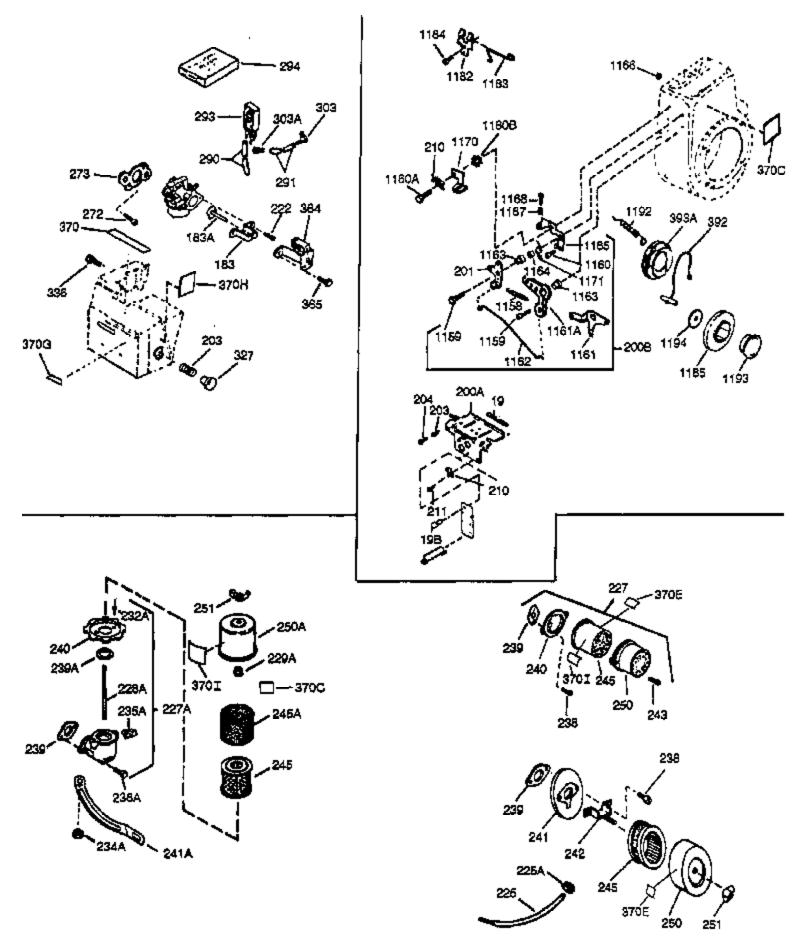

Rof #	Part Number	Otv	Description
	30322	ωιy	Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
204 222A	000049		Pop Rivet (Can be purchased locally)
	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
221	130121		required)
238	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33269A		·
	650513		Cover, Air cleaner
	29774		Nut, Wing 1/4-20 Fuel Line (Proided 8 1/4")(21cm)(Ac required)
			Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962 30705		Fuel Line (Braided 32")(80cm)(As required)
			Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
33 17 1			I.D.)
2214	0000		,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958		Fitting, Fuel
327	35392		Plug, Starter
338A	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
. 100			J.

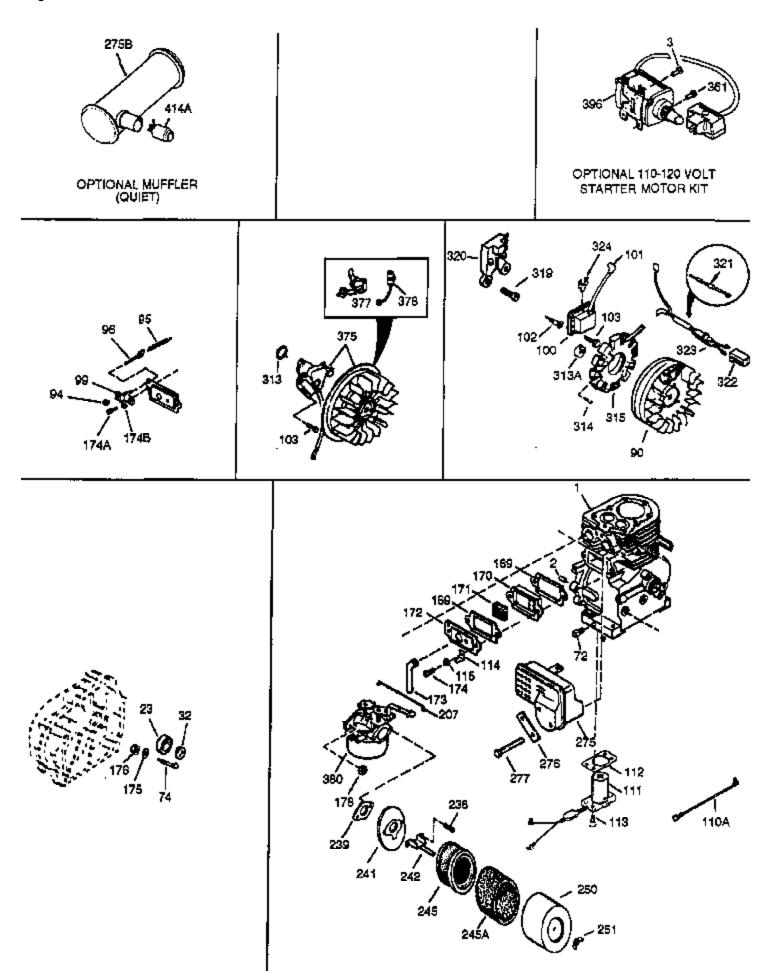

	Part Number	Qty	Description
1	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652		Pin, Dowel
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
	27642		Plug, Oil drain
	611090		Flywheel
	33450		Lock Nut, 10-32
	30886A		
			Spring, Governor bolt
	30845A		Bolt, Governor adjusting
	35135		Solid State Assy.
	27276		Cover, Spark plug
	650872		Stud, Solid state mounting
103	650814		Screw, Torx T-15, 10-24 x 1"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	27896A		* Gasket, Breather
	28423		•
			Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut & Lockwasher, 1/4-28
207	33878		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
			·
	33267		Bracket, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
275B	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
275	222001		Mufflox
	33280A		Muffler River No. ((Leaders) in the second
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
201.0	34210		Fuel Can (Ped Plactic) (Spurt Pedictant High Profile) (Lice
30 IA	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3014	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	31291		
			Plug, Cover
	30547A		Breaker Points (Use with Std. point i gn.)
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
A21	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional