




D-("	De d Marilana	Describer
		y Description Odinator (Cl. lines)(2.5 (4.01))(had 2.2.0.8.72)
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
OF.	252564	Player Lauring Poffle (Mith alactric starter knocksut) (Llas
20	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25	35326	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	35420A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	
		Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	35776	Piston, Pin & Ring Set (Std.)(3-3/16")
	35777	Piston, Pin & Ring Set (.010" OS)
	35778	Piston, Pin & Ring Set (.020" OS)
41	35773	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	35774	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	35775	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	35779	Ring Set (Std.) (3-5/16" Bore)
42	35780	Ring Set (.010" OS)
	35781	Ring Set (.020" OS)
	35772	Ring, Piston Pin retaining
	35681	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	
		Lifter, Valve
	35374 35375	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	35377	Bushing, Crankshaft
	27642	Plug, Oil drain
72	9556	Plug, Pipe
75	33625	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611091	Flywheel (w/ring gear)
	35135	Solid State Assy.
101	610118	Cover, Spark plug


		ty Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	35187	Wire, Ground
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (3.0.3) (Incl. 151) Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	• • •
	33636	Washer, Internal Lock
		Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
184	33263	* Gasket, Carburetor
185	34707	Pipe, Intake
186	34661	Link, Governor lever
200	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
206	610973	Terminal Assy.
207	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
200		Jovor, Jylli aci Ticaci


	Part Number	Qty	Description
	33280A		Muffler
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
285	35287		Cup, Starter
286	35446		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301 /	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101 44 5		I.D.)
			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
55 t	- · · · · ·		as required) (1.5" I.D.)
0044	05055		
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	35554		Oil Fill Tube
	35499		"O" Ring
	36205		Dipstick
	29443		Clip, Fuel line
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	35344		Decal, Control
	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
300			breakdown or Fiche 18B, Grid G-1)
	20272		,
	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

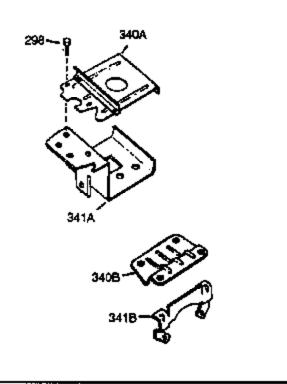

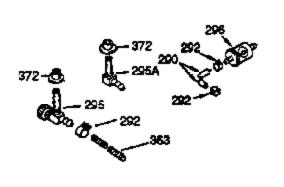


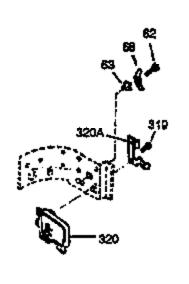

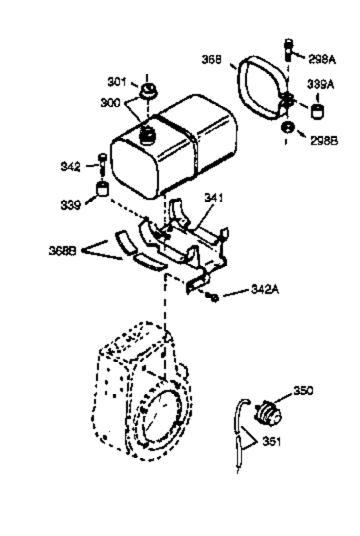


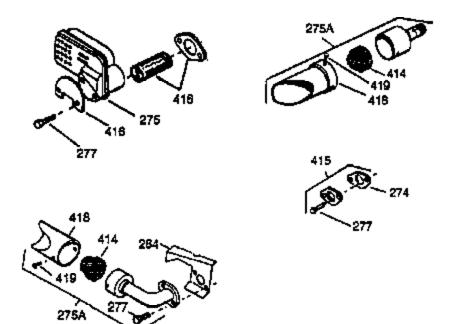

Ref #	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00 17 (1101115		I.D.)
2214	0000		·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201Λ	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
122			

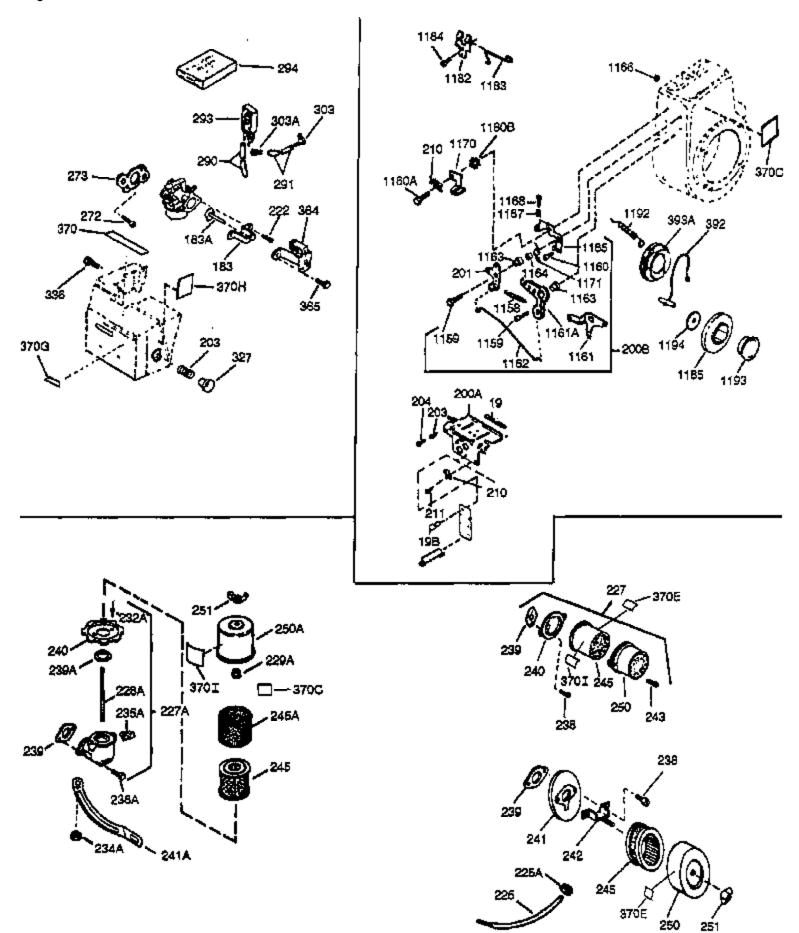

Ref #	Part Number	Qty	Description
64 129 131 131 131A 200B 203 204 222A	30322 650802 650727 650737 650738 650713 730152 31342 650549		Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
239 241 242 245 250B 251 290 290 291	28820 27272A 33266 33267 33268 33269A 650513 29774 30962 30705 33715		Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
303 327 338A 370 370 421 422 1159 1160 1160	35355 32958 35392 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel Plug, Starter Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

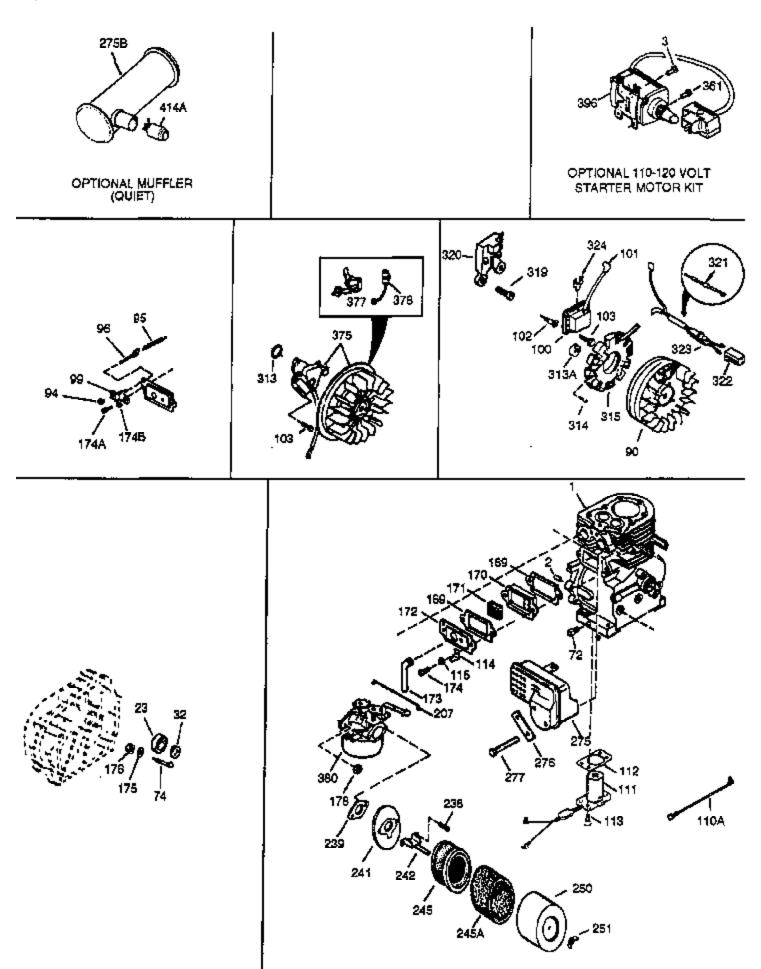

Ref # Part Number	Oty I	Description
1 35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2 27652		Pin, Dowel
23 33627		Bearing, Ball
32 33628		Washer, Thrust
37A 30322		Nut & Lockwasher, 8-32
64 650802		Screw, 1/4-20 x 5/8"
72 27642	ı	Plug, Oil drain
72 9556		Plug, Pipe
74 31855	l	Retainer, Bearing
90 611091		Flywheel (w/ring gear)
100 35135		Solid State Assy.
101 610118		Cover, Spark plug
102 650872		Stud, Solid state mounting
103 650814		Screw, Torx T-15, 10-24 x 1"
129 650727		Screw, 5/16-18 x 1-3/4 (Use as required)
131 650737		Screw, 1/4-20 x 1/2" (Use as required)
131 650738		Screw, 1/4-20 x 5/8 (Use as required)
131A 650713 169 27896A		Screw, 5/16-18 x 5/8" * Gasket, Breather
170 28423		Body, Breather
171 28424		Element, Breather
172 28425		Cover, Breather
173 35350		Tube, Breather
174 650128		Screw, 10-24 x 1/2"
175 650778		Lockwasher
176 650580		Nut, Lock
178 29752		Nut & Lockwasher, 1/4-28
207 33878		Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238 28820		Screw, 10-32 x 1/2"
239 27272A	3	* Gasket, Air cleaner
241 33266	I	Bracket, Air cleaner
242 33267	I	Bracket, Air cleaner
245 33268		Element, Air cleaner
250B 33269A		Cover, Air cleaner
251 650513		Nut, Wing 1/4-20
275 33280A		Muffler
275B 391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
	ı	mufflercan be used on any model.)
276 31588	I	Plate, Muffler locking
276 35741	ı	Plate, Muffler locking
277 650729	;	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277 651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A 410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A 33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
33 II . 3333 <u>-</u>		required) (1.5" I.D.)
2044 24040		1 / (/
301A 34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
2017 35355		. , , ,
301A 35355 313A 33876		Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.)
338A 31291		Plug, Cover
377 30547A		Breaker Points (Use with Std. point i gn.)
380 632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
OOO OOLL TE		page A4-4 for breakdown or Fiche 18B, Grid D-3)
	ı	page The shake the of the top, one boy

Ref # Part Number	Qty Description
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional