




	B (N)	<b>B</b>
		Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
15A	30700	Yoke, Governor
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
	35256A	Blower Housing Baffle (With electric starter knockout) (Use
-		as required)
		• ,
	35326	Baffle, Blower housing
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
26	650561	Screw, 1/4-20 x 5/8"
	35441A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
40	35776	Piston, Pin & Ring Set (Std.)(3-3/16")
40	35777	Piston, Pin & Ring Set (.010" OS)
40	35778	Piston, Pin & Ring Set (.020" OS)
41	35773	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	35774	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	35775	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	35779	Ring Set (Std.) (3-5/16" Bore)
	35780	Ring Set (.010" OS)
	35781	Ring Set (.020" OS)
	35772	Ring, Piston Pin retaining
	35681	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	
		Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	35376	Cover, Cylinder (Incl. 71, 75 & 80)
71	35377	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	35319	Seal, Oil
80	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-3/16 (Ose as required) Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	35135	Solid State Assy.
	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"


Ref #	Part Number	Qtv	Description
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
119 120 125 125 126 126 127 128 129	33245 34923A 34030A 27878A 27880A 34035 34036 650691 650690 650727 6021A		Gear, Crankshaft  * Gasket, Cylinder head Head, Cylinder Exhaust Valve (Std.) (Incl. 151) Exhaust Valve (1/32" OS) (Incl. 151) Intake Valve (Std.) (Incl. 151) Intake Valve (1/32" OS) (Incl. 151) Washer (Do not use with No. 6021A scr ew.) Washer, Belleville (Use as required) Screw, 5/16-18 x 1-3/4 (Use as required, but do notuse No. 650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
131A 131 133 134 135 139 140 149A 150 151 169 170 171 172 173 174 178 182 184 185 203 204 206 207 222A 223 224 250B 260 261 262 265	650694A 650713 650737 650738 650890 30747 33636 33369 650836 35862 27881 32581 27896A 28423 28424 28425 35350 650128 29752 30088A 33263 33877 31342 650549 610973 33878 650378 27915A 33269A 33375D 650788 29747B 33272B 33280A		Screw, 5/16-18 x 2" (Use as required) Screw, 5/16-18 x 5/8" Screw, 1/4-20 x 1/2" (Use as required ) Screw, 1/4-20 x 5/8 (Use as required) Washer, Internal Lock Clip, Spark plug shorting Resistor Spark Plug Bracket, Governor gear Screw, 10-24 x 1/2" Seal Assy., Intake valve Spring, Valve Cap, Lower valve spring * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1" * Gasket, Carburetor Pipe, Intake Spring, Compression Screw, 5-40 x 7/16" Terminal Assy. Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, Torx T-30, 5/16-18 x 1-1/8" * Gasket, Intake pipe Cover, Air cleaner Blower Housing (For electric starter) Screw, 5/16-18 x 3/4"
276 276 277 277	31588 35741 650729 651002 33013		Plate, Muffler locking Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) Screw, 5/16-18 x 4-1/4" (Use as required) Cover, Starter bubble


Dof #	Dart Number	O+ /	Description
	Part Number 650760	ųιy	Description
			Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
_	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
204	25050		First Car (Pad Plantia) (4.75" LD.)
	35650		Fuel Cap (Red Plastic) (1.75" I.D.)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
310B	35941		Dipstick (Incl. 306)
311	27625		Oil Fill Plug (Incl. 312)
312	29673		* Gasket, Oil filler plug
327	35392		Plug, Starter
338A	31291		Plug, Cover
340	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
370A	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
000	OCE 12		page A4-4 for breakdown or Fiche 18B, Grid D-3)
			page 74 + 101 breakdown of Floric Tob, Olid b oj
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	33279G		* Casket Set (Incl. items marked *)
			* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

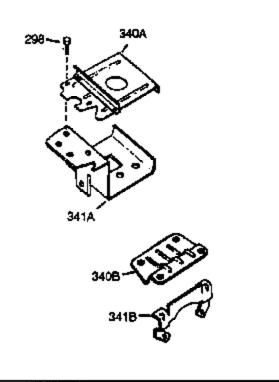


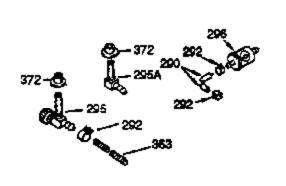


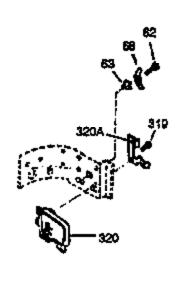


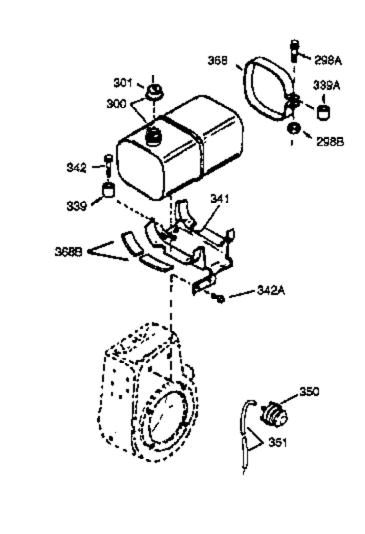

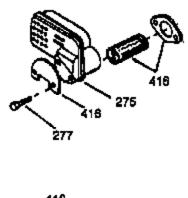  


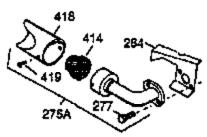






Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301	35650		Fuel Cap (Red Plastic) (1.75" I.D.)
	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101446		I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
306	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
, <u></u>			

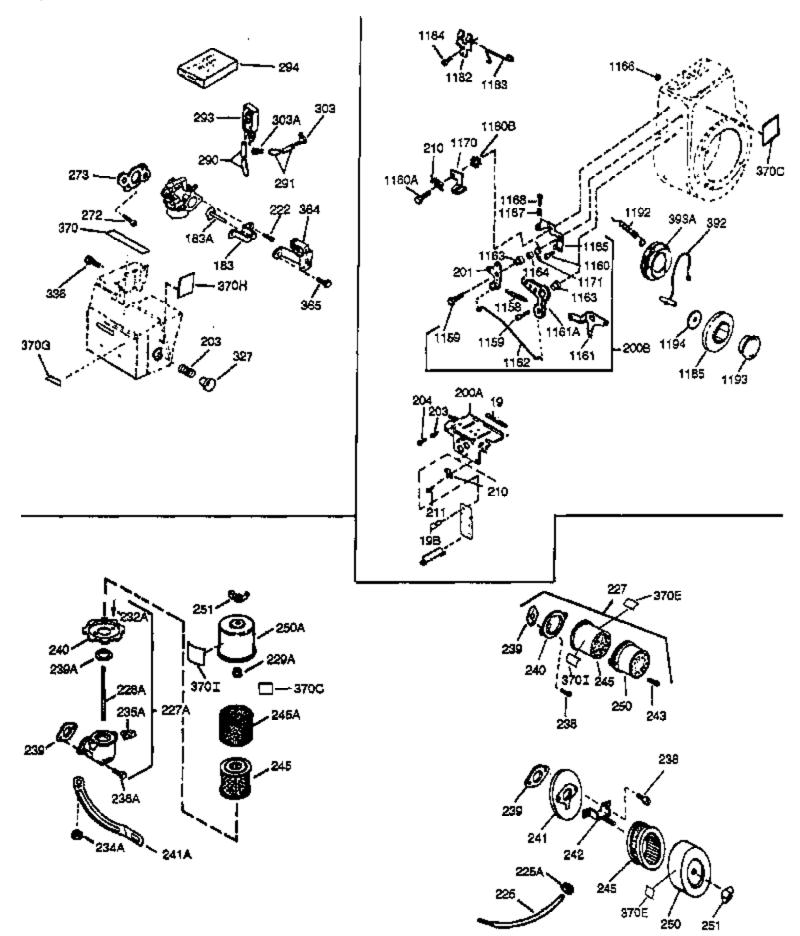

Pof #	Part Number	Otv	Description
	30322	Qιу	Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		
	650738		Screw, 1/4-20 x 1/2" (Use as required)
			Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"  Control Product (Incl. 1158, 1171)(Apr. og.)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
222A	700407		Pop Rivet (Can be purchased locally)
221	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
238	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
200	607 10		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
00.4	05704		···
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
<b>ડ</b> ∪ડ	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	35392		Plug, Starter
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
1100	55010		TIUD & OCIECIT MOOY.

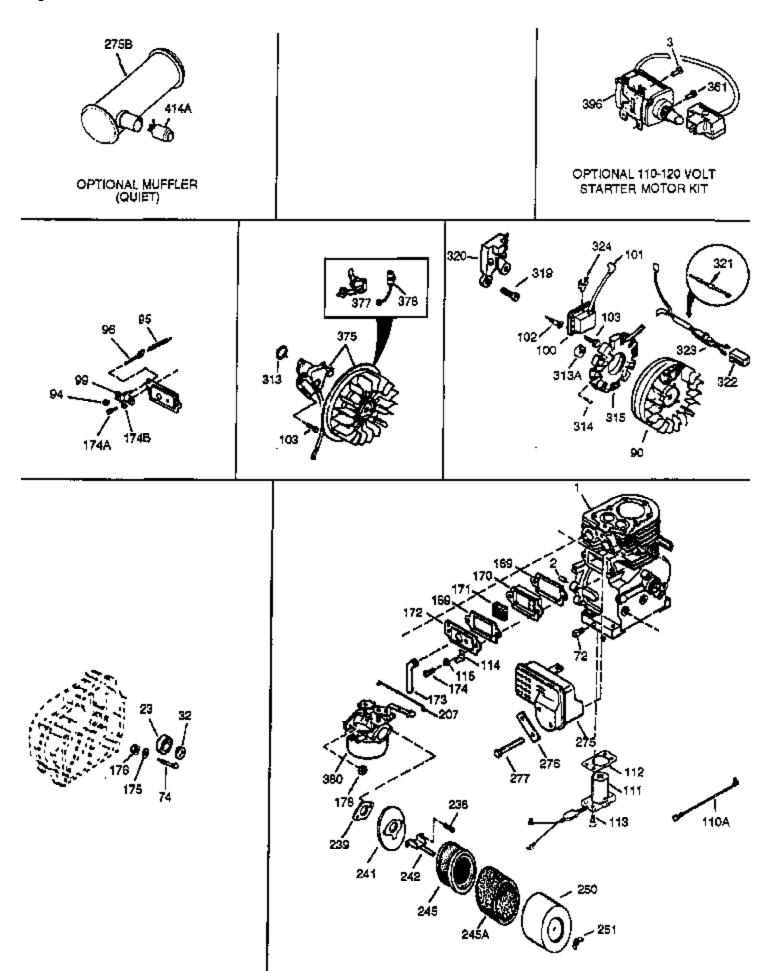

Ref #	Part Number Qty	Description
1	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	611090	Flywheel
	33450	Lock Nut, 10-32
	30886A	Spring, Governor bolt
	30845A	• •
		Bolt, Governor adjusting
	35135	Solid State Assy.
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A	33070	Pop Rivet (Can be purchased locally)
	28820	• • •
		Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
275	33280A	Muffler
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
070	04500	• • •
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
201 /	22022	Fuel Can (Bad Blastia) (Spurt Begintent Law Brofile) (Llee ea
30 IA	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
306	29673	* Gasket, Oil filler
	35941	Dipstick (Incl. 306)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
T <b>ZZ</b>		