



D.(#	Prof Novel and Control	Description
	Part Number Qty	
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30700	Yoke, Governor
15B	650494	Screw, 6-40 x 5/16"
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	35319	Seal, Oil
	35256A	
25	30200A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25	35326	Baffle, Blower housing
	29536	Blower Housing Baffle (Without electric starter knockout)
	20000	(Use as required)
		(Ose as required)
26	650561	Screw, 1/4-20 x 5/8"
30	35441A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	35776	Piston, Pin & Ring Set (Std.)(3-3/16")
	35777	Piston, Pin & Ring Set (.010" OS)
	35778	Piston, Pin & Ring Set (.020" OS)
	35773	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	35774	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	35775	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	35779	Ring Set (Std.) (3-5/16" Bore)
42	35780	Ring Set (.010" OS)
	35781	Ring Set (.020" OS)
	35772	Ring, Piston Pin retaining
	36898	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	•
		Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
70	35376	Cover, Cylinder (Incl. 71, 75 & 80)
	35377	Bushing, Crankshaft
72	27642	Plug, Oil drain
	35319	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
	32589	Key, Flywheel
90	611090	Flywheel
92	650880	Washer, Lock
	650881	Nut, 5/8-18
	35135	Solid State Assy.
.50	-	

Ref # Part Number Qty Description 102 650872 Stud, Solid state mounting 103 650814 Screw, Torx T-15, 10-24 x 1" 108 29783 Pin, Crankshaft gear (Only serviceable when gear is to crank.)	s pinned
103 650814 Screw, Torx T-15, 10-24 x 1" 108 29783 Pin, Crankshaft gear (Only serviceable when gear is	s pinned
108 29783 Pin, Crankshaft gear (Only serviceable when gear is	s pinned
	pinned
	, p., ., .oa
io Galik.)	•
109 33245 Gear, Crankshaft	
119 34923A * Gasket, Cylinder head	
120 34030A Head, Cylinder	
125 27878A Exhaust Valve (Std.) (Incl. 151)	
126 34035 Intake Valve (Std.) (Incl. 151)	
126 34036 Intake Valve (1/32" OS) (Incl. 151)	
127 650691 Washer (Do not use with No. 6021A scr ew.)	
128 650690 Washer, Belleville (Use as required)	
129 650727 Screw, 5/16-18 x 1-3/4 (Use as requir ed)	
130 6021A Screw, 5/16-18 x 1-1/2" (Use as required, but do no	otuse No.
650691 washer.)	
130 650711 Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use	e 6021A
but discard 650691 washer.)	, 002 (
130 650694A Screw, 5/16-18 x 2" (Use as required)	
131A 650713 Screw, 5/16-18 x 5/8"	
131 650737 Screw, 1/4-20 x 1/2" (Use as required)	
131 650738 Screw, 1/4-20 x 5/8 (Use as required)	
133 650890 Washer, Internal Lock	
135 33636 Resistor Spark Plug	
139 33369 Bracket, Governor gear	
·	
,	
149 27882 Cap, Upper valve spring	
149A 35862 Seal Assy., Intake valve	
150 27881 Spring, Valve	
151 32581 Cap, Lower valve spring	
169 27896A * Gasket, Breather	
170 28423 Body, Breather	
171 28424 Element, Breather	
172 28425 Cover, Breather	
173 35350 Tube, Breather	
174 650128 Screw, 10-24 x 1/2"	
178 29752 Nut & Lockwasher, 1/4-28	
182 30088A Screw, 1/4-28 x 1"	
184 33263 * Gasket, Carburetor	
185 33877 Pipe, Intake	
200 34664 Control Bracket (Incl.19,203, 204, 20 6 & 209)	
203 31342 Spring, Compression	
204 650549 Screw, 5-40 x 7/16"	
206 610973 Terminal Assy.	
207 33878 Link, Governor lever-to-throttle	
209 650821 Screw, 10-32 x 1/2"	
222A Pop Rivet (Can be purchased locally)	
222 28820 Screw, 10-32 x 1/2"	
223 650378 Screw, Torx T-30, 5/16-18 x 1-1/8"	
224 27915A * Gasket, Intake pipe	
250B 33269A Cover, Air cleaner	
260 33375D Blower Housing (For electric starter)	
,	
261 650788 Screw, 5/16-18 x 3/4"	
262 29747B Screw, 5/16-24 x 21/32"	
265 33272B Cover, Cylinder head	
276 31588 Plate, Muffler locking	

Ref #	Part Number	Qty	Description
276	35741	•	Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35985		Hub, Starter
			·
	35446		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
204	25050		First Car (Pad Plantia) (4 75" LD.)
	35650		Fuel Cap (Red Plastic) (1.75" I.D.)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00 17 (00002		required) (1.5" I.D.)
			required) (1.5 1.5.)
305	35554		Oil Fill Tube
306	29673		* Gasket, Oil filler
310B	35941		Dipstick (Incl. 306)
	27625		Oil Fill Plug (Incl. 312)
	29673		* Gasket, Öil filler plug
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		·
			Screw, 1/4-20 x 5/8"
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590671		Rewind Starter (Refer to Division 5, Section C, page 37 for
330	330071		breakdown or Fiche 18B, Grid G-2)
			breakdown of Fight 10b, Old 0-2)
400	33279G		* Gasket Set (Incl. items marked *)
414	33323		Opt.Muffler Screen (Mini-Bike applica tion)
418	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2 Screw, 10-32 x 1/2"
			·
	27070		Lockwasher
1185	33816		Hub & Screen Assy.

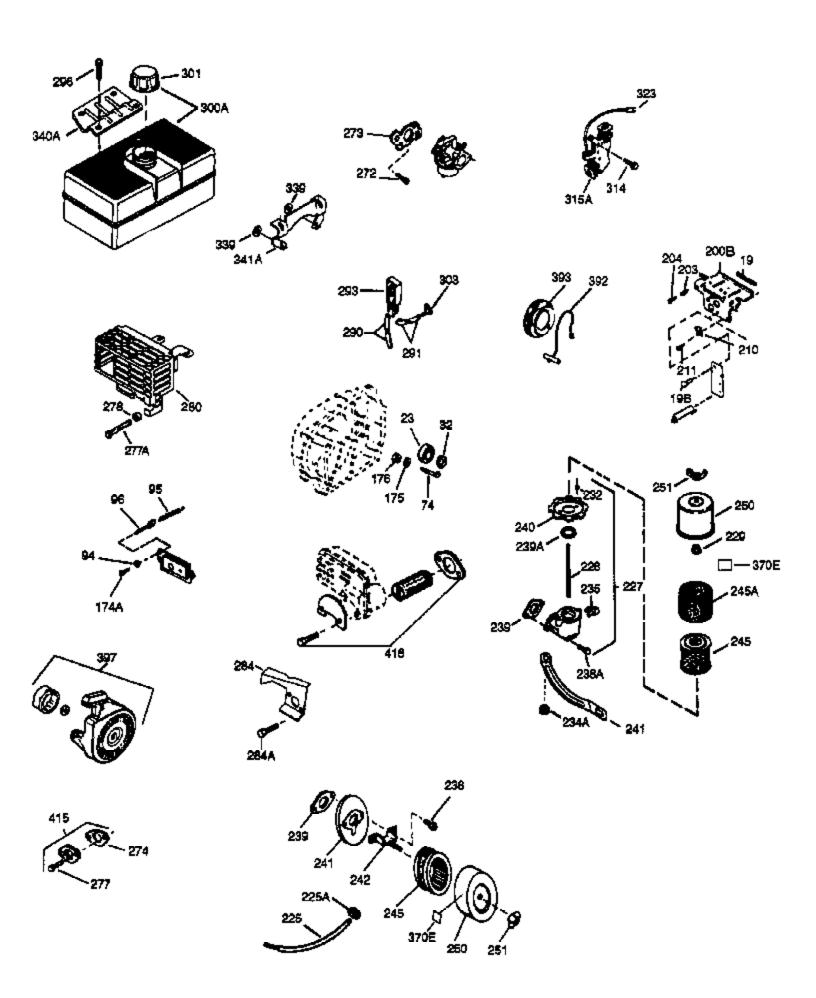

37A 64 94 95 96	Part Number 30322 650802 33450 30886A 30845A 29783	Qty	Description Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Lock Nut, 10-32 Spring, Governor bolt Bolt, Governor adjusting Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
131 131A 200B 203 204 222A	650727 650737 650738 650713 730152 31342 650549		Screw, 5/16-18 x 1-3/4 (Use as requir ed) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
239 241 242 245 250B 251 274 277 277 290 290	28820 27272A 33266 33267 33268 33269A 650513 35865 650729 651002 29774 30962 30705 33715		Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Gasket, Exhaust Screw, 5/16-18 x 3-3/16" (Use as requ ired) Screw, 5/16-18 x 4-1/4" (Use as requi red) Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As requ ired) Fuel Line (Braided 16")(40cm)(As requ ired) Fuel Line (Braided 16")(40cm)(As requ ired) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
	650665 410144B		Screw, 1/4-15 x 7/8" Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
303 306 310B 338A 379 414 415 418 419 422 1159 1160 1160	35650 32958 29673 35941 31291 631021 33323 730130 33700 650578 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic) (1.75" I.D.) Fitting, Fuel * Gasket, Oil filler Dipstick (Incl. 306) Plug, Cover Inlet Needle, Seat & Clip Assy. Opt.Muffler Screen (Mini-Bike applica tion) Kit, Exhaust adapter (Incl. 274 & 277) Cover & Tube, Muffler (use as require d) Screw, 8-18 x 3/8" (use as required) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

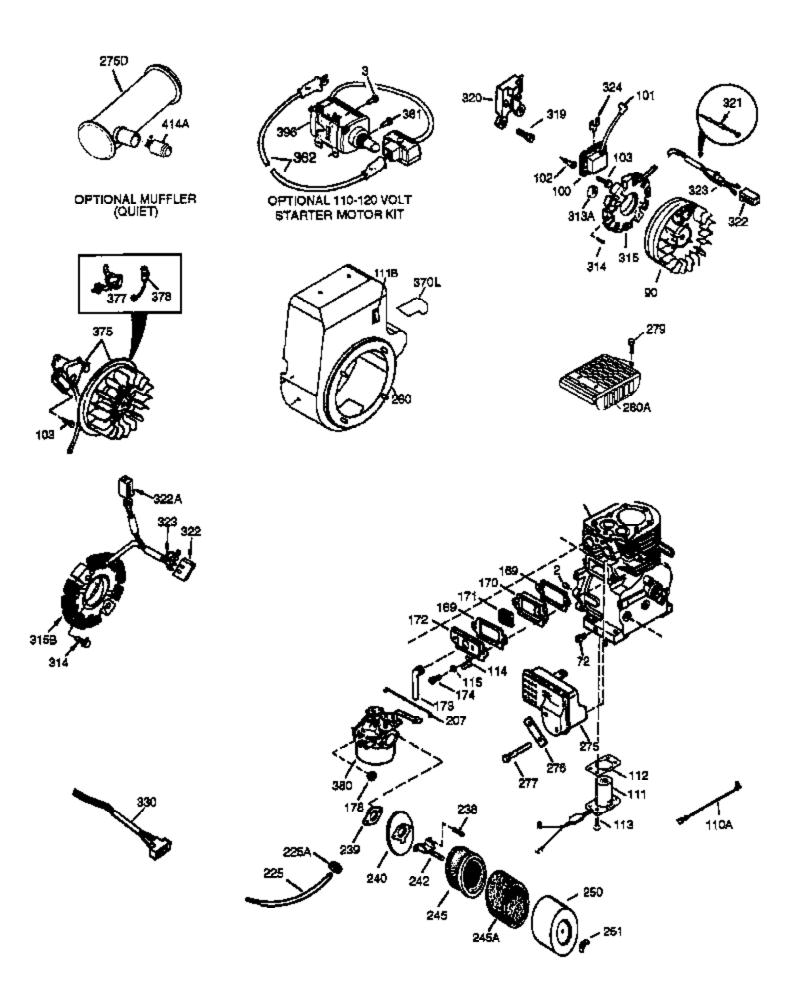

		y Description
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
90	611090	Flywheel
100	35135	Solid State Assy.
102	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
		,
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33267	·
		Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33375D	Blower Housing (For electric starter)
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
204.4	22022	Fire Con / Dad Blocks / Court Desistant Levy Brokle / (Lee ee
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
306	29673	* Gasket, Oil filler
	35941	Dipstick (Incl. 306)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
	631021	Inlet Needle, Seat & Clip Assy.
	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	032242	
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
414	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2" Screw, 10-32 x 1/2"
	27070	Lockwasher
	33816	Hub & Screen Assy.
COLL	33010	I IUD & OCICCII MOOY.