



		Qty Description
	34347A	Cylinder (Incl. 3, 4 & 5) (2-15/16" B ore)
	27642	Plug, Pipe (1/4-18)
3A	30968	Nipple, Pipe
3B	30969	Cap, Oil drain
4	32630	Seal, Oil
5	27652	Pin, Dowel
	29536	Blower Housing Baffle (No knock-out for electric start) (Use as required)
6	35256A	Blower Housing Baffle (With knock-out for electricstart) (Use as required)
7	650561	Screw, 1/4-20 x 5/8"
	29783	Crankshaft Gear Pin (Used on early pr od.)
	33245	Crankshaft Gear (Used on early production)
	33459A	Crankshaft
	34549	Piston, Pin & Ring Set (Std.) (2-15/1 6")
	34550	Piston, Pin & Ring Set (.010" OS)
	34551	Piston, Pin & Ring Set (.020" OS)
	34321A	
		Piston & Pin Ass'y. (Std.)(Incl.10)(2 -15/16")
	34322A	Piston & Pin Ass'y. (.010" OS) (Incl. 10)
	34323A	Piston & Pin Ass'y. (.020" OS) (Incl. 10)
	27888	Ring, Piston pin retaining
	34324	Ring Set (Std.) (2-15/16" Bore)
	34325	Ring Set (.010" OS)
	34326	Ring Set (.020" OS)
	32591C	Rod Assy., Connecting (Incl. 18 & 19)
	34242	Dipper, Oil
18A	32590	Plate, Lock & Oil dipper (This plate may be replaced by No. 34242 oil dipper but No. 650662C screw must be used.)
19	650662C	Bolt, Connecting rod (2 pcs.)
20	34034	Lifter, Valve
21	34143	Camshaft (MCR)
22	33273A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Cylinder cover
	33367B	Cover, Cylinder (Incl. 26, 27, 37, 58 A & 59)
	33368	Bushing, Crankshaft
	31950	Seal, Oil
	30699C	Rod Assy., Governor (Incl. 34 & 35)
	30699B	Rod, Governor (This one piece governor rodis no longer used. It is replaced by No. 30699C assembly, Ref. No. 5A.)
34	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29642	Ring, Retaining
	31845	Shaft, Mechanical governor
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor (Incl. 39)
	33369	Bracket, Governor gear
	650836	Screw, $10-24 \times 1/2$ "
	29916	Clamp, Governor lever
	29826	Screw, 10-32 x 3/4"
	29216	Locknut, 10-32
	33454	Lever Assy., Governor
	29918	Lockwasher, No. 8 E.T.
54	650548	Screw, 8-32 x 5/16"

	Part Number Qty	
55	30322	Locknut, 8-32
56	650832	Screw, 1/4-20 x 1-11/16"
57	650833	Screw, 1/4-20 x 1-3/16"
	34011A	Dipstick (Incl. 59)
	33590	"O" Ring, Dipstick
	33893A	Oil Fill Tube
	27878A	Exhaust Valve (Std.) (Incl. 70)
	27880A	Exhaust Valve (1/32" OS) (Incl. 70)
	34035	Intake Valve (Std.) (Incl. 70)
	34036	Intake Valve (1/32" OS) (Incl. 70)
68	27882	Cap, Upper valve spring
68A	27882	Cap, Upper valve spring
69	27881	Spring, Valve
70	32581	Cap, Lower valve spring
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
	610118	Cover, Spark plug (Use as required)
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	34327A	* Gasket, Cylinder head
	34030	Head, Cylinder
98	650692	Screw, 5/16-18 x 1-3/4" (Use as requi red)
98	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
	050544	,
98	650711	Screw, 5/16-18 x 1-5/8" (Use as required) (Can use No.
		6021A but discard No. 650691 washer.)
00	33636	Posistor Sport Dlug (P I OC)
		Resistor Spark Plug (RJ-8C)
	650691	Washer (Use as req.) (Do not use w/60 21A)
	650727	Screw, 5/16-18 x 1-3/4" (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
106	28424	Element, Breather
107	28425	Cover, Breather
108	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut, Whiz lock, 1/4-28
	33263	* Gasket, Carburetor
	33877	Pipe, Intake
		•
	30088A	Screw, 1/4-28 x 1"
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake
	34587	Bracket, Choke
122	28820	Screw, 10-32 x 1/2"
123	33377	Bracket, Carburetor cover mtg.
124	650767	Screw, 8-36 x 5/8"
	34822A	Blower Housing (For electric starter)
	570682	Primer Assy.
	32180C	Line, Primer
	34677	Control Bracket (Incl. 134, 135, 136 & 138)
	31342	
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy. (Use as required)
	650821	Screw, 10-32 x 1/2"
138	34663	Spring, Speed control
139	34667	Link, Governor
	33878	Link, Governor lever-to-throttle

		Description
143	650788	Screw, 5/16-18 x 3/4"
144	29747B	Screw, 5/16-24 x 21/32"
145	33013	Cover, Starter bubble
146	650760	Screw, 8-32 x 3/8"
147	32410	Knob, Speed control
	34126	Bracket, Grommet mtg.
	28545	Grommet, Plastic
	650760	Screw, 8-32 x 3/8"
	34666	Cover, Carburetor
	28942	Screw, 10-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	34586	Rod, Choke
	35438	Knob, Control
	33272A	Cover, Cylinder head
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8" (Use as required)
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650802	Screw, 1/4-20 x 5/8" (Use as required)
	34154	Plate, Upper fuel tank mounting
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	34155	Bracket Assy., Lower fuel tank mtg.
173	650561	Screw, 1/4-20 x 5/8"
	650665	Screw, 1/4-15 x 7/8"
175	34156A	Fuel Tank (Incl. 176 & 178) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
170	22222	
1/6	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required)
176	410144B	Fuel Cap (White Plastic) (Std) (Use a s req.)
	34210	Fuel Cap (Ref Plastic) (Spurt Resistant, High Profile) (Use as
-		required)
170	05055	
	35355	Fuel Cap (Red Plastic) (Use as required)
	29774	Fuel Line (Use as required) (8.25") (21 cm)
	30705	Fuel Line (Use as required) (16.0") (41 cm)
	26460	Clamp, Fuel line (Use as required)
	32961	Valve, Shut-off
	27930A	* Gasket, Exhaust (Use as required)
187	33280A	Muffler
188	31588	Plate, Muffler locking
189	650729	Screw, 5/16-18 x 3-3/16"
191	34141	Guard, Starter
	32576	Seal, Snow guard
	33662	Hub & Screen Assy., Starter
	29752	Nut, Whiz lock, 1/4-28
	34144	Decal, Primer
	34679	Decal, Instruction
	34414	Decal, Warning
	631021	Inlet Needle, Seat & Clip Assy.
	632111	
2/4	002111	Carburetor (Incl. 115) (Refer to Division 5, Section A, page 170 for breakdown)
		,
276	590479	Rewind Starter (Refer to Division 5, Section C, page 30 for
		breakdown)
200	33279G	* Gasket Set (Incl. items marked *)
280	JJZ1 30	Cashel Oel (11101. 1101115 11101 hell)

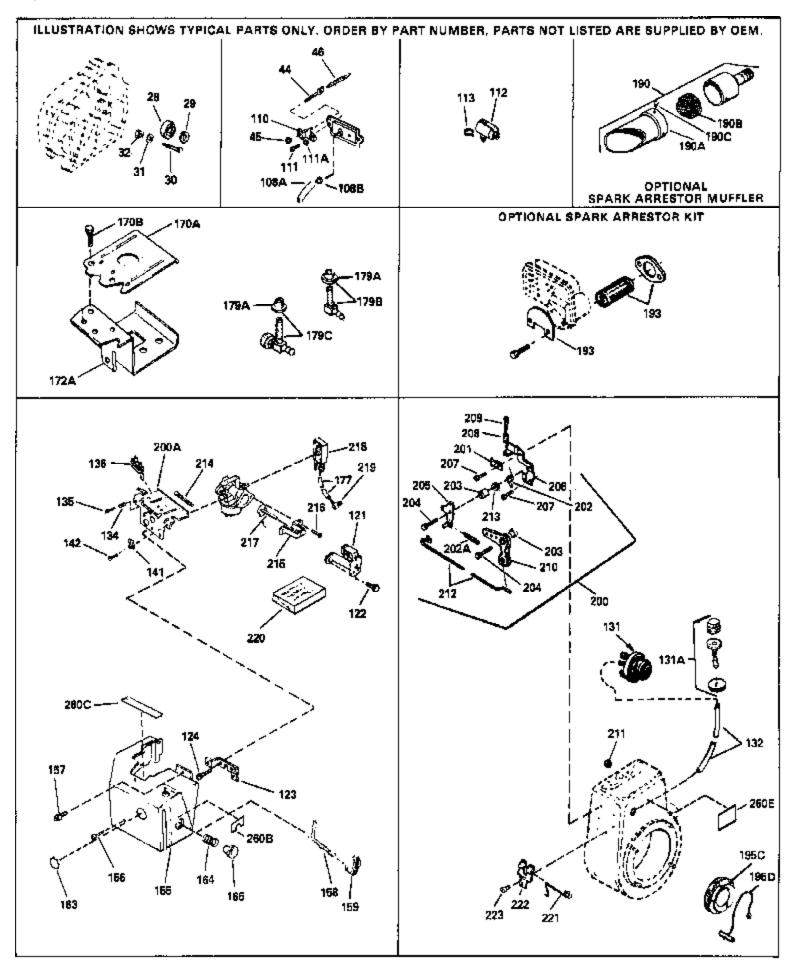

Ref #	Part Number Qty	Description
121	34587	Bracket, Choke
122	28820	Screw, 10-32 x 1/2"
123	33377	Bracket, Carburetor cover mtg.
124	650767	Screw, 8-36 x 5/8"
131	570682	Primer Assy.
132	32180C	Line, Primer
134	31342	Spring, Compression
135	650549	Screw, 5-40 x 7/16"
136	610973	Terminal Assy. (Use as required)
155	34666	Cover, Carburetor
156	28942	Screw, 10-32 x 3/8"
157	650765	Screw, 10-32 x 1/2"
158	34586	Rod, Choke
159	35438	Knob, Control
177	29774	Fuel Line (Use as required) (8.25") (21 cm)
177	30705	Fuel Line (Use as required) (16.0") (41 cm)
190A	33700	Cover & Tube, Muffler (Use as require d)
190B	33323	Screen, Muffler (Use as required)
190C	650578	Screw, 8-18 x 3/8" (Use as required)
190	391026	Muffler (Incl. 190A, 190B & 190C) (This spark arrestor
		mufflercan be used on any model)
193	34479	Spark Arrestor Kit (Fits "L" shaped m ufflers)
	34144	Decal, Primer
2002	VIIII	

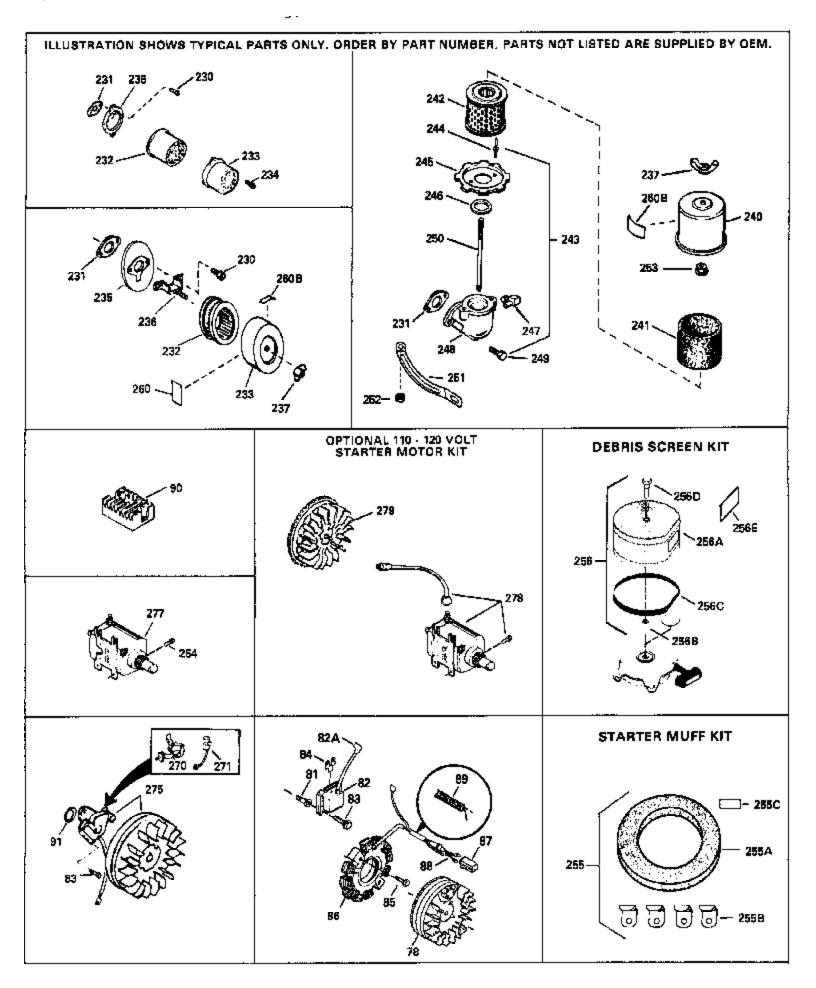

		/ Description
83 91	610118 650489 33876 34687	Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" Gasket, Stator Air Cleaner, Starter Can be used on HM70 with diecast starter
255B	34869	Bracket, Starter air cleaner Can be used on HM70 with diecast starter
	34870 730572	Instruction Decal Can be used on HM70 with diecast starter. Starter Muff Kit (Incl. 255A, 255B, & 255C) Can be used on HM70 with diecast starter
256A	35568	Debris Screen Can be used on HM70 with stamped steel recoil starter
256B	35569	Spacer, Screen Can be used on HM70 with stamped steel recoil starter
256C	35570	Seal, Screen Can be used on HM70 with stamped steel recoil starter
256	730573	Debris Screen Kit (Incl. 256A thru 25 6E) Can be used on HM70 with stamped steel recoil starter
256E	34387	Instruction Decal Can be used on HM70 with stamped steel recoil starter.
256D	650907	Screw, 5/16-18 x 1-5/8" Can be used on HM70 with stamped steel recoil starter
270 271	34346 30547A 30548B 610848	Decal, Instruction Contact Assy., Breaker Condenser Magneto (w/ring gear for 110 Volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 28 for breakdown)
278	33329D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #279). Refer to service number stamped on end cap ofmotor, or decal fo
279	610847	Flywheel (Ring gear flywheel requiredon engine using 110-120 Volt starter motor kits listed above.) (Use on Std. point ignition)
279	611091	Flywheel (Minimum ring gear flywheel required on engine using 110-120 Volt starter motor kits listed above.) (Use on Solid State ignition)