


		ty Description
	34348B	Cylinder (Incl.2,20,72,72A) (3-1/8" B ore)
2	27652	Pin, Dowel
15A	30700	Yoke, Governor
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15B	650494	Screw, 6-40 x 5/16"
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
19	34663	Spring, Speed control
20	32630	Seal, Oil
	35256A	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	35198	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, # 8 E.T.
	29216	Nut & Lockwasher, 10-32 "Keps"
	30322	Locknut, Hex "Keps", 8-32
	29642	Ring, Retaining
	34552	Piston, Pin & Ring Set (Std.) (3-1/8")
	34553	Piston, Pin & Ring Set (.010" OS)
	34554	Piston, Pin & Ring Set (.020" OS)
	34329A	Piston & Pin Ass'y.(Std)(Incl.43)(3-1 /8")
	34330A	Piston & Pin Ass'y. (.010" OS)(Incl. 43)
	34331A	Piston & Pin Ass'y. (.020" OS)(Incl. 43)
	34332	Ring Set (Std.) (3-1/8" Bore)
	34333	Ring Set (.010" OS)
	34334	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 49)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	Screw, 10-24 x $1/2$ "
	35262	* Gasket, Cylinder cover
	33367B	Cylinder Cover (Incl. 71, 75, 80, 311 & 312)
	33368	Bushing, Crankshaft
	9556	0
	27642	Plug, Pipe Plug, Oil drain
	31950	
	31845	Seal, Oil Shaft Mechanical governor
	30590A	Shaft, Mechanical governor
		Washer, Flat
	30591 30588A	Gear Assy., Governor (Incl. 81)
	30588A 20103	Spool, Governor Bing, Botaining
	29193	Ring, Retaining
	650833 650822	Screw, 1/4-20 x 1-3/16"
	650832	Screw, 1/4-20 x 1-11/16"
	32589	Key, Flywheel
	611090	Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex (1/2-20)
	35135	Lamination Assy., Solid State
	610118	Cover, Spark plug (Use as required)
	650872	Stud, Lamination mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	29783	Pin, Crankshaft gear
109	33245	Gear, Crankshaft

	Part Number	Qty	Description
	34041A		* Gasket, Head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Ind. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		
			Washer (Use as req., but not w/6021A screw)
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650690		Washer, Belleville
129	650727		Screw, 5/16-18 x 1-3/4" (Use as required)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
130A	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse with
			650691 washer)
131	650802		Screw, 1/4-20 x 5/8" (Use as required)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8" (Use as required)
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	33636		Resistor Spark Plug (RJ17LM)
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
149	27882		Cap, Upper valve spring
149A	35862		Seal Assy., Intake valve
150	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather cover
	28423		
			Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
173	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
174	650597		Screw, 10-24 x 5/8"
178	29752		Nut & Lockwasher, 1/4-28
	30593		Clip, Primer line (Use as required)
	30088A		Screw, 1/4-28 x 1"
			•
	33263		* Gasket, Carburetor
	34707		Pipe, Intake
	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
206	610973		Terminal Assy. (Use as required)
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8 "
	27915A		* Gasket, Intake pipe
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4" (Use as require d)
	29747B		Screw, 5/16-24 x 21/32"
265	33272B		Cover, Cylinder head
	33280A		Muffler
	35824		Muffler (Optional quiet muffler)
	31588		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16"
	650696		Screw, 5/16-18x2-3/4" (Used with 276A)
	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 3/8"
	32125		Cup, Starter


	Description
286A 35194	Screen, Starter
287 29752	Nut & Lockwasher, 1/4-28
290 29774	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
290 30705	Fuel Line (Braided 16")(41 cm)(Use as req.)
290 30962	Fuel Line (Braided 32")(81 cm)(Use as req.)
292 26460	Clamp, Fuel line (Use as required)
298 650665	Screw, 1/4-15 x 7/8"
300 34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
	builtwith different size fuel inlet openings. Tanks with the
	1-3/16" I.D. opening use fuel cap 34210. Tanks with the
	1-1/2" I.D. opening use fuel cap 35355.
301 410144B	Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
301 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16
301 33032	
	I.D.)
301 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
	(1-3/16" I.D)
301 35355	Fuel Cap (Red plastic) (1-1/2" I.D.)
306 29673	* Gasket, Oil fill
310A 35941	Dipstick (Incl. 306)
310 31297	Dipstick (Incl. 306)
325 29443	Clip, Fuel line (Use as required)
325 34246	Clip, Ground wire (Use as required)
340 34154	Plate, Fuel tank mounting
341 34155	Bracket, Fuel tank mounting
342 650561	Screw, 1/4-20 x 5/8"
370J 34870	Decal, Instruction Can be used on HM80 with diecast starter
370A 34686	Decal, Name
	•
370 34346	Decal, Instruction
379 631021	Inlet Needle, Seat & Clip Assy.
380 632351	Carburetor (Incl. 184) (Refer to Division 5, Section A, page
	188 for breakdown or Fiche18A-1, Grid F-5)
200 500/70	Deviad Starter (Defer to Division 5, Cention C, page 20 for
390 590479	Rewind Starter (Refer to Division 5, Section C, page 30 for
	breakdown or Fiche 18A-1, Grid G-5)
400 33279G	Gasket Set (Incl. items marked*)
	· · · · · · · · · · · · · · · · · · ·
408 35570	Screen Seal (Can be used on HM80 with stamped steel
	recoil starter)
409 35569	Spacer (Can be used on HM80 with stamped steel recoil
409 30009	• •
	starter)
410 730573	Debris Screen Kit (Incl. 360, 370B, 387, 411 &413) (Can be
	used on HM80 with stamped steel recoil starter)
	used of thim to with stamped steel recoil statter)
411 35568	Debris Screen (Can be used on HM80 with stamped steel
	recoil starter)
413 650907	Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with
	stamped steel recoil starter)
400	· ,
$\Lambda'_{1}(1) = \overline{\Lambda}'_{1}(1) + \overline{\Lambda}'_{2}(1)$	SAE 30, 4-Cycle Engine Oil (Quart)
420 730225	SAE 5W30, 4-Cycle Engine Oil (Quart)
420 730225 421 730226	
421 730226	
	Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on
421 730226	
421 730226	Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on

Ref #	Part Number	Qty	Description
430	611077		Alternator, Add on (Use as required) (Refer to Mechanics Handbook for installation instructions).
431	590609		Centering tube (Use with engines equipped with die cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions)
431	590610		Centering tube (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611078		A.C. Lighting Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611079		D.C. Charging Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590611		Alternator Shaft (4.00") (Use with engines equipped with cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590636		Alternator Shaft (Use with engines equipped with stamped steel starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).

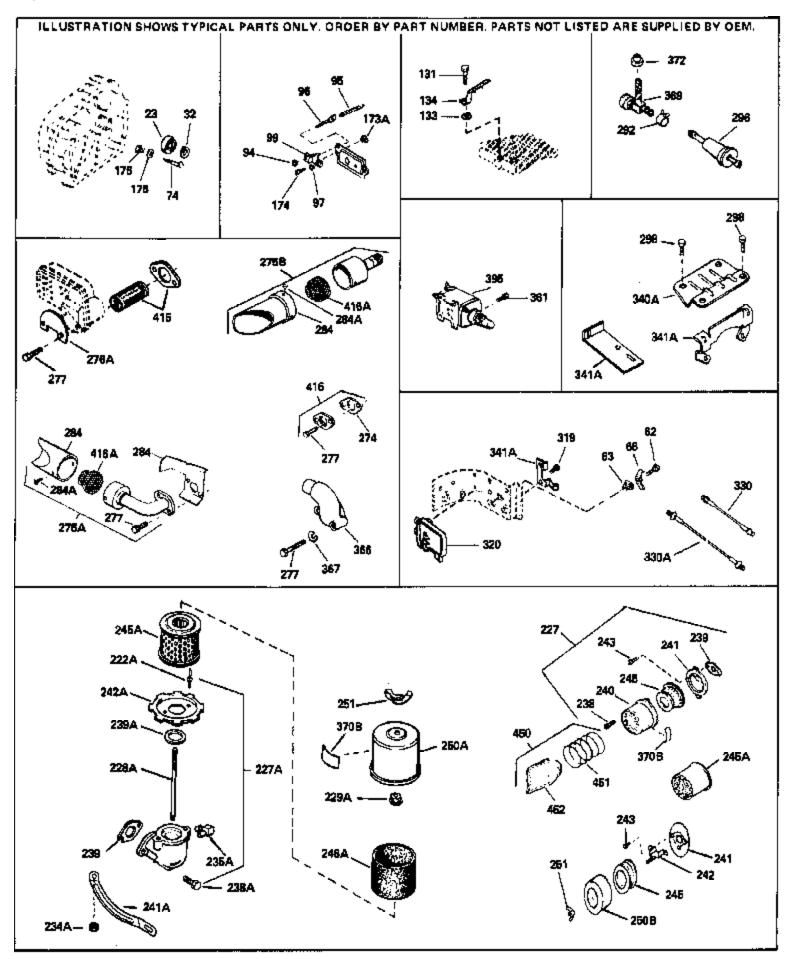

74 31855 Retainer, Bearing 97 Lockwasher, Heavy split, #10 (Buy loc ally) 131 650737 Screw, 1/4-20 x 5/8" (Use as required) 131 650737 Screw, 1/4-20 x 5/8" (Use as required) 133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 1/4-20 x 5/8" (Use as required) 174 650597 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assy. (Incl.238,239,240,241,243,245 8 (Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 229 27272A * Gasket	245) (Use
131 650802 Screw, 1/4-20 x 5/8" (Use as required) 131 650737 Screw, 1/4-20 x 1/2" (Use as required) 133 650738 Screw, 1/4-20 x 5/8" (Use as required) 133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assy. (Incl.238,239,240,241,243,245 & Use as required) 227 730164 Air Cleaner Assy. (Incl. 238, 239, 240, 241, 243 & as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 239 27272A * Gasket, Air cleaner 243 33266 Bracket, Air cleaner 243 <	245) (Use
131 650737 Screw, 1/4-20 x 1/2" (Use as required) 133 650738 Screw, 1/4-20 x 5/8" (Use as required) 133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Ass'y. (Incl.238,239,240,241,243,245 8 (Use as required) 227 730164 Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243,245 8 (Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 243 3266 Bracket, Air cleaner 243 2820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 </td <td>245) (Use</td>	245) (Use
131 650738 Screw, 1/4-20 x 5/8" (Use as required) 133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assly. (Incl.238,239,240,241,243,245 & Use as required) 227 730164 Air Cleaner Assly. (Incl. 238, 239, 240, 241, 243, 245 & Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 32820 Screw, 10-32 x 1/2" 245 33268 Element, Air cleaner 243 33268 Element, Air cleaner 2508 33269A Cover, Air deaner 251 650513 Nut filer, (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	245) (Use
131 650738 Screw, 1/4-20 x 5/8" (Use as required) 133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assly. (Incl.238,239,240,241,243,245 & Use as required) 227 730164 Air Cleaner Assly. (Incl. 238, 239, 240, 241, 243, 245 & Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 32820 Screw, 10-32 x 1/2" 245 33268 Element, Air cleaner 243 33268 Element, Air cleaner 2508 33269A Cover, Air deaner 251 650513 Nut filer, (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	245) (Use
133 650890 Washer, Lock, 5/16" 134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assy. (Incl. 238, 239, 240, 241, 243, 245 8 (Use as required) 227 730164 Air Cleaner Assy. (Incl. 238, 239, 240, 241, 243, 245 8 (Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 243 2820 Screw, 10-32 x 1/2" 2445A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Staust (Use as required) 2755 391026 Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) </td <td>245) (Use</td>	245) (Use
134 30747 Clip, Spark plug shorting 174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Ass'y. (Incl.238,239,240,241,243,245 & Ulse as required) 227 730164 Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243 & as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650821 Stud, 1/4-20 x 8.1 (Use as required) 228A 650826 Bracket, Air cleaner 239 27272A * Gasket, Air cleaner 243 3266 Bracket, Air cleaner 243 23267 Bracket, Air cleaner 243 23267 Bracket, Air cleaner 243 23268 Element, Air cleaner 245 33268 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required) 275B 391026 <td< td=""><td>245) (Use</td></td<>	245) (Use
174 650128 Screw, 10-24 x 1/2" 174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assy. (Incl.238,239,240,241,243,245 & UUSe as required) 227 730164 Air Cleaner Assy. (Incl.238, 239, 240, 241, 243 & as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) (Used with dri elbow) 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 243 28820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required) 275B 391026 Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	245) (Use
174 650597 Screw, 10-24 x 5/8" 227 730127 Air Cleaner Assy. (Incl.238,239,240,241,243,245 8 (Use as required)) 227 730164 Air Cleaner Assy. (Incl. 238, 239, 240, 241, 243 & as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) (Used with dri elbow) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 28820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Gostaner 245 33268 Element, Air cleaner 245 33268 Gostaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required)	245) (Use
227 730127 Air Cleaner Ass'y. (Incl.238,239,240,241,243,245 & (Use as required) 227 730164 Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243 & as required) 228A 650824 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 7.33 (Use as required) 228A 650851 Stud, 1/4-20 x 8.1 (Use as required) (Used with dri elbow) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 28820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required) 275B 391026 Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	245) (Use
227730164Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243 & as required)228A650824Stud, 1/4-20 x 7.33 (Use as required)228A650851Stud, 1/4-20 x 8.1 (Use as required)23927272A* Gasket, Air cleaner23927272A* Gasket, Air cleaner24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	245) (Use
228A650824Stud, 1/4-20 x 7.33 (Use as required)228A650851Stud, 1/4-20 x 8.1 (Use as required) (Used with dri elbow)23927272A* Gasket, Air cleaner23927272A* Gasket, Air cleaner24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
228A650851Stud, 1/4-20 x 8.1 (Use as required) (Used with dri elbow)23927272A* Gasket, Air cleaner23927272A* Gasket, Air cleaner24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	lled thru
elbow) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 28820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required) 275B 391026 Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	lled thru
elbow) 239 27272A * Gasket, Air cleaner 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 28820 Screw, 10-32 x 1/2" 245A 34700 Element, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing, 1/2-20 274 35865 Gasket, Exhaust (Use as required) 275B 391026 Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	
23927272A* Gasket, Air cleaner24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
23927272A* Gasket, Air cleaner24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
24133266Bracket, Air cleaner24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
24233267Bracket, Air cleaner24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
24328820Screw, 10-32 x 1/2"245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
245A34700Element, Air cleaner24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
24533268Element, Air cleaner250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
250B33269ACover, Air cleaner251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
251650513Nut, Wing, 1/2-2027435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
27435865Gasket, Exhaust (Use as required)275B391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C35824Muffler (Optional quiet muffler)	
275B 391026Muffler (Incl. 284, 284A & 416A) (This spark arresti can be used on any model.)275C 35824Muffler (Optional quiet muffler)	
can be used on any model.) 275C 35824 Muffler (Optional quiet muffler)	
	ng muffler
277A 650696 Screw, 5/16-18x2-3/4" (Used with 276A)	
292 26460 Clamp, Fuel line (Use as required)	
	act starter
370J 34870 Decal, Instruction Can be used on HM80 with diec	
370B 34387 Decal, Instruction Can be used on HM80 with starr recoil starter.	npea steel
395 33329D Starter Motor Kit (110-120 Volt) This 110-120 volt s motor kit may have been added to this engine. It ca added only if cylinder hasdrilled and tapped starter bosses and a ring gear flywheel. Refer to service n stamped on end cap of motor, or on decal for iden Ref	an be mounting number
40835570Screen Seal (Can be used on HM80 with stamped recoil starter)	steel
40935569Spacer (Can be used on HM80 with stamped steel starter)	l recoil
410730573Debris Screen Kit (Incl. 360, 370B, 387, 411 & 413)used on HM80 with stamped steel recoil starter)	(Can be
411 35568Debris Screen (Can be used on HM80 with stampe recoil starter)	ا - الما م
413650907Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with stamped steel recoil starter)	ea steel

Ref #	Part Number G	ty Description
	730130 730572	Exh.Adapter Kit (Incl.274,277)(Use as req.) Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on HM80 with die cast starter)
429	650868	Screw, 8-18 x 1-1/8" (3 Required) (Use as required) (Refer to Mechanics Handbook for installation instructions).
430	611077	Alternator, Add on (Use as required) (Refer to Mechanics Handbook for installation instructions).
431	590609	Centering tube (Use with engines equipped with die cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions)
431	590610	Centering tube (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611078	A.C. Lighting Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611079	D.C. Charging Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590611	Alternator Shaft (4.00") (Use with engines equipped with cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590636	Alternator Shaft (Use with engines equipped with stamped steel starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).

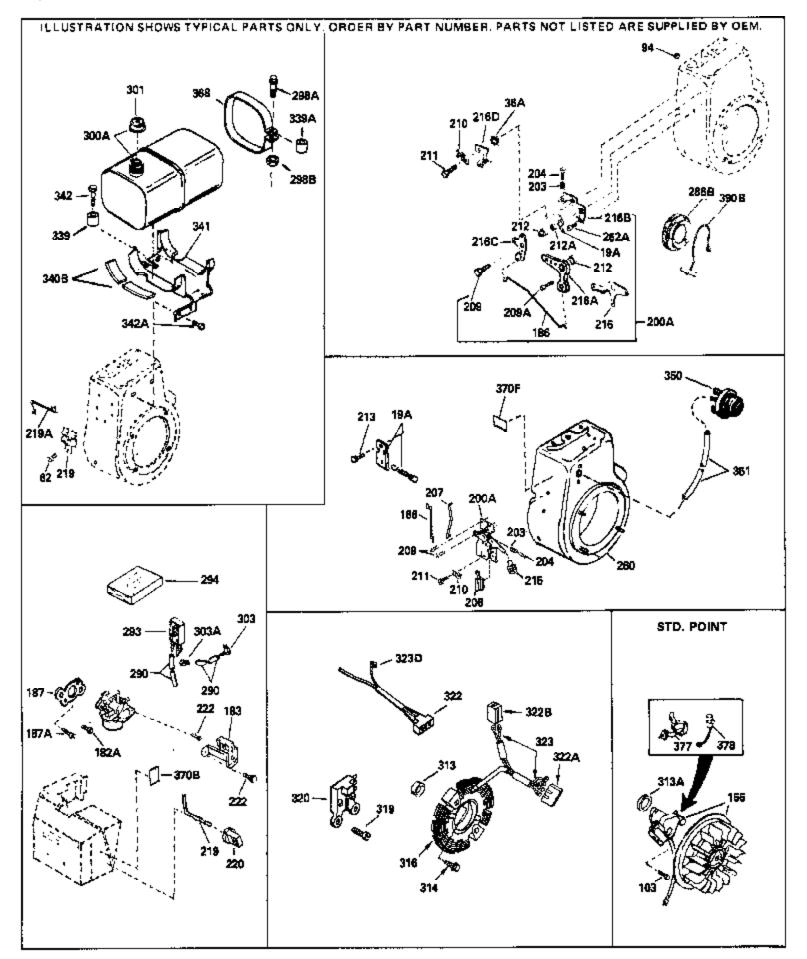

			Description
	650814		Screw, Torx T-15, 10-24 x 1"
186	34661	L	Link, Governor
200A	34664	C	Control Bracket (Incl.19,203,204,206, 209)
203	31342	S	Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy. (Use as required)
	33878		Link, Governor-to-throttle
	650821		Screw, 10-32 x 1/2"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	33375D		Blower Housing (For electric starter)
	35824		Muffler (Optional quiet muffler)
277A	650696	S	Screw, 5/16-18x2-3/4" (Used with 276A)
290	29774	F	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
290	30705		Fuel Line (Braided 16")(41 cm)(Use as req.)
	30962		Fuel Line (Braided 32")(81 cm)(Use as req.)
	410144B		Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16"
301	33002		
ર∩1	34210	F	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
301			(1-3/16" I.D)
301	35355	F	Fuel Cap (Red plastic) (1-1/2" I.D.)
	35038		Spacer, Tank
	34155		Bracket, Fuel tank mounting
	650561		Screw, 1/4-20 x 5/8"
3700	34387		Decal, Instruction Can be used on HM80 with stamped steel recoil starter.
370J	34870	Ľ	Decal, Instruction Can be used on HM80 with diecast starter.
408	35570	S	Screen Seal (Can be used on HM80 with stamped steel
			recoil starter)
400	25500		
409	35569		Spacer (Can be used on HM80 with stamped steel recoil
		S	starter)
410	730573	Г	Debris Screen Kit (Incl. 360, 370B, 387, 411 &413) (Can be
110	100010		used on HM80 with stamped steel recoil starter)
			· ,
411	35568	Ľ	Debris Screen (Can be used on HM80 with stamped steel
		r	recoil starter)
110	650007	c	Scrow 5/16-18 x 1-5/8" (Cap be used on UN/00 with
413	650907		Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with
		S	stamped steel recoil starter)
425	730572	S	Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on
.20			HM80 with die cast starter)
			,
429	650868		Screw, 8-18 x 1-1/8" (3 Required) (Use as required) (Refer to
		Ν	Mechanics Handbook for installation instructions).
100	611077	^	Alternator, Add on (Llos on required) (Pafer to Machanica
430	611077		Alternator, Add on (Use as required) (Refer to Mechanics
		F	Handbook for installation instructions).
431	590609	C	Centering tube (Use with engines equipped with die cast
			aluminum starter)(Use as required) (Refer to Mechanics
			Handbook for installation instructions)
		Г	$ \alpha \alpha \alpha \alpha \alpha \alpha \alpha \alpha \alpha $
431	590610	C	Centering tube (Use as required) (Refer to Mechanics
-			Handbook for installation instructions).
- · · ·	044070		,
432	611078		A.C. Lighting Connector (Use as required) (Refer to
		Ν	Mechanics Handbook for installation instructions).

Ref # Part Number	Qty Description
432 611079	D.C. Charging Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
433 590611	Alternator Shaft (4.00") (Use with engines equipped with cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).
433 590636	Alternator Shaft (Use with engines equipped with stamped steel starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).