








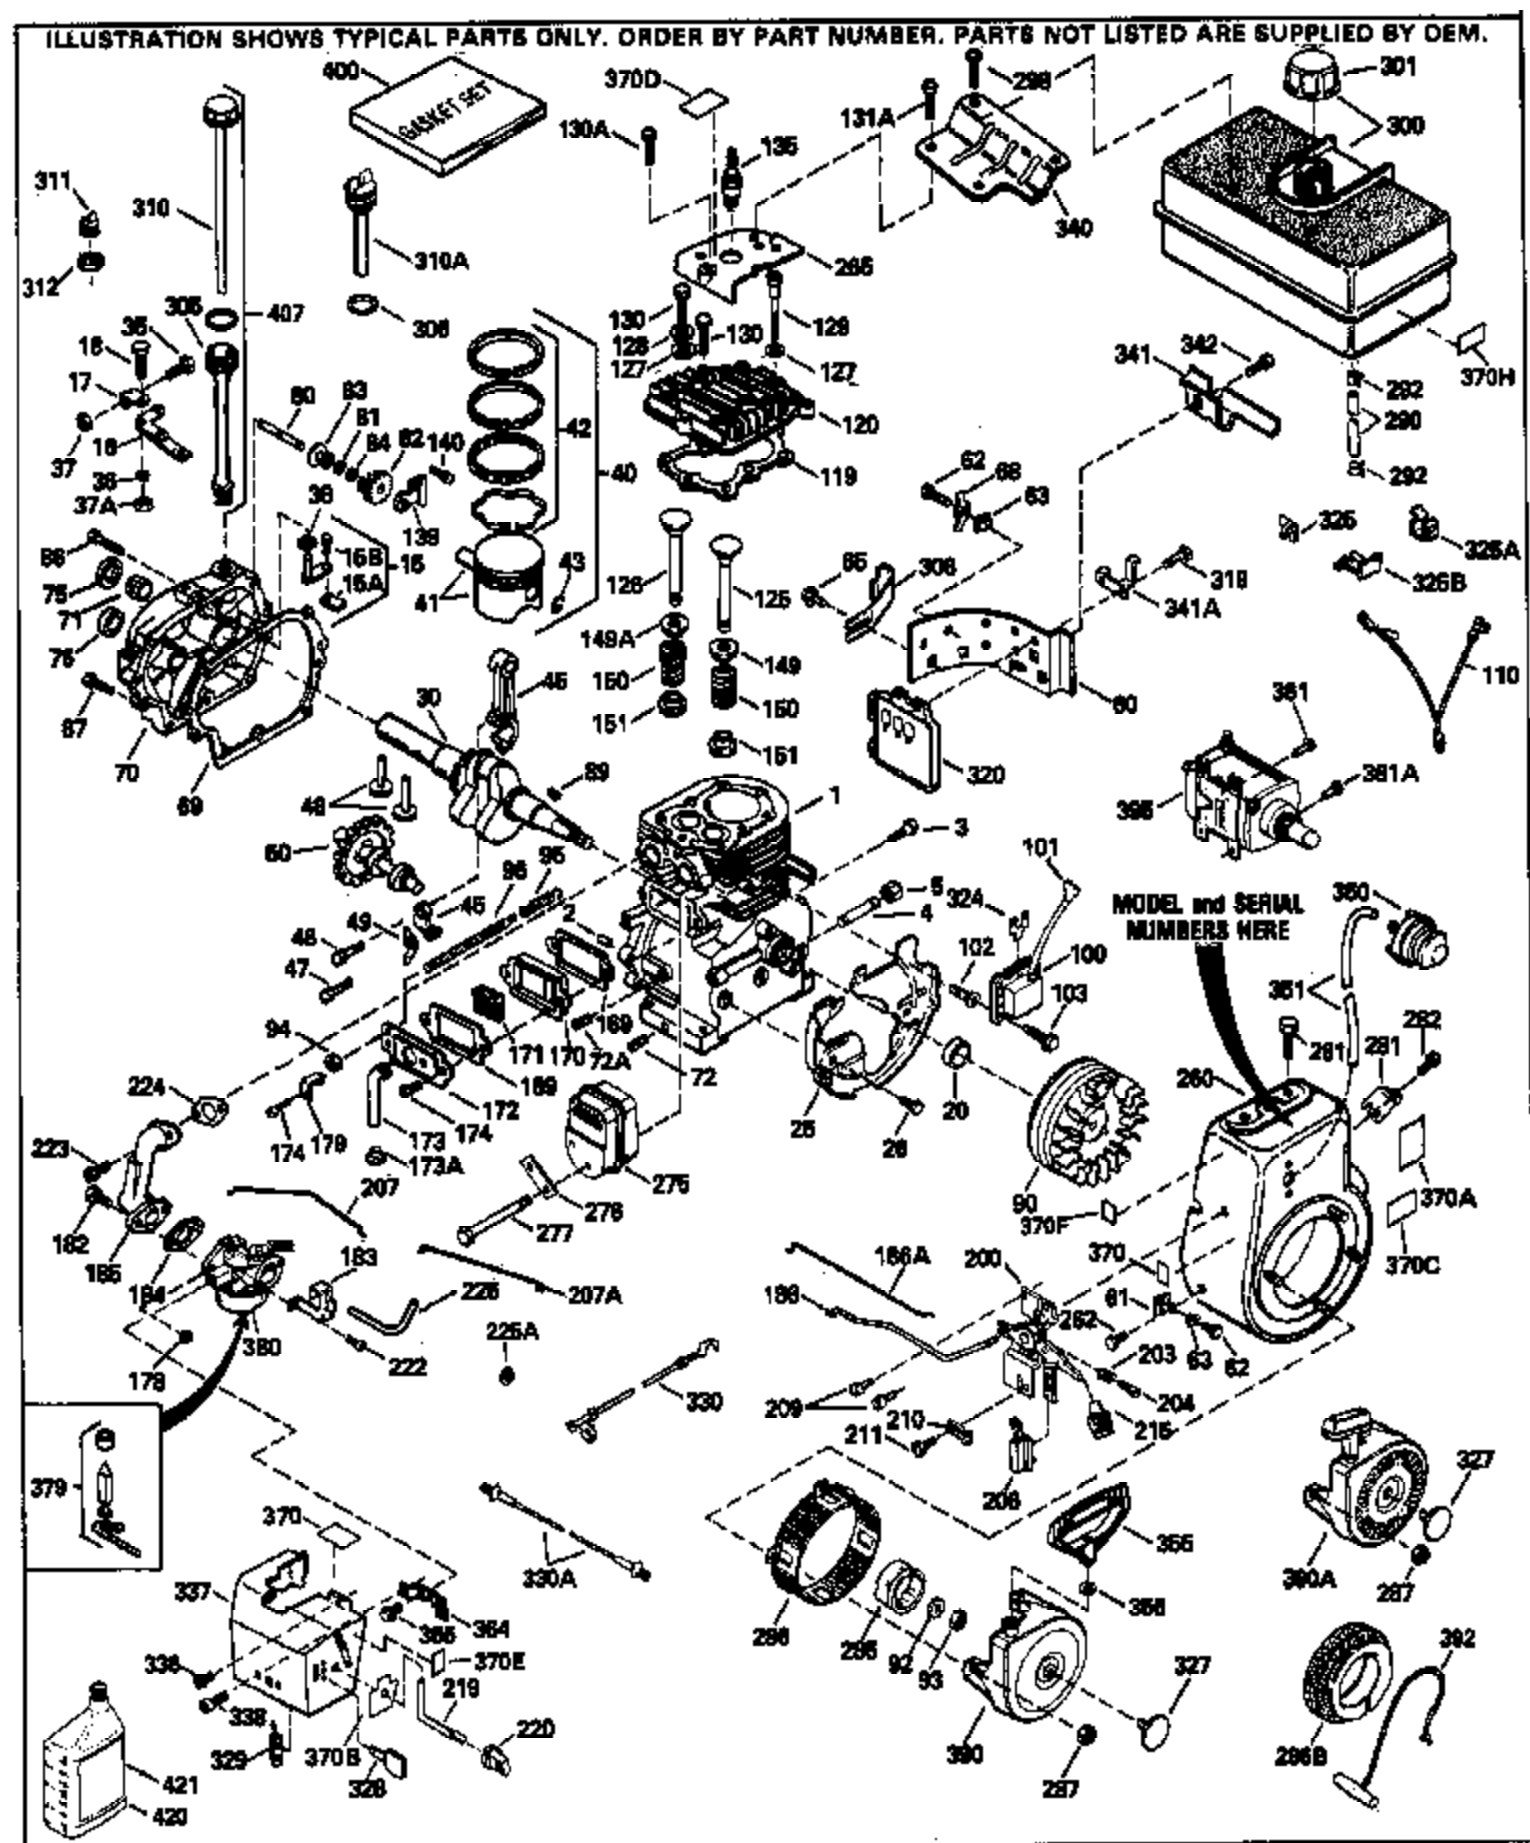


Ref #	Part Number	Qty	Description
1	35385		Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
2	27652		Pin, Dowel
15B	650494		Screw, 6-40 x 5/16"
15	30699C		Rod Assy., Governor (Incl. 15A & 15B)
15A	30700		Yoke, Governor
16	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
20	35319		Seal, Oil
25	36460		Baffle, Blower housing
26	650561		Screw, 1/4-20 x 5/8"
30	35372A		Crankshaft
35	29826		Screw, 10-32 x 3/4"
36	29918		Lockwasher, # 8 E.T.
37	29216		Nut & Lockwasher, 10-32
37A	30322		Locknut, 8-32
38	29642		Ring, Retaining
40	34552		Piston, Pin & Ring Set (Std.) (3-1/8" Bore)
40	34553		Piston, Pin & Ring Set (.010" OS)
40	34554		Piston, Pin & Ring Set (.020" OS)
41	34329A		Piston & Pin Ass'y. (3-1/8")(Std.)(In cl. 43)
41	34330A		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34331A		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34332		Ring Set (Std.) (3-1/8" Bore)
42	34333		Ring Set (.010" OS)
42	34334		Ring Set (.020" OS)
43	27888		Ring, Piston pin retaining
45	35373A		Rod Assy., Connecting (Incl. 49)
46	650908		Bolt, Connecting rod
47	650882		Bolt, Connecting rod
48	34034		Lifter, Valve
49	35374		Dipper, Oil
50	35375		Camshaft (MCR)
60	33273A		Extension, Blower housing
65	650128		Screw, 10-24 x 1/2"
69	35262		* Gasket, Cylinder cover
70	35376		Cover, Cylinder (Incl. 75, 80, 311 & 312)
71	35377		Bushing, Crankshaft
72	27642		Plug, Oil drain
75	35319		Seal, Oil
80	31845		Shaft, Mechanical governor
81	30590A		Washer, Flat
82	35378		Gear Assy., Governor (Incl. 81)
83	30588A		Spool, Governor
84	29193		Ring, Retaining
86	650833		Screw, 1/4-20 x 1-3/16"
87	650832		Screw, 1/4-20 x 1-11/16"
89	32589		Key, Flywheel
90	611091		Flywheel (w/ring gear)
92	650880		Washer, Belleville
93	650881		Hex Nut, 5/8-18
100	35135		Lamination Assy., Solid State
102	650872		Stud, Lamination mounting
103	650814		Screw, Torx T-15, 10-24 x 1"
119	34041A		* Gasket, Head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Incl. 151)

Ref #	Part Number	Qty	Description
126	34035		Intake Valve (Std.) (Incl. 151)
126	34036		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer (Use as req., but not w/6021A screw)
128	650690		Washer, Belleville
129	650727		Screw, 5/16-18 x 1-3/4" (Use as required)
130A	6021A		Screw, 5/16-18 x 1-1/2" (Use as req.,but not w/650691 washer)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
131A	650713		Screw, 5/16-18 x 5/8" (Use as required)
139	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
149	27882		Cap, Upper valve spring
149A	27882		Cap, Upper valve spring
149A	35862		Seal Assy., Intake valve
150	27881		Spring, Valve
151	32581		Cap, Lower valve spring
169	27896A		* Gasket, Breather cover
170	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Valve spring
173	35350		Tube, Breather
178	29752		Nut & Lockwasher, 1/4-28
182	30088A		Screw, 1/4-28 x 1"
184	33263		* Gasket, Carburetor
185	34707		Pipe, Intake
186	34661		Link, Governor
200	34677		Control Bracket
203	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
206	610973		Terminal Assy. (Use as required)
207	33878		Link, Governor-to-throttle
209	650821		Screw, 10-32 x 1/2"
215	32410		Knob, Control
223	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
224	27915A		* Gasket, Intake pipe
242	33267		Air Cleaner Bracket
250	33269A		Air Cleaner Cover
260	33375D		Blower Housing (For electric starter)
261	650788		Screw, 5/16-18 x 3/4"
262	29747B		Screw, 5/16-24 x 21/32"
265	33272B		Cover, Cylinder head
275	33280A		Muffler
276	35740		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16"
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 3/8"
285	35287		Cup, Starter
286	35446		Screen, Starter (Stationary)
287	29752		Nut & Lockwasher, 1/4-28
290	30705		Fuel Line (Braided 16") (41 cm)
292	26460		Clamp, Fuel line
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301	35355		Fuel Cap


Ref #	Part Number	Qty	Description
305	35554		Tube, Oil fill
306	35499		"O" Ring
308	35540		Clip, Fill tube
310	35555		Dipstick
325B	29443		Clip, Fuel line (Use as required)
325	34246		Clip, Ground wire (Use as required)
327	35392		Plug, Starter
329	610973		Terminal Assy.
330	34069		Wire Harness (6-3/4") (7 Amp)
340	34154		Plate, Fuel tank mounting
342	650561		Screw, 1/4-20 x 5/8"
370	34346		Decal, Instruction
370	35274		Decal, Instruction
370F	33962		Decal, Control
370J	34870		Decal, Instruction Can be used on HM80 with diecast starter.
370A	34686		Decal, Name
370B	34387		Decal, Instruction Can be used on HM80 with stamped steel recoil starter.
379	631021		Inlet Needle, Seat & Clip Assy.
380	632351		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A3-14 for breakdown or Fiche 18A-2, Grid F-7)
390A	590685		Rewind Starter (Refer to Division 5, Section C, page 30 for breakdown or Fiche 18A-2, Grid G-1)
400	33279G		Gasket Set (Incl. items marked*)
407	35836		Fill Tube & Dipstick Assy. (Incl. 306 & 308)
420	730225		SAE 30, 4-Cycle Engine Oil (Quart)

An exploded view diagram of a carburetor assembly. The main body is at the top right, with various jets and needles shown below it. Components are labeled with numbers: 1 (main body), 2 (needle), 6 (jet), 72 (jet), 109 (needle), 110A (needle), 111 (float valve), 112 (float bowl gasket), 113 (float pin), 114 (float arm), 115 (float arm pin), 116 (float arm pin), 128 (float arm pin), 129 (float arm pin), 130 (float arm pin), 131 (float arm pin), 132 (float arm pin), 133 (float arm pin), 134 (float arm pin), 135 (float arm pin), 136 (float arm pin), 137 (float arm pin), 138 (float arm pin), 139 (float arm pin), 140 (float arm pin), 141 (float arm pin), 142 (float arm pin), 143 (float arm pin), 144 (float arm pin), 145 (float arm pin), 146 (float arm pin), 147 (float arm pin), 148 (float arm pin), 149 (float arm pin), 150 (float arm pin), 151 (float arm pin), 152 (float arm pin), 153 (float arm pin), 154 (float arm pin), 155 (float arm pin), 156 (float arm pin), 157 (float arm pin), 158 (float arm pin), 159 (float arm pin), 160 (float arm pin), 161 (float arm pin), 162 (float arm pin), 163 (float arm pin), 164 (float arm pin), 165 (float arm pin), 166 (float arm pin), 167 (float arm pin), 168 (float arm pin), 169 (float arm pin), 170 (float arm pin), 171 (float arm pin), 172 (float arm pin), 173 (float arm pin), 174 (float arm pin), 175 (float arm pin), 176 (float arm pin), 177 (float arm pin), 178 (float arm pin), 179 (float arm pin), 180 (float arm pin), 181 (float arm pin), 182 (float arm pin), 183 (float arm pin), 184 (float arm pin), 185 (float arm pin), 186 (float arm pin), 187 (float arm pin), 188 (float arm pin), 189 (float arm pin), 190 (float arm pin), 191 (float arm pin), 192 (float arm pin), 193 (float arm pin), 194 (float arm pin), 195 (float arm pin), 196 (float arm pin), 197 (float arm pin), 198 (float arm pin), 199 (float arm pin), 200 (float arm pin), 201 (float arm pin), 202 (float arm pin), 203 (float arm pin), 204 (float arm pin), 205 (float arm pin), 206 (float arm pin), 207 (float arm pin), 208 (float arm pin), 209 (float arm pin), 210 (float arm pin), 211 (float arm pin), 212 (float arm pin), 213 (float arm pin), 214 (float arm pin), 215 (float arm pin), 216 (float arm pin), 217 (float arm pin), 218 (float arm pin), 219 (float arm pin), 220 (float arm pin), 221 (float arm pin), 222 (float arm pin), 223 (float arm pin), 224 (float arm pin), 225 (float arm pin), 226 (float arm pin), 227 (float arm pin), 228 (float arm pin), 229 (float arm pin), 230 (float arm pin), 231 (float arm pin), 232 (float arm pin), 233 (float arm pin), 234 (float arm pin), 235 (float arm pin), 236 (float arm pin), 237 (float arm pin), 238 (float arm pin), 239 (float arm pin), 240 (float arm pin), 241 (float arm pin), 242 (float arm pin), 243 (float arm pin), 244 (float arm pin), 245 (float arm pin), 246 (float arm pin), 247 (float arm pin), 248 (float arm pin), 249 (float arm pin), 250 (float arm pin), 251 (float arm pin), 252 (float arm pin), 253 (float arm pin), 254 (float arm pin), 255 (float arm pin), 256 (float arm pin), 257 (float arm pin), 258 (float arm pin), 259 (float arm pin), 260 (float arm pin), 261 (float arm pin), 262 (float arm pin), 263 (float arm pin), 264 (float arm pin), 265 (float arm pin), 266 (float arm pin), 267 (float arm pin), 268 (float arm pin), 269 (float arm pin), 270 (float arm pin), 271 (float arm pin), 272 (float arm pin), 273 (float arm pin), 274 (float arm pin), 275 (float arm pin), 276 (float arm pin), 277 (float arm pin), 278 (float arm pin), 279 (float arm pin), 280 (float arm pin), 281 (float arm pin), 282 (float arm pin), 283 (float arm pin), 284 (float arm pin), 285 (float arm pin), 286 (float arm pin), 287 (float arm pin), 288 (float arm pin), 289 (float arm pin), 290 (float arm pin), 291 (float arm pin), 292 (float arm pin), 293 (float arm pin), 294 (float arm pin), 295 (float arm pin), 296 (float arm pin), 297 (float arm pin), 298 (float arm pin), 299 (float arm pin), 300 (float arm pin).

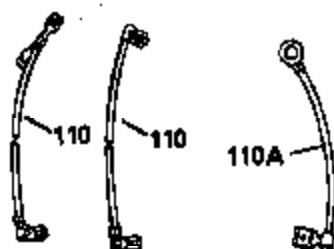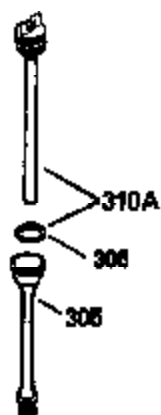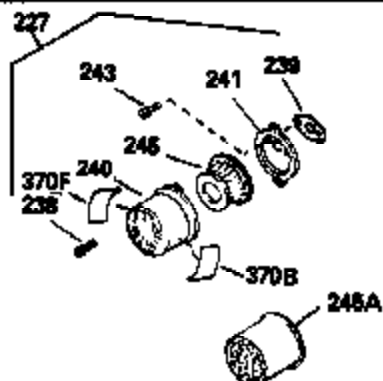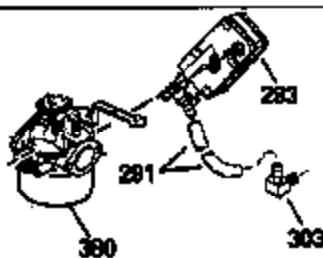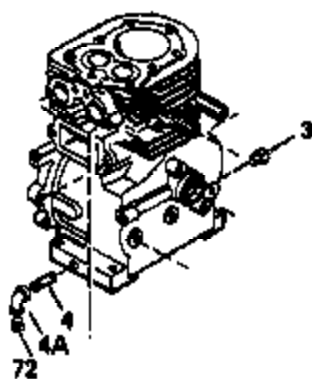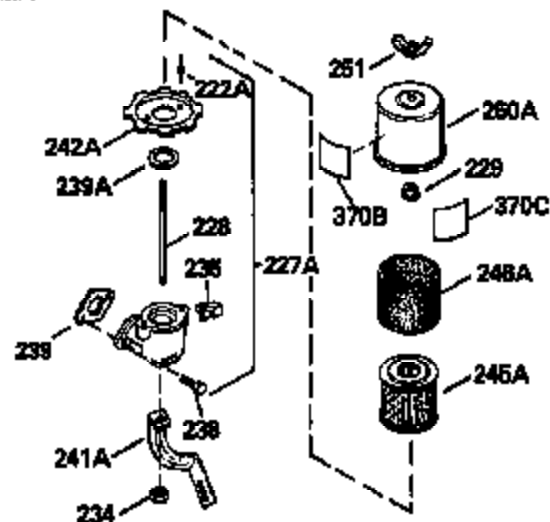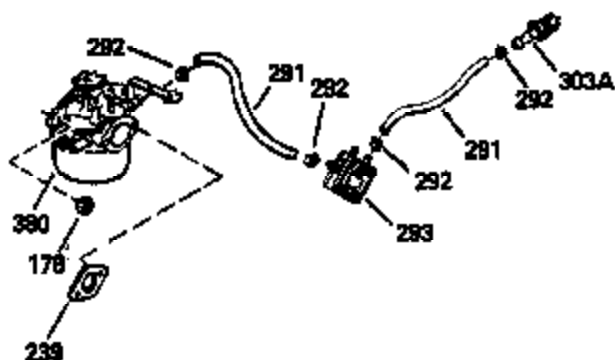

Ref #	Part Number	Qty	Description
1	35385		Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
2	27652		Pin, Dowel
72	27642		Plug, Oil drain
169	27896A		* Gasket, Breather cover
170	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Valve spring
173	35350		Tube, Breather
178	29752		Nut & Lockwasher, 1/4-28
207	33878		Link, Governor-to-throttle
239	27272A		* Air Cleaner Gasket
240	33266		Air Cleaner Body
242	33267		Air Cleaner Bracket
243	28820		Screw, 10-32 x 1/2"
245	33268		Air Cleaner Filter
250	33269A		Air Cleaner Cover
251	650513		Nut, Wing, 1/4-20
275	33280A		Muffler
276	35740		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16"
292	26460		Clamp, Fuel line
305	35554		Tube, Oil fill
306	35499		"O" Ring
370J	34870		Decal, Instruction Can be used on HM80 with diecast starter.
370B	34387		Decal, Instruction Can be used on HM80 with stamped steel recoil starter.
370F	33962		Decal, Control
380	632351		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A3-14 for breakdown or Fiche 18A-2, Grid F-7)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

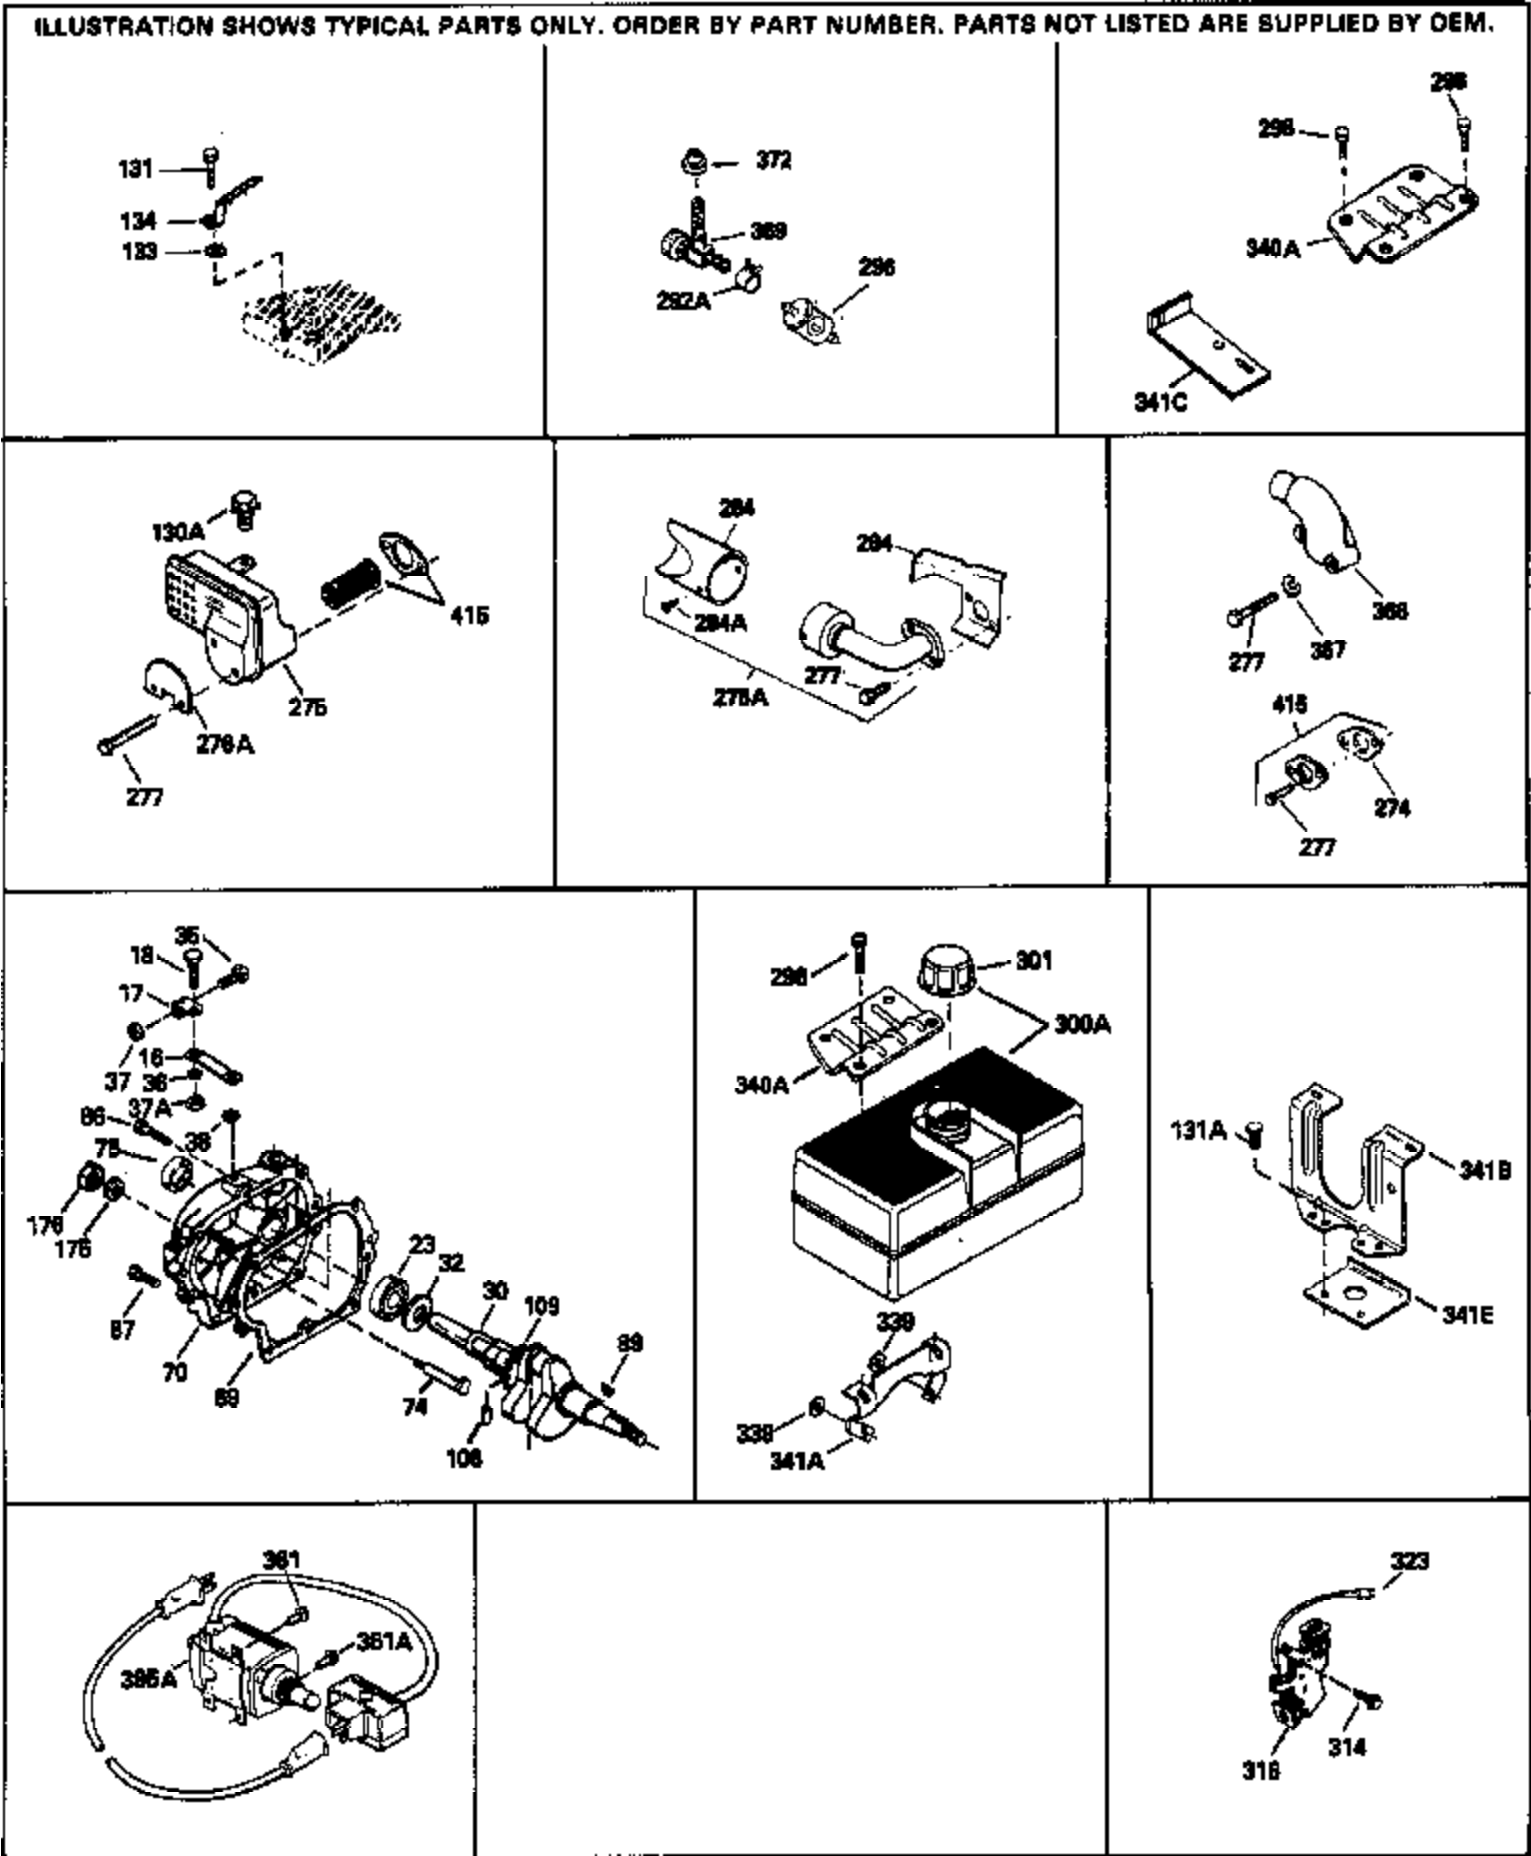

Ref #	Part Number	Qty	Description
16	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
30	35372A		Crankshaft
35	29826		Screw, 10-32 x 3/4"
36	29918		Lockwasher, # 8 E.T.
37	29216		Nut & Lockwasher, 10-32
37A	30322		Locknut, 8-32
38	29642		Ring, Retaining
69	35262		* Gasket, Cylinder cover
70	35376		Cover, Cylinder (Incl. 75, 80, 311 & 312)
75	35319		Seal, Oil
86	650833		Screw, 1/4-20 x 1-3/16"
87	650832		Screw, 1/4-20 x 1-11/16"
89	32589		Key, Flywheel
130A	6021A		Screw, 5/16-18 x 1-1/2" (Use as req.,but not w/650691 washer)
131	650802		Screw, 1/4-20 x 5/8" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8" (Use as require d)
242	33267		Air Cleaner Bracket
250	33269A		Air Cleaner Cover
274	35865		Gasket, Exhaust (Use as required)
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16"
298	650665		Screw, 1/4-15 x 7/8"
301	35355		Fuel Cap
341C	34155		Bracket, Fuel tank mounting
370J	34870		Decal, Instruction Can be used on HM80 with diecast starter.
415	730130		Exh.Adaptor Kit (Incl.274,277)(As req uired)

This exploded perspective view shows the seat assembly components. The seat backrest (300A) is shown with a central pivot point (301). The seat cushion (300B) is shown below it. The seat base (340B) is shown at the bottom, with various mounting points (341D, 342A, 342B) and a central pivot point (341C). The seat backrest (300A) is shown with a central pivot point (301) and a mounting point (300A). The seat cushion (300B) is shown with a central pivot point (301) and a mounting point (300B). The seat base (340B) is shown with a central pivot point (341C) and a mounting point (341D). The seat backrest (300A) is shown with a central pivot point (301) and a mounting point (300A). The seat cushion (300B) is shown with a central pivot point (301) and a mounting point (300B). The seat base (340B) is shown with a central pivot point (341C) and a mounting point (341D).

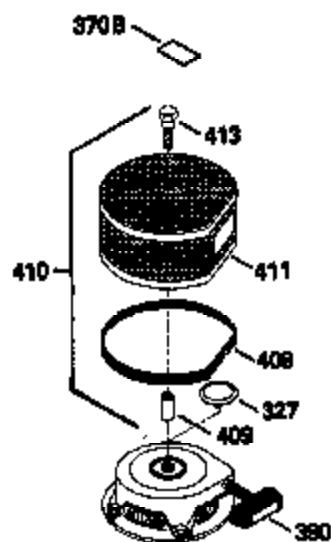
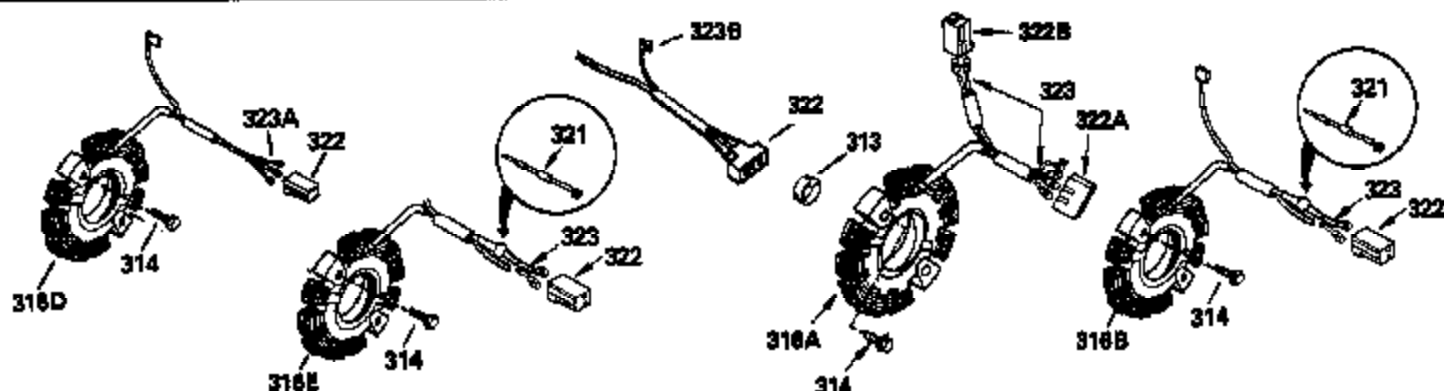


Diagram showing a ring (426) and four washers (427) positioned below it, with a bracket (425) indicating the assembly area.

275C

**OPTIONAL
ADD-ON ALTERNATOR
AC LIGHTING OR DC CHARGING**

Ref #	Part Number	Qty	Description
103	650814		Screw, Torx T-15, 10-24 x 1"
242	33267		Air Cleaner Bracket
250	33269A		Air Cleaner Cover
275C	35824		Muffler (Optional quiet muffler)
277A	650696		Screw, 5/16-18 x 2-3/4" (Used with 27 6A)
301	35355		Fuel Cap
327	35392		Plug, Starter
342	650561		Screw, 1/4-20 x 5/8"
370B	34387		Decal, Instruction Can be used on HM80 with stamped steel recoil starter.
370J	34870		Decal, Instruction Can be used on HM80 with diecast starter.
408	35570		Seal, Screen (Can be used on HM80 with stamped steel recoil starter.)
409	35569		Spacer, Screen
410	730573		Debris Screen Kit (Incl. 327, 370B, 408, 409, 411 & 413)
411	35568		Screen, Debris
413	650907		Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with stamped steel recoil starter)
415	730130		Exh.Adaptor Kit (Incl.274,277)(As required)
425	730572		Starter Muff Kit (Incl. 370J, 426 & 4 27)
426	34687		Air cleaner, Starter
427	34869		Starter Air Cleaner Bracket (Optional)
429	650868		Screw, 8-18 x 1-1/8" (3 Required)
430	611077		Alternator, Add on
431	590609		Centering tube (Use with engines equipped with diecast aluminum starter)
431	590610		Centering tube
432	611078		A.C. Lighting Connector
432	611079		D.C. Charging Connector
433	590611		Alternator Shaft (4.00") (Use with engines equipped with diecast aluminum starter)
433	590636		Alternator Shaft (Use with engines equipped with stamped steel starter) (Use as required) (Refer to Mechanic's Handbook for installation instructions).