



		Qty	Description
	35385		Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
	27652		Pin, Dowel
	650494		Screw, 6-40 x 5/16"
	30700		Yoke, Governor
15	30699C		Rod Assy., Governor (Incl. 15A & 15B)
16	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
20	35319		Seal, Oil
25	35326		Baffle, Blower housing
26	650561		Screw, 1/4-20 x 5/8"
30	35425A		Crankshaft
35	29826		Screw, 10-32 x 3/4"
36	29918		Lockwasher, # 8 E.T.
37A	30322		Locknut, Hex "Keps", 8-32
37	29216		Nut & Lockwasher, 10-32 "Keps"
38	29642		Ring, Retaining
	34552		Piston, Pin & Ring Set (Std.)(Incl. 4 1,42 & 43)
40	34553		Piston, Pin & Ring Set (.010)(Incl. 4 1,42 & 43)
	34554		Piston, Pin & Ring Set (.020)(Incl. 4 1,42 & 43)
	34329A		Piston & Pin Ass'y. (Std.) (Incl. 43)
	34330A		Piston & Pin Ass'y. (.010) (Incl. 43)
	34331A		Piston & Pin Ass'y. (.020) (Incl. 43)
	34332		Ring Set (Std.)
	34333		Ring Set (.010)
	34334		Ring Set (.020)
	35373A		Connecting Rod Ass'y. (Incl. 49)
	650908		Connecting Rod Bolt
	650882		Connecting Rod Bolt
	34034		Lifter, Valve
	35374		Dipper, Oil
	35375		Camshaft (MCR)
	33273A		Extension, Blower housing
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
	650128		Screw, 10-24 x 1/2"
	33356		Terminal, Ground
	35262		* Gasket, Cylinder cover
	35376		Cover, Cylinder (Incl. 75, 80, 311 & 312)
	35377		Bushing, Crankshaft
	27642		Plug, Oil drain
	35319		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16"
	650832		Screw, 1/4-20 x 1-11/16"
	32589		Key, Flywheel
	611091		Flywheel (w/ring gear)
	650880		Washer, Belleville
	650881		Nut, Hex (5/8-18) (Add-on alternator)
	33450		Nut Lock, 10-32
	30886A		Spring, Extension
	30845A		Bolt, Governor spring adjusting
97			Lockwasher, Heavy split, #10 (Buy loc ally)
	35135		Lamination Assy., Solid State
100			

		Qty	
101	610118		Cover, Spark plug (Use as required)
101A	27276		Cover, Spark plug
	650872		Stud, Lamination mounting
	650814		Screw, Torx T-15, 10-24 x 1"
	35183		Ground Wire
	34041A		* Gasket, Head
	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
			· · · ·
	650691		Washer (Use as req., but not w/6021A screw)
	650690		Washer, Belleville
129	650727		Screw, 5/16-18 x 1-3/4" (Use as required)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
130A	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse with
			650691 washer)
404 4	CE0712		,
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
135	33636		Resistor Spark Plug (RJ17LM)
139	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather cover
	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Valve spring
173	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	650597		Screw, 10-24 x 5/8"
	29752		Nut & Lockwasher, 1/4-28
	30593		Clip, Primer line (Use as required)
	30088A		Screw, 1/4-28 x 1"
184	33263		* Gasket, Carburetor
185	34707		Pipe, Intake
	610973		Terminal Assy. (Use as required)
	33878		Link, Governor-to-throttle
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8 "
	27915A		* Gasket, Intake pipe
	650824		Stud, 1/4-20 x 7.33 (Use as required)
228A	650851		Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
			elbow)
2/12	33267		Bracket, Air cleaner
			•
	33269A		Cover, Air cleaner
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4" (Use as require d)
262	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	391026		Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler
2,00			can be used on any model.)
			Can be used on any model.
285	35287		Cup, Starter
			-


Ref #	Part Number	Qty Description
286	35446	Screen, Starter (Stationary)
287	29752	Nut & Lockwasher, 1/4-28
290	29774	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
	30705	Fuel Line (Braided 16")(41 cm)(Use as req.)
	30962	Fuel Line (Braided 32")(81 cm)(Use as req.)
	26460	Clamp, Fuel line (Use as required)
	650665	Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	54150A	builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
201	410144B	Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16"
301	33032	I.D.)
301	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (1-3/16" I.D)
	35355	Fuel Cap (Red plastic) (1-1/2" I.D.)
306	29673	* Gasket, Oil fill
310A	35941	Dipstick (Incl. 306)
325	29443	Clip, Fuel line (Use as required)
325	34246	Clip, Ground wire (Use as required)
	35392	Plug, Starter
	34154	Plate, Fuel tank mounting
	34155	Bracket, Fuel tank mounting
	650561	Screw, 1/4-20 x 5/8"
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	34387	Decal, Instruction Can be used on HM80 with stamped steel
3700		recoil starter.
370	34346	Decal, Instruction
	34870	Decal, Instruction Can be used on HM80 with diecast starter.
	34686	Decal, Name
	631021	Inlet Needle, Seat & Clip Assy.
	632351	Carburetor (Incl. 184) (Refer to Division 5, Section A, page
000	002001	188 for breakdown or Fiche18A-1, Grid F-5)
390A	590633	Rewind Starter (Refer to Division 5, Section C, page 30 for
20 5	25762 4	breakdown or Fiche 18A-1, Grid G-5)
395	35763A	Electric Starter Motor (12 Volt) (Refer to service number
		stamped on end cap of motor, or on decal for identification.
		Refer to Division 5, Section D, Page 20 for breakdown or
		Fiche 18A-1, Grids G-9, G-10 or G-11)
395	33329D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel. Refer to service number
		stamped on end cap of motor, or on decal for identification.
		Ref
400	33279G	Gasket Set (Incl. items marked*)
	730225	SAE 30, 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30, 4-Cycle Engine Oil (Quart)
		, , , , , , , , , , , , , , , , , , , ,

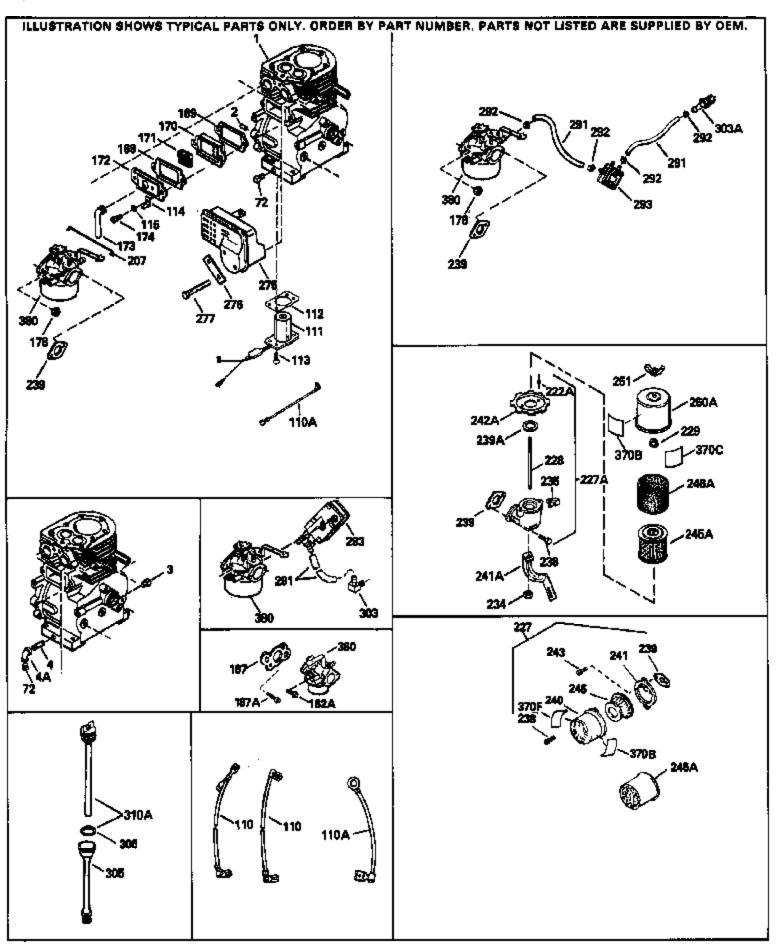

		Qty	Description
1	35385		Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
	27652		Pin, Dowel
72	27642		Plug, Oil drain
97			Lockwasher, Heavy split, #10 (Buy loc ally)
101A	27276		Cover, Spark plug
110	35183		Ground Wire
	26073		Washer, Flat (Use as required)
127A	650570		Washer, Flat (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	650597		Screw, 10-24 x 5/8"
	29752		Nut & Lockwasher, 1/4-28
	30593		Clip, Primer line (Use as required)
	33878		Link, Governor-to-throttle
	730127		Air Cleaner Ass'y. (Incl.238,239,240,241,243,245 & 370)
221	730127		(Use as required)
			(Use as required)
227	730164		Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243 & 245) (Use
			as required)
220 4	650804		Stud $\frac{1}{4}$ 20 x 7.22 (Les es required)
	650824		Stud, 1/4-20 x 7.33 (Use as required)
220A	650851		Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
			elbow)
239	27272A		* Gasket, Air cleaner
239	27272A		* Gasket, Air cleaner
241	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	28820		Screw, 10-32 x 1/2"
	34700		Element, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing, 1/2-20
	391026		Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler
2100	001020		can be used on any model.)
			can be used on any model.
	26460		Clamp, Fuel line (Use as required)
306	29673		* Gasket, Oil fill
310A	35941		Dipstick (Incl. 306)
	34870		Decal, Instruction Can be used on HM80 with diecast starter
	34387		Decal, Instruction Can be used on HM80 with stamped steel
			recoil starter.
	222254		
380	632351		Carburetor (Incl. 184) (Refer to Division 5, Section A, page 188 for breakdown or Fiche18A-1, Grid F-5)

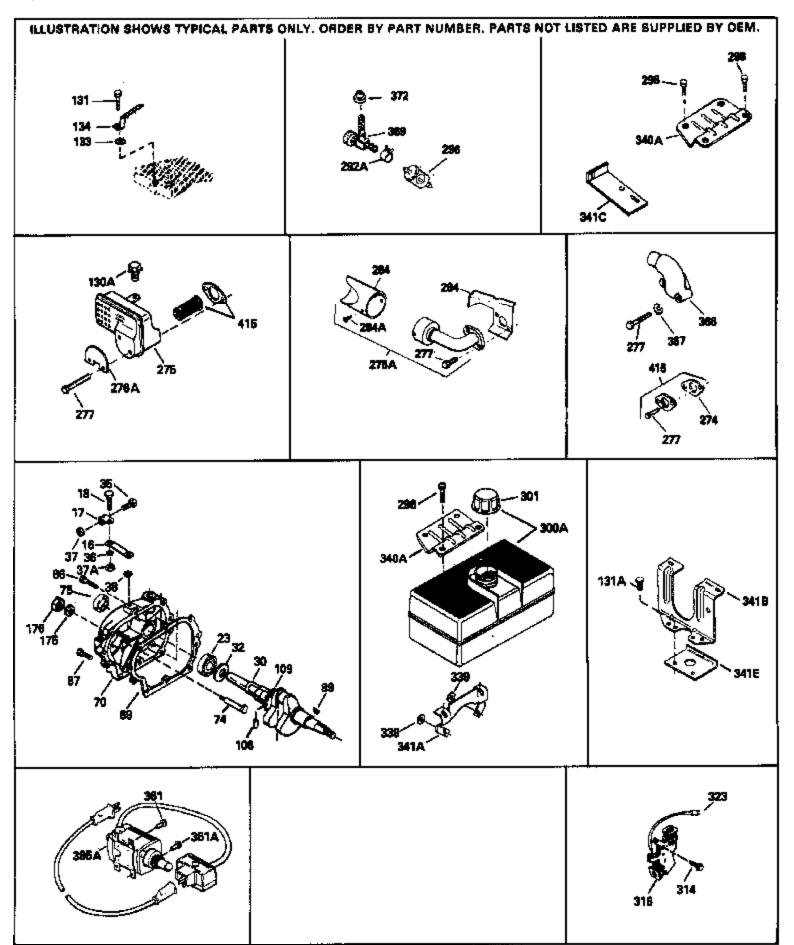

	Part Number	Qty	Description
16	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
	35425A		Crankshaft
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, # 8 E.T.
	29216		Nut & Lockwasher, 10-32 "Keps"
	30322		Locknut, Hex "Keps", 8-32
	29642		Ring, Retaining
	35262		
			* Gasket, Cylinder cover
	35376		Cover, Cylinder (Incl. 75, 80, 311 & 312)
	31855		Retainer, Bearing
	35319		Seal, Oil
	650833		Screw, 1/4-20 x 1-3/16"
	650832		Screw, 1/4-20 x 1-11/16"
	32589		Key, Flywheel
97			Lockwasher, Heavy split, #10 (Buy loc ally)
101A	27276		Cover, Spark plug
127A	26073		Washer, Flat (Use as required)
127A	650570		Washer, Flat (Use as required)
130A	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse with
			650691 washer)
404.4	050740		
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	650802		Screw, 1/4-20 x 5/8" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8" (Use as required)
133	650890		Washer, Lock, 5/16"
134	30747		Clip, Spark plug shorting
179B	30593		Clip, Primer line (Use as required)
228A	650824		Stud, 1/4-20 x 7.33 (Use as required)
228A	650851		Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
			elbow)
242	22267		
	33267		Bracket, Air cleaner
	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust (Use as required)
275B	391026		Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler
			can be used on any model.)
298	650665		Screw, 1/4-15 x 7/8"
	410144B		Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16"
001	00002		I.D.)
- -·	0.404.0		
301	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
			(1-3/16" I.D)
301	35355		Fuel Cap (Red plastic) (1-1/2" I.D.)
	35038		Spacer, Tank
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34870		Decal, Instruction Can be used on HM80 with diecast starter.
	730130		Exh.Adapter Kit (Incl.274,277)(Use as req.)
+15	100100		$-21.5 \operatorname{req}(0) \operatorname{req}(1) \operatorname{req}(1) \operatorname{req}(1)$

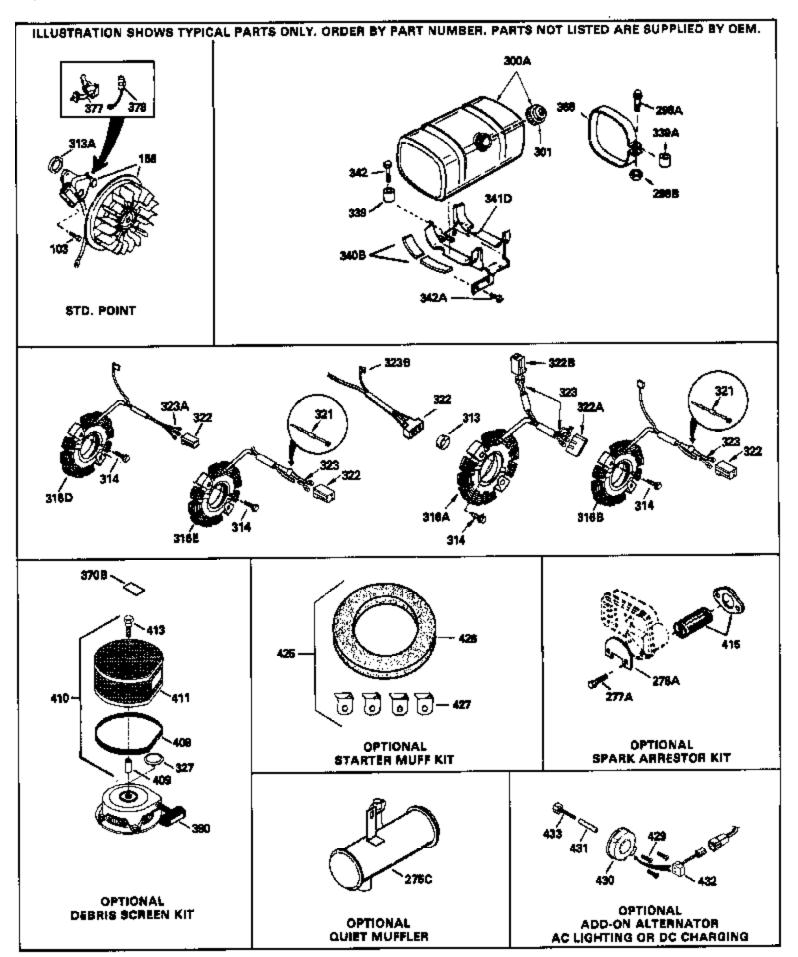

97 101A 103 127A 127A 127A 127A 228A	Part Number 27276 650814 26073 650570 30593 650824 650851	Description Lockwasher, Heavy split, #10 (Buy loc ally) Cover, Spark plug Screw, Torx T-15, 10-24 x 1" Washer, Flat (Use as required) Washer, Flat (Use as required) Clip, Primer line (Use as required) Stud, 1/4-20 x 7.33 (Use as required) Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru elbow)
250B	33267 33269A 391026	Bracket, Air cleaner Cover, Air cleaner Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler can be used on any model.)
277A 301	35824 650696 410144B 33032	Muffler (Optional quiet muffler) Screw, 5/16-18x2-3/4" (Used with 276A) Fuel Cap (White Plastic)(Std)(1-1/2" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16" I.D.)
301	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (1-3/16" I.D)
327 339 342 370J	35355 35392 35038 650561 34870 34387	Fuel Cap (Red plastic) (1-1/2" I.D.) Plug, Starter Spacer, Tank Screw, 1/4-20 x 5/8" Decal, Instruction Can be used on HM80 with diecast starter. Decal, Instruction Can be used on HM80 with stamped steel recoil starter.
408	35570	Screen Seal (Can be used on HM80 with stamped steel recoil starter)
409	35569	Spacer (Can be used on HM80 with stamped steel recoil starter)
410	730573	Debris Screen Kit (Incl. 360, 370B, 387, 411 &413) (Can be used on HM80 with stamped steel recoil starter)
411	35568	Debris Screen (Can be used on HM80 with stamped steel recoil starter)
413	650907	Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with stamped steel recoil starter)
	730130 730572	Exh.Adapter Kit (Incl.274,277)(Use as req.) Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on HM80 with die cast starter)
429	650868	Screw, 8-18 x 1-1/8" (3 Required) (Use as required) (Refer to Mechanics Handbook for installation instructions).
430	611077	Alternator, Add on (Use as required) (Refer to Mechanics Handbook for installation instructions).
431	590609	Centering tube (Use with engines equipped with die cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions)
431	590610	Centering tube (Use as required) (Refer to Mechanics Handbook for installation instructions).

Ref #	Part Number	Qty	Description
432	611078	-	A.C. Lighting Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611079		D.C. Charging Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590611		Alternator Shaft (4.00") (Use with engines equipped with cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590636		Alternator Shaft (Use with engines equipped with stamped steel starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).