



	Part Number	Qty	Description
			Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
	27652		Pin, Dowel
	650494		Screw, 6-40 x 5/16"
	30700		Yoke, Governor
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	33454		Governor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
	35319		Seal, Oil
	35326		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	35441A		Crankshaft
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, # 8 E.T.
	29216		Nut & Lockwasher, 10-32 "Keps"
	30322		Locknut, Hex "Keps", 8-32
	29642		Ring, Retaining
	34552		Piston, Pin & Ring Assy. (Std.)
	34553		Piston, Pin & Ring Assy. (.010 O/S)
40	34554		Piston, Pin & Ring Assy. (.020 O/S)
	34329A		Piston & Pin Assy. (Std.)
	34330A		Piston & Pin Assy. (.010 O/S)
	34331A		Piston & Pin Assy. (.020 O/S)
42	34332		Ring Set, (Std.) (3-1/8")
	34333		Ring Set, (.010 O/S)
42	34334		Ring Set, (.020 O/S)
43	27888		Ring, Piston Pin Retaining
	35373A		Rod Assy., Connecting (Incl. 49)
46	650908		Bolt, Connecting rod
	650882		Bolt, Connecting rod
48	34034		Lifter, Valve
49	35374		Dipper, Oil
50	35375		Camshaft (MCR)
60	33273A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	35262		* Gasket, Cylinder cover
	35376		Cover, Cylinder (Incl. 75, 80, 311 & 312)
	35377		Bushing, Crankshaft
	27642		Plug, Oil drain
75	35319		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16"
	650832		Screw, 1/4-20 x 1-11/16"
	32589		Key, Flywheel
	611091		Flywheel (w/ring gear)
	650880		Washer, Belleville
	650881		Nut, Hex (5/8-18) (Add-on alternator)
	33450		Nut Lock, 10-32
95	30886A		Spring, Extension
	30845A		Bolt, Governor spring adjusting
97			Lockwasher, Heavy split, #10 (Buy loc ally)
100	35135		Lamination Assy., Solid State
101	610118		Cover, Spark plug (Use as required)
102	650872		Stud, Lamination mounting
			-

		Description
103	650814	Screw, Torx T-15, 10-24 x 1"
119	34041A	* Gasket, Head
120	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Use as req., but not w/6021A screw)
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	650690	Washer, Belleville
	650727	Screw, 5/16-18 x 1-3/4" (Use as required)
130A	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse with
		650691 washer)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, $5/16-18 \times 5/8"$ (Use as required)
	792028	
		Screw, 5/16-18 x 7/8" (Use as require d)
	33636	Resistor Spark Plug (RJ17LM)
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
149	27882	Cap, Upper valve spring
150	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	
		Cover, Valve spring
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650597	Screw, 10-24 x 5/8"
	29752	Nut & Lockwasher, 1/4-28
179B	30593	Clip, Primer line (Use as required)
182	30088A	Screw, 1/4-28 x 1"
184	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	610973	Terminal Assy. (Use as required)
	33878	Link, Governor-to-throttle
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8 "
	27915A	* Gasket, Intake pipe
	650824	Stud, 1/4-20 x 7.33 (Use as required)
228A	650851	Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
		elbow)
2/12	33267	Bracket, Air cleaner
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4" (Use as require d)
262	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275B	391026	Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler
		can be used on any model.)
	22222 A	• ,
	33280A	Muffler
	31588	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16"
	35287	Cup, Starter
285	35287 35446	Cup, Starter Screen, Starter (Stationary)


		/ Description
287	29752	Nut & Lockwasher, 1/4-28
290	29774	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
	30705	Fuel Line (Braided 16")(41 cm)(Use as req.)
	30962	Fuel Line (Braided 32")(81 cm)(Use as req.)
	26460	Clamp, Fuel line (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34186A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
201	410144P	Fuel Cap (M/bite Directio)/Std)(1.1/2" I.D.)
	410144B	Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
301	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16
		I.D.)
301	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
	0.210	(1-3/16" I.D)
	35355	Fuel Cap (Red plastic) (1-1/2" I.D.)
301	35650	Fuel Cap (Red)
306	29673	* Gasket, Oil fill
310A	35941	Dipstick (Incl. 306)
	29443	Clip, Fuel line (Use as required)
	34246	Clip, Ground wire (Use as required)
	35392	Plug, Starter
	34154	Plate, Fuel tank mounting
	34155	Bracket, Fuel tank mounting
	650561	Screw, 1/4-20 x 5/8"
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
370J	34870	Decal, Instruction Can be used on HM80 with diecast starter
370	34346	Decal, Instruction
	34686	Decal, Name
	34387	Decal, Instruction Can be used on HM80 with stamped steel
0.02		recoil starter.
	22/22/	
	631021	Inlet Needle, Seat & Clip Assy.
380	632351	Carburetor (Incl. 184) (Refer to Division 5, Section A, page
		188 for breakdown or Fiche18A-1, Grid F-5)
3000	590633	Rewind Starter (Refer to Division 5, Section C, page 30 for
000/1		breakdown or Fiche 18A-1, Grid G-5)
		· ,
395	35763A	Electric Starter Motor (12 Volt) (Refer to service number
		stamped on end cap of motor, or on decal for identification.
		Refer to Division 5, Section D, Page 20 for breakdown or
		Fiche 18A-1, Grids G-9, G-10 or G-11)
005	222200	
395	33329D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel. Refer to service number
		stamped on end cap of motor, or on decal for identification.
		Ref
400	222700	
	33279G	Gasket Set (Incl. items marked*)
	730225	SAE 30, 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30, 4-Cycle Engine Oil (Quart)

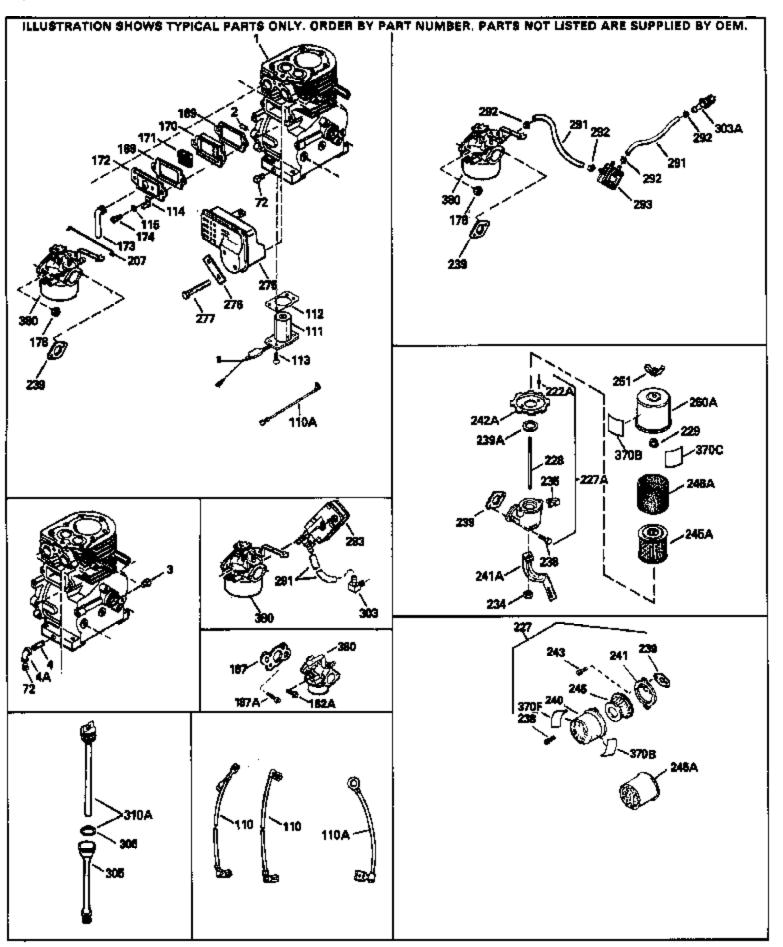

		Qty	Description
1	35385		Cylinder (Incl. 2,20,72,72A) (3-1/8" Bore)
2	27652		Pin, Dowel
72	27642		Plug, Oil drain
97			Lockwasher, Heavy split, #10 (Buy loc ally)
127A	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	35350		
			Tube, Breather
	650128		Screw, 10-24 x 1/2"
	650597		Screw, 10-24 x 5/8"
	29752		Nut & Lockwasher, 1/4-28
	30593		Clip, Primer line (Use as required)
	33878		Link, Governor-to-throttle
227	730127		Air Cleaner Ass'y. (Incl.238,239,240,241,243,245 & 370)
			(Use as required)
207	730164		Air Cleaner Ass'y. (Incl. 238, 239, 240, 241, 243 & 245) (Us
221	730104		
			as required)
228A	650824		Stud, 1/4-20 x 7.33 (Use as required)
	650851		Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
			elbow)
	070704		,
	27272A		* Gasket, Air cleaner
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	28820		Screw, 10-32 x 1/2"
245A	34700		Element, Air cleaner
245	33268		Element, Air cleaner
250B	33269A		Cover, Air cleaner
251	650513		Nut, Wing, 1/2-20
	33280A		Muffler
	391026		Muffler (Incl. 284, 284A & 416A) (This spark arresting muffle
			can be used on any model.)
	- /		• •
	31588		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16"
	26460		Clamp, Fuel line (Use as required)
306	29673		* Gasket, Oil fill
310A	35941		Dipstick (Incl. 306)
	34870		Decal, Instruction Can be used on HM80 with diecast starte
	34387		Decal, Instruction Can be used on HM80 with stamped stee
0.08			recoil starter.
200	632351		Carburetor (Incl. 184) (Refer to Division 5, Section A, page
360			188 for breakdown or Fiche18A-1, Grid F-5)

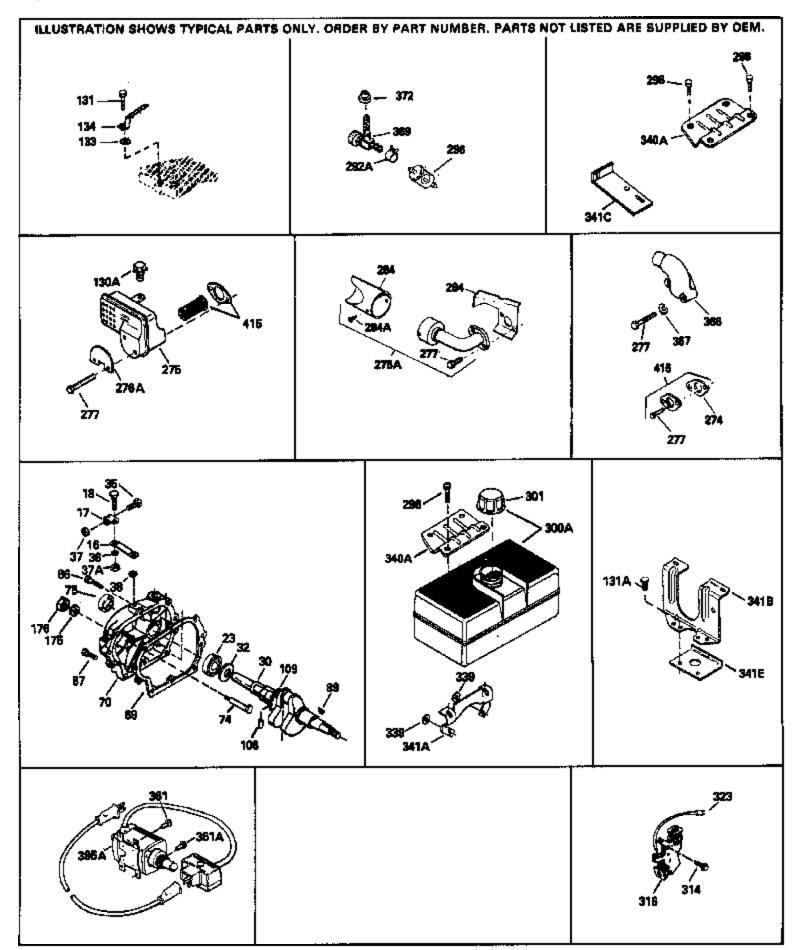

		Qty Description
	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
30	35441A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, # 8 E.T.
37	29216	Nut & Lockwasher, 10-32 "Keps"
37A	30322	Locknut, Hex "Keps", 8-32
38	29642	Ring, Retaining
69	35262	* Gasket, Cylinder cover
70	35376	Cover, Cylinder (Incl. 75, 80, 311 & 312)
74	31855	Retainer, Bearing
	35319	Seal, Oil
	650833	Screw, 1/4-20 x 1-3/16"
	650832	Screw, 1/4-20 x 1-11/16"
89	32589	Key, Flywheel
97		Lockwasher, Heavy split, #10 (Buy loc ally)
127A	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse with
		650691 washer)
1011	050340	,
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	650802	Screw, 1/4-20 x 5/8" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8" (Use as required)
	650890	Washer, Lock, 5/16"
	30747	Clip, Spark plug shorting
	30593	Clip, Primer line (Use as required)
	650824	Stud, 1/4-20 x 7.33 (Use as required)
228A	650851	Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru
		elbow)
242	33267	Bracket, Air cleaner
	33269A	Cover, Air cleaner
	35865	Gasket, Exhaust (Use as required)
	33280A	Muffler
	391026	Muffler (Incl. 284, 284A & 416A) (This spark arresting muffler
2150	351020	can be used on any model.)
	650729	Screw, 5/16-18 x 3-3/16"
298	650665	Screw, 1/4-15 x 7/8"
301	410144B	Fuel Cap (White Plastic)(Std)(1-1/2" I.D.)
301	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16"
		I.D.)
201	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile)
301		(1-3/16" I.D)
301	35355	Fuel Cap (Red plastic) (1-1/2" I.D.)
301	35650	Fuel Cap (Red)
	35038	Spacer, Tank
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	34870	Decal, Instruction Can be used on HM80 with diecast starter.
	730130	Exh.Adapter Kit (Incl.274,277)(Use as req.)

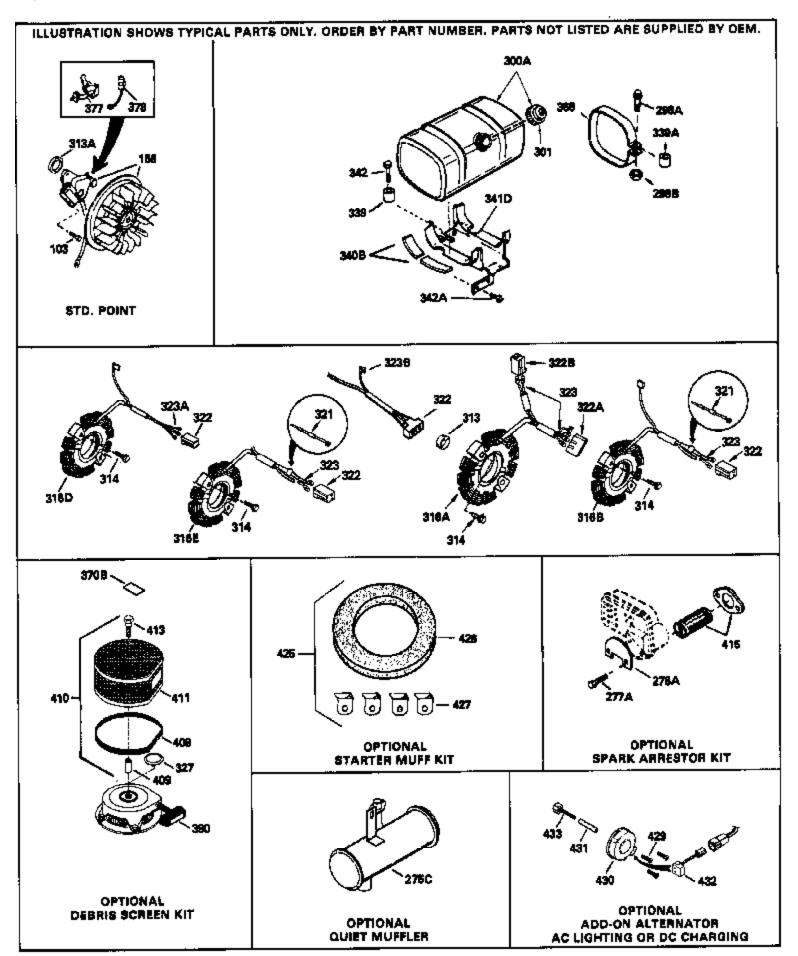

97 103 127A 127A 127A 179B 228A	Part Number 650814 26073 650570 30593 650824 650851	L S V C S S	Description Lockwasher, Heavy split, #10 (Buy loc ally) Screw, Torx T-15, 10-24 x 1" Washer, Flat (Use as required) Washer, Flat (Use as required) Clip, Primer line (Use as required) Stud, 1/4-20 x 7.33 (Use as required) Stud, 1/4-20 x 8.1 (Use as required) (Used with drilled thru Now)
250B 275C	33267 33269A 35824 391026	C N N	Bracket, Air cleaner Cover, Air cleaner Auffler (Optional quiet muffler) Auffler (Incl. 284, 284A & 416A) (This spark arresting muffler an be used on any model.)
301	650696 410144B 33032	F	Screw, 5/16-18x2-3/4" (Used with 276A) Fuel Cap (White Plastic)(Std)(1-1/2" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (1-3/16" .D.)
301	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) 1-3/16" I.D)
301 327 339 342	35355 35650 35392 35038 650561 34387	F F S S	Fuel Cap (Red plastic) (1-1/2" I.D.) Fuel Cap (Red) Plug, Starter Spacer, Tank Screw, 1/4-20 x 5/8" Decal, Instruction Can be used on HM80 with stamped steel ecoil starter.
	34870 35570	S	Decal, Instruction Can be used on HM80 with diecast starter. Screen Seal (Can be used on HM80 with stamped steel ecoil starter)
409	35569		Spacer (Can be used on HM80 with stamped steel recoil starter)
410	730573		Debris Screen Kit (Incl. 360, 370B, 387, 411 &413) (Can be used on HM80 with stamped steel recoil starter)
411	35568		Debris Screen (Can be used on HM80 with stamped steel ecoil starter)
413	650907		Screw, 5/16-18 x 1-5/8" (Can be used on HM80 with stamped steel recoil starter)
	730130 730572	S	Exh.Adapter Kit (Incl.274,277)(Use as req.) Starter Muff Kit (Incl. 370J, 426 & 4 27) (Can be used on HM80 with die cast starter)
429	650868		Screw, 8-18 x 1-1/8" (3 Required) (Use as required) (Refer to Mechanics Handbook for installation instructions).
430	611077		Alternator, Add on (Use as required) (Refer to Mechanics Handbook for installation instructions).
431	590609	а	Centering tube (Use with engines equipped with die cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions)
431	590610		Centering tube (Use as required) (Refer to Mechanics Handbook for installation instructions).

Ref #	Part Number	Qty	Description
432	611078		A.C. Lighting Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
432	611079		D.C. Charging Connector (Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590611		Alternator Shaft (4.00") (Use with engines equipped with cast aluminum starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).
433	590636		Alternator Shaft (Use with engines equipped with stamped steel starter)(Use as required) (Refer to Mechanics Handbook for installation instructions).