



Ref #	Part Number	Qty Description
1		Cylinder (Incl. 3,4,4A,5)(3-1/8")(CI liner)
3	27642	Plug, Pipe (1/4-18)
	35319	Seal, Oil
	35400	Bushing, Crankshaft
	27652	Pin, Dowel
	29536	Blower Housing Baffle (No knock-out for electric start) (Use
O	29330	as required)
6	35256A	Blower Housing Baffle (With knock-out for electricstart) (Use
6	25226	as required)
	35326 650564	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"  Crowkebott Coor (Hood on cort a production)
	33245 35443B	Crankshaft Gear (Used on early production)
	35442B	Crankshaft
	29783	Crankshaft Gear Pin (Used on early pr od.)
	34552	Piston, Pin & Ring Set (Std.) (3-1/8")
	34553	Piston, Pin & Ring Set (.010" OS)
	34554	Piston, Pin & Ring Set (.020" OS)
	34329A	Piston & Pin Ass'y. (Std.)(Incl.10)(3 -1/8")
	34330A	Piston & Pin Ass'y. (.010" OS) (Incl. 10)
	34331A	Piston & Pin Ass'y. (.020" OS) (Incl. 10)
	27888	Ring, Piston pin retaining
	34332	Ring Set (Std.) (3-1/8" Bore)
	34333	Ring Set (.010" OS)
	34334	Ring Set (.020" OS)
	35373A	Rod Assy., Connecting (Incl. 18, 19 & 19A)
	35374	Dipper, Oil
18A	32590	Plate, Lock & Oil dipper (This plate may be replaced by No. 34242 oil dipper but No. 650662C screw must be used.)
19	650908	Bolt, Connecting rod (1 pc.)
	650882	Bolt, Connecting rod (2 pcs. on early production;1 pc. on
10/1	355552	current production)
20	34034	Lifter, Valve
21	35375	Camshaft (MCR)
22	33273A	Extension, Blower housing
23	650128	Screw, 10-24 x 1/2"
24	35262	* Gasket, Cylinder cover
25	35376	Cover, Cylinder (Incl. 26, 27, 37, 58 A & 59)
26	35377	Bushing, Crankshaft
27	35319	Seal, Oil
33	30699C	Rod Assy., Governor (Incl. 34 & 35)
33A	30699B	Rod, Governor (This one piece governor rodis no longer used.
		It is replaced by No. 30699C assembly, Ref. No. 5A.)
34	30700	Yoke, Governor
35	650494	Screw, 6-40 x 5/16"
36	29642	Ring, Retaining
37	31845	Shaft, Mechanical governor
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	35378	Gear Assy., Governor (Incl. 39)
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	29916	Clamp, Governor lever
	29826	Screw, 10-32 x 3/4"
	29216	Locknut, 10-32 x 3/4 Locknut, 10-32
31	23210	LOOKIIUI, 10-02

	Part Number Qt	
52	33454	Lever Assy., Governor
53	29918	Lockwasher, No. 8 E.T.
54	650548	Screw, 8-32 x 5/16"
	30322	Locknut, 8-32
	650832	Screw, 1/4-20 x 1-11/16"
	650833	Screw, 1/4-20 x 1-3/16"
		·
	34974	Dipstick (Incl. 59)
	29673	* Gasket, Oil fill
	27878A	Exhaust Valve (Std.) (Incl. 70)
	27880A	Exhaust Valve (1/32" OS) (Incl. 70)
67	34035	Intake Valve (Std.) (Incl. 70)
67	34036	Intake Valve (1/32" OS) (Incl. 70)
68A	34689	Seal, Assy., Intake valve
68	27882	Cap, Upper valve spring
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32589	• •
		Key, Flywheel
	29443	Clip, Fuel line
	35558	Retainer, Wire
	611090	Flywheel
79	650880	Washer, Lock
80	650881	Nut, Hex, 5/8-18
81	650872	Stud, Solid State mounting
82	35135	Solid State Assy.
	610118	Cover, Spark plug (Use as required)
	650814	Screw, Torx T-15, 10-24 x 1"
	35557	Ground Wire
	34041A	* Gasket, Cylinder head
	34030	Head, Cylinder
	650692	Screw, 5/16-18 x 1-3/4" (Use as requi red)
98	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
QR	650711	Screw, 5/16-18 x 1-5/8" (Use as required) (Can use No.
30	000711	6021A but discard No. 650691 washer.)
		002 1A but discard No. 00009 1 Washer.
99	33636	Resistor Spark Plug (RJ-8C)
	650691	Washer (Use as req.) (Do not use w/60 21A)
	650727	Screw, 5/16-18 x 1-3/4" (Use as requi red)
	650690	Washer, Belleville
	650694A	
		Screw, 5/16-18 x 2"
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
107	28425	Cover, Breather
109	650128	Screw, 10-24 x 1/2"
114	29752	Nut, Whiz lock, 1/4-28
115	26756	Gasket, Carburetor
	34707	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	
		* Gasket, Intake
	34833A	Blower Housing (For electric starter)
	34664	Control Bracket (Incl. 134, 135, 136 & 138)
	31342	Spring, Compression
135	650549	Screw, 5-40 x 7/16"
136	610973	Terminal Assy. (Use as required)
	650821	Screw, 10-32 x 1/2"
	34663	Spring, Speed control
	34667	Link, Governor
139	O-1007	

Dof #	Part Number	Ohi	Description
	Part Number	Qly	Description Clip Conduit
	27793		Clip, Conduit
	28942 20747D		Screw, 10-32 x 3/8"
	29747B		Screw, 5/16-24 x 21/32"
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
	650760		Screw, 8-32 x 3/8"
	34586		Rod, Choke
	33272A		Cover, Cylinder head
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8" (Use as required )
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	650802		Screw, 1/4-20 x 5/8" (Use as required )
	34154		Plate, Upper fuel tank mounting
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	34155		Bracket Assy., Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	650665		Screw, 1/4-15 x 7/8"
1/5	34186A		Fuel Tank (Incl. 176 & 178) NOTE: These tanks were built
			with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
176	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required)
170	440444D		
	410144B 34210		Fuel Cap (White Plastic) (Std) (Use a s req.) Fuel Cap (Ref Plastic) (Spurt Resistant, High Profile) (Use as
170	34210		,
			required)
176	35355		Fuel Cap (Red Plastic) (Use as requir ed)
	29774		Fuel Line (Use as required) (8.25") (21 cm)
	30705		Fuel Line (Use as required) (16.0") (41 cm)
	30962		Fuel Line (32.0") (81 cm)
	26460		Clamp, Fuel line (Use as required)
	27930A		* Gasket, Exhaust (Use as required)
	33280A		Muffler
188	31588		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16"
	35287		Cup, Starter
	35446		Screen, Starter (Stationary)
	29752		Nut, Whiz lock, 1/4-28
	35392		Plug, Starter
	35532		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
274	632464		Carburetor (Incl. 115) (Refer to Division 5, Section A, page
			186 for breakdown)
276	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
210	00000		breakdown)
			•
280	33279G		* Gasket Set (Incl. items marked *)

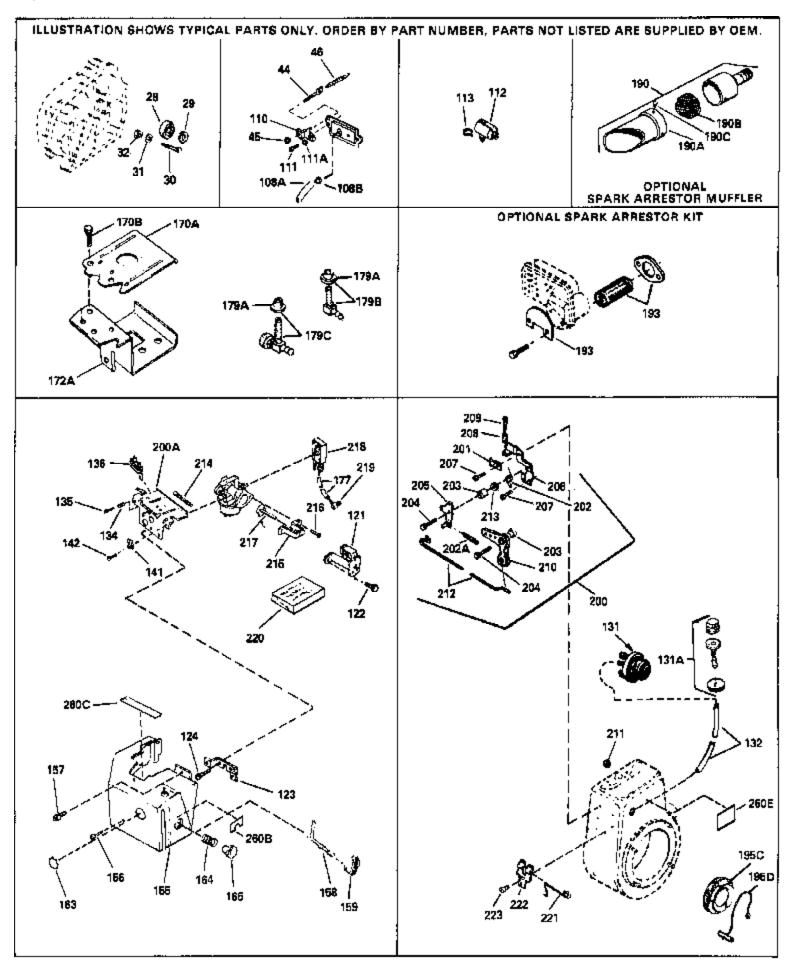

Ref #	Part Number	Qty	Description
108A	34696		Tube, Breather
108B	32446		Grommet, Breather tube
134	31342		Spring, Compression
135	650549		Screw, 5-40 x 7/16"
136	610973		Terminal Assy. (Use as required)
141	27793		Clip, Conduit
142	28942		Screw, 10-32 x 3/8"
158	34586		Rod, Choke
177	29774		Fuel Line (Use as required) (8.25") (21 cm)
177	30705		Fuel Line (Use as required) (16.0") (41 cm)
177	30962		Fuel Line (32.0") (81 cm)
190B	33323		Screen, Muffler (Use as required)
190C	650578		Screw, 8-18 x 3/8" (Use as required)
190	391026		Muffler (Incl. 190A, 190B & 190C) (This spark arrestor
			mufflercan be used on any model)
190A	33700		Cover & Tube, Muffler (Use as require d)
	34479		Spark Arrestor Kit (Fits "L" shaped m ufflers)
	34704		Decal, Air cleaner

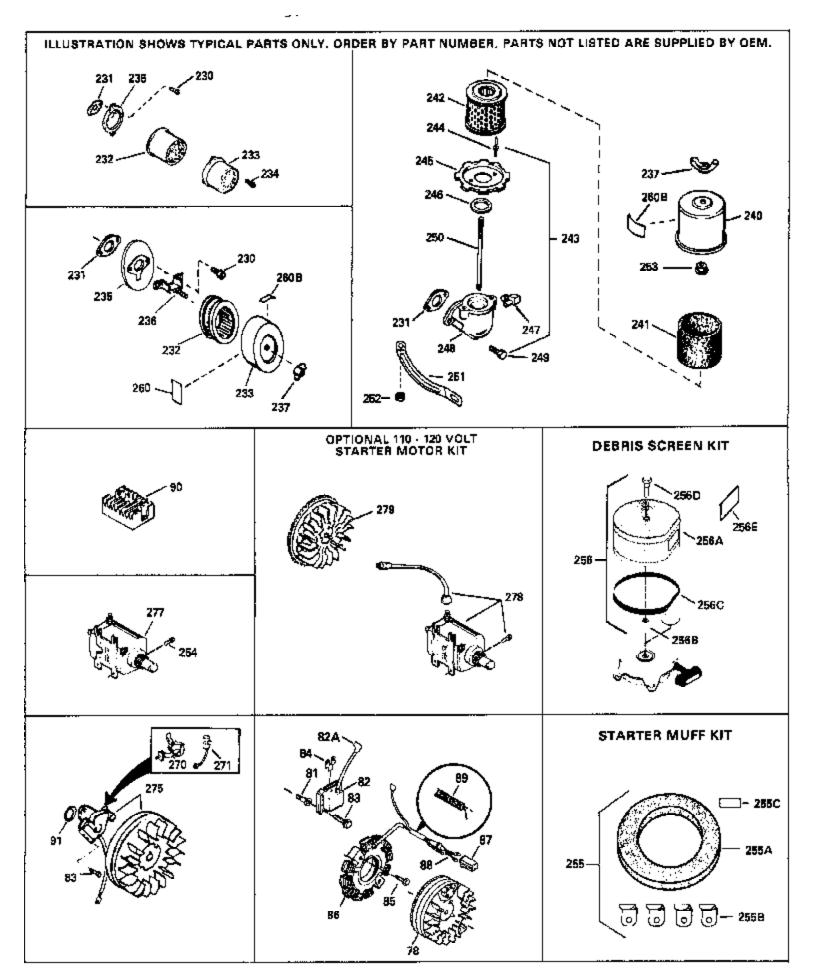

D.C.	Ded Markey	O	Secretary.
			Description
	611090		Flywheel
	650872		Stud, Solid State mounting
	610118		Cover, Spark plug (Use as required)
	35135		Solid State Assy.
	650814		Screw, Torx T-15, 10-24 x 1"
231	27272A	*	Gasket, Air cleaner
237	650513	1	Nut, Wing, 1/4-20
243	35044	A	Air Cleaner Elbow Assy.(Incl.244,245, 246,250)
244		F	Pop Rivet (1/8" dia.) (Can be bought locally)
245	34699		Bracket, Air cleaner
246	34698A		Gasket, Air cleaner elbow
	30675		Fitting, Breather tube
	34697		Elbow, Air cleaner
	650163		Screw, 10-32 x 7/8"
	650851		Stud, 1/4-20 x 8.1
	35045		Bracket, Air cleaner
	650852		Nut, 1/4-20
	650825		Nut & Lockwasher, 1/4-20
	34687		Air Cleaner, Starter Can be used on HM70 with diecast
200A	34007		•
		٤	starter
255B	34869	E	Bracket, Starter air cleaner Can be used on HM70 with
		C	diecast starter
OFFC	24070	1.	notruction Docal Can be used on LIM70 with discost starter
	34870		nstruction Decal Can be used on HM70 with diecast starter.
255	730572		Starter Muff Kit (Incl. 255A, 255B, & 255C) Can be used on
		F	HM70 with diecast starter
256E	34387	l	nstruction Decal Can be used on HM70 with stamped steel
			recoil starter.
0500	050007	,	2 5/40 40 · · 4 5/011 One has used as LIM70 · · · · · · · · · · · · · · · · · · ·
256D	650907		Screw, 5/16-18 x 1-5/8" Can be used on HM70 with stamped
		S	steel recoil starter
256	730573		Debris Screen Kit (Incl. 256A thru 25 6E) Can be used on
			HM70 with stamped steel recoil starter
0500	05570		·
256C	35570		Seal, Screen Can be used on HM70 with stamped steel
		r	ecoil starter
256B	35569	Ç	Spacer, Screen Can be used on HM70 with stamped steel
2005	3333		ecoil starter
256A	35568		Debris Screen Can be used on HM70 with stamped steel
		r	recoil starter
260B	34704	г	Decal, Air cleaner
	33329D		
210	33329D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter
			motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			posses and a ring gear flywheel has been added (see #279).
			Refer to service number stamped on end cap ofmotor, or
		C	decal fo
279	610847	F	Flywheel (Ring gear flywheel requiredon engine using
2,0			110-120 Volt starter motor kits listed above.) (Use on Std.
			point ignition)
279	611091		Flywheel (Minimum ring gear flywheel required on engine
			using 110-120 Volt starter motor kits listed above.) (Use on
		5	Solid State ignition)