



		Qty	Description
1	33674B		Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
2	26727		Pin, Dowel
3	27642		Oil Drain Plug
	32600		Seal, Oil
	32644A		Intake Valve (Std.) (Incl. 9)
	32645A		Intake Valve (1/32" OS) (Incl. 9)
	29313C		, , ,
			Exhaust Valve (Std.) (Incl. 9)
	29315C		Exhaust Valve (1/32" OS) (Incl. 9)
	31672		Spring, Valve
	31673		Cap, Lower valve spring
	610961		Key Flywheel
11	34740		Crankshaft
12	32323		Washer, Thrust
13	33876		Gasket, Stator
14	34535		Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
	34536		Piston, Pin & Ring Set (.010" OS)
	34537		Piston, Pin & Ring Set (.020" OS)
	33562B		Piston & Pin Ass'y.(Std.)(Incl.16)(2- 13/16")
	33563B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33564B		
			Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	33567		Ring Set (Std.) (2-13/16" Bore)
	33568		Ring Set (.010" OS)
	33569		Ring Set (.020" OS)
	20381		Ring, Piston pin retaining
17	32875		Rod Assy., Connecting (Incl. 18 & 20)
18	32610A		Bolt, Connecting Rod
20	32654		Dipper, Oil
21	27241		Lifter, Valve
	33696		Camshaft (Extended)
	34678		Cover, Cylinder (Incl. 24, 24A & 106)
	27897		Seal, Oil
	30318		Seal, Oil
	34676		Dipstick (Incl. 27)
	33893A		Tube Oil filler
	33590		"O" Ring
	27677A		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1" (Use as required)
29	650488		Screw, 1/4-20 x 1-1/4" (Use as requir ed)
30	27625		Plug, Oil filler (Incl. 31)
31	29673		* Gasket, Oil fill plug
32	33554A		Gasket, Cylinder head
	33016A		Head, Cylinder(Incl. 35)
	26073		Washer (Not used on late production)
	650691		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650818		Screw, 5/16-18 x 1-1/2" (Use as required)
	650865		Screw, 5/16-18 x 2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
	34251		Resistor Spark Plug (RJ-17LM)
	31619A		* Gasket, Breather
	31337A		Breather Ass'y. (Incl. 38 & 40)
	31410		Element, Breather
45	650128		Screw, 10-24 x 1/2"
	33673A		* Gasket, Intake (1/32" thick)
	33691		Pipe, Intake
	650664		Screw, 1/4-20 x 1-19/32"
	32698		Link, Governor-to-throttle
	31510		Lever, Governor
00	01010		LOVOI, COVEILIO

Ref #	Part Number	Qty	Description
64 65 66 66 67 68 69	31334 33342 650561 29752 28277 650168 29212 34813A		Rod, Governor (Incl. 67) Baffle, Blower housing Screw, 1/4-20 x 5/8" Nut & Lockwasher Assy., 1/4-28 (As re quired) Pop Rivet (Purchase locally)(Use as r equired) Washer, Flat Washer, Flat Screw, 1/4-28 x 7/16" Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter.
82 83 84 85 86 87 94 95 96 97	29752 33341 650701 6201 650870 28212 26756 28820 33344 30968 30969 610609 730127		Nut & Lockwasher Assy., 1/4-28 Extension, Baffle Screw, 8-18 x 7/16" Screw, 1/4-28 x 7/8" Screw, 1/4-28 x 1-11/16" Spacer * Gasket, Carburetor Screw, 10-32 x 1/2" Baffle, Heat Nipple, Oil drain Cap, Oil drain Ground Wire Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, & 221A)(Use as required)
106 107 108 109 111 113 113A 114	30590A 30574 30591 30588A 29193 28371B 650805 650675 34711 410144B 33032		Washer, Flat Shaft, Mechanical governor Gear Assy.,Governor (Incl. 105) Spool Governor Ring, Retaining Fuel Tank Bracket Screw, 1/4-20 x 11/16" Washer, Flat Fuel Tank (Incl. 115 & 123) Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.) Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low profile)
115	34210		Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High profile)
118 118 119 121 122 123 129 130 134 138 139 140B 140A	650665 30795 30962 29774 28819 29745 650128 26460 650489 610118 34814 32180C 33670A 30063 8345 650628A		Screw, 1/4-15 x 7/8" Line, Fuel (Braided 16") Line, Fuel (Braided 32") Line, Fuel (Braided 8.25") Spring, Fuel line (Use as required) Extension, Blower housing Screw, 10-24 x 1/2" Clamp, Fuel line (Use as required) Screw, 1/4-20 x 5/8" Cover, Spark plug Primer Assy. Line, Primer * Gasket, Muffler Screw, 1/4-20 x 1/2" Flatwasher, 1/4" 5/16-18 x 2-3/8"

Ref #	Part Number	Qty	Description
140	650327		Screw, 1/4-20 x 2-1/2"
140	30063		Screw, 1/4-20 x 1/2" (Use as required )
140D	26073		Washer, flat
141	33697A		Muffler (Front Discharge)
180	34126		Bracket, Grommet mounting
182	28545		Grommet, Plastic
183	650760		Screw, 8-32 x 3/8"
196A	31335		Clamp, Governor lever
197	650548		Screw, 8-32 x 5/16"
201	610973		Terminal Assy. (Use as required)
203	33858A		Control Bracket(Incl.201,204,205,206, 207)
204	650139		Screw, 8-32 x 1/2" (Use as required)
204	650152		Screw, 8-32 x 3/8" (Use as required)
204	30200		Screw, 10-24 9/16" (Use as required)
	30322		Nut & Lockwasher (Use as required)
	650688		Screw, 10-32 x 1" (Used on early prod uction)
	650549		Screw, 5-40 x 7/16" (Used on late pro duction)
207	32924		Compression Spring (Used on early pro duction)
207	31342		Compression Spring (Used on late prod uction)
	31426		Spring, Extension
	32410		Knob, Speed control
	650815		Washer, Belleville
214	650816		Nut, Flywheel
	34127		Guard, Starter
	33668		Screen, Starter
	34694		Cup, Starter
	34080		Spacer, Flywheel key
	650872		Stud, Solid State Assy.
	631021		Inlet Needle, Seat & Clip Assy.
244	632107		Carburetor (Incl. 87) (Refer to Division 5, Section A, page 168 for breakdown)
245	611030		Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
246	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
249	33683B		* Gasket Set (Incl. items marked *)

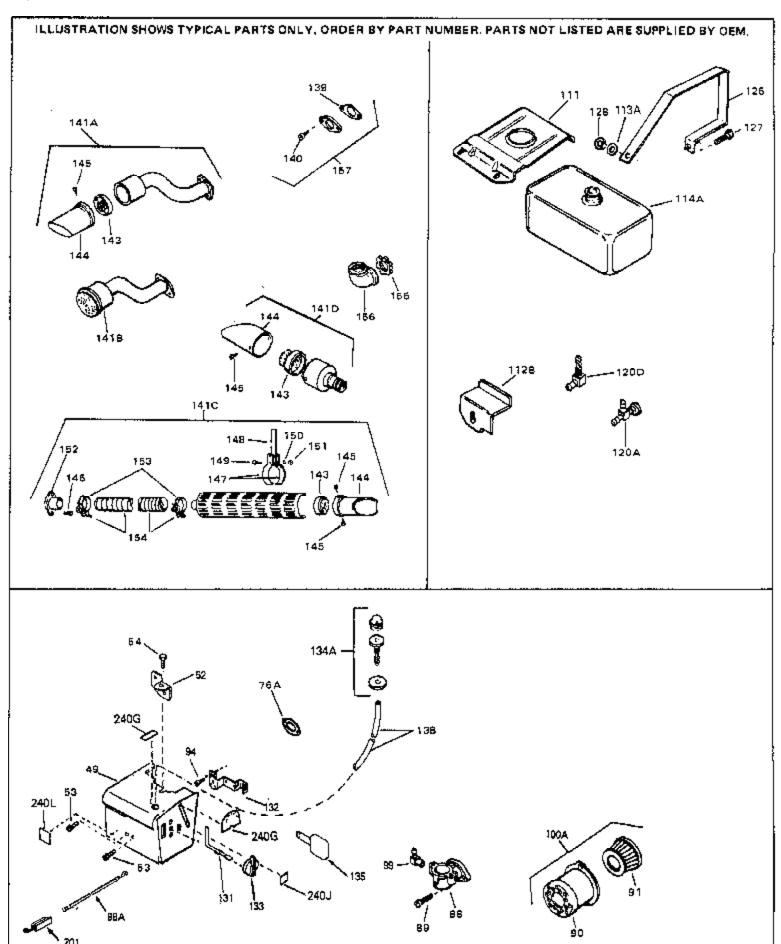

Ref #	Part Number	Qty	Description
13	33876		Gasket, Stator
	35072		Cover, Carburetor
52	33333		Bracket, Carburetor cover
53	650257		Screw, 8-32 x 5/16"
54	650732		Screw, 10-24 x 3/8"
	28820		Screw, 10-32 x 1/2"
100A	730164		Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
111	28371B		Fuel Tank Bracket
112B	34182		Fuel Tank Bracket
113A	650675		Washer, Flat
120A	32961		Shut-off Valve, Fuel
131	34582		Rod, Choke
132	34583		Bracket, Choke
	35438		Knob, Choke
	32180C		Line, Primer
	33670A		* Gasket, Muffler
	650327		Screw, 1/4-20 x 2-1/2"
	30063		Screw, 1/4-20 x 1/2" (Use as required )
141D	391026		Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
157	730165		Muff.Adapter Kit (Incl.139,140)(As re quired)
201	610973		Terminal Assy. (Use as required)
245	611030		Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)

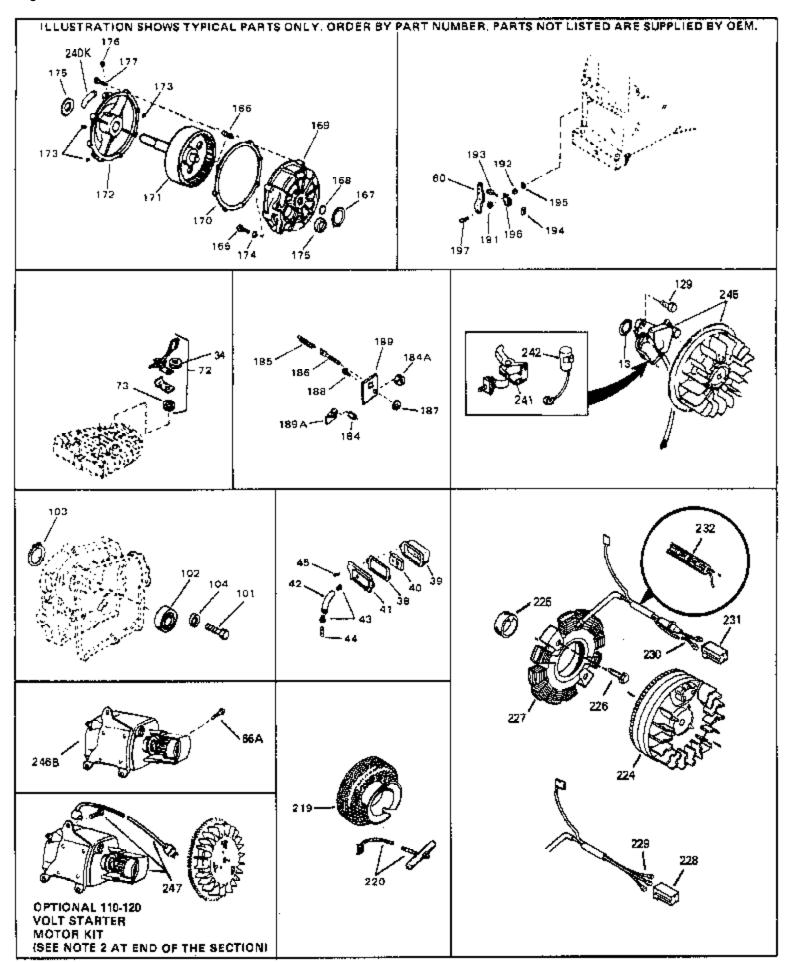

D.C.	Deat Marchan	<u> </u>	Describer
	Part Number	Qty	Description
	33876		Gasket, Stator
34	26073		Washer (Not used on late production)
34	650691		Washer (Use as required)
38	31619A		* Gasket, Breather
40	31410		Element, Breather
45	650128		Screw, 10-24 x 1/2"
197	650548		Screw, 8-32 x 5/16"
219	34788		Pulley, Starter rope
225	35189		Spacer, Coil Assy.
241	30547A		Contact Assy., Breaker
242	30548B		Condenser
245	611030		Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
247	33290D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref