


Dof #	Part Number (Ott /	Description
		uy	Ovlinder (Incl. 2, 3, 8, 4) (2, 13/16" B oro)
	33674B		Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
	26727		Pin, Dowel
	27642		Oil Drain Plug
	32600		Seal, Oil
	32644A		Intake Valve (Std.) (Incl. 9)
	32645A		Intake Valve (1/32" OS) (Incl. 9)
	29313C		Exhaust Valve (Std.) (Incl. 9)
	29315C		Exhaust Valve (1/32" OS) (Incl. 9)
	31672		Spring, Valve
	31673		Cap, Lower valve spring
	610961		Key Flywheel
	34740		Crankshaft
	32323		Washer, Thrust
13	33876		Gasket, Stator
14	34535		Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
14	34536		Piston, Pin & Ring Set (.010" OS)
14	34537		Piston, Pin & Ring Set (.020" OS)
14A	33562B		Piston & Pin Ass'y.(Std.)(Incl.16)(2-13/16")
14A	33563B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	33564B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	33567		Ring Set (Std.) (2-13/16" Bore)
	33568		Ring Set (.010" OS)
	33569		Ring Set (.020" OS)
	20381		Ring, Piston pin retaining
	32875		Rod Assy., Connecting (Incl. 18 & 20)
	32610A		Bolt, Connecting Rod
	32654		Dipper, Oil
	27241		Lifter, Valve
	33158		Camshaft
	32700A		Cover, Cylinder (Incl. 24, 29, 30, 31 & 106)
	27897		Seal, Oil
	27677A		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1" (Use as required)
	650488		Screw, 1/4-20 x 1-1/4" (Use as required)
	27625		Plug, Oil filler (Incl. 31)
	29673		* Gasket, Oil fill plug
	33554A		Gasket, Cylinder head
	33016A		Head, Cylinder Incl. 35)
	26073		Washer (Not used on late production)
	650691		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650818		Screw, 5/16-18 x 1-1/2" (Use as required)
	650865		Screw, 5/16-18 x 2" (Use as required)
	6021A 33636		Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
	33636		Resistor Spark Plug (RJ-8C) * Casket Broother
	31619A		* Gasket, Breather Breather Acely (Incl. 28. 8. 40)
	31337A		Breather Ass'y. (Incl. 38 & 40)
	31410		Element, Breather
	650128		Screw, 10-24 x 1/2"
	33673A		* Gasket, Intake (1/32" thick)
	33666		Pipe, Intake
	30646		Screw, 1/4-20 x 1-3/8"
	32698		Link, Governor-to-throttle
	31510		Lever, Governor
	31334		Rod, Governor (Incl. 67)
	33342		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
66	29752		Nut & Lockwasher Assy., 1/4-28 (As re quired)


	art Number Qty	Description
66		Pop Rivet (Purchase locally)(Use as r equired)
67 28	8277	Washer, Flat
68 65	50168	Washer, Flat
69 29	9212	Screw, 1/4-28 x 7/16"
70 33		Blower Housing (For electric starter) NOTE: In original
10 00		production some starters are riveted to the blower housing.
		Replacement housing has threaded studs. Order four nuts
		(29752) for remounting of starter.
76 27	7272A	* Gasket, Air cleaner
77 34		Bracket, Holddown
78 30		Screw, 10-24 x 9/16"
81 29		Nut & Lockwasher Assy., 1/4-28
82 33		Extension, Baffle
83 65		Screw, 8-18 x 7/16"
84 62	201	Screw, 1/4-28 x 7/8"
85 65	50870	Screw, 1/4-28 x 1-11/16"
86 28		Spacer
87 26		* Gasket, Carburetor
90 31		Body, Air cleaner
92 65		Screw, 8-32 x 3/8"
93 31		Bracket, Air cleaner
94 28		Screw, 10-32 x 1/2"
98 34	4231	Ground Wire
100 73	30127	Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &
		221A)(Use as required)
105 30		Washer, Flat
106 30	0574	Shaft, Mechanical governor
107 30	0591	Gear Assy., Governor (Incl. 105)
108 30	0588A	Spool Governor
109 29		Ring, Retaining
111 28		Fuel Tank Bracket
112 32		Fuel Tank Bracket
114 30		Fuel Tank (Incl. 112 & 115)
115 41		Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.)
115 33	3032	Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low
		profile)
115 24	1010	Fuel Cap (Dad Diastia)(1.2/16" I.D.) (Spurt registerat Lligh
115 34	4210	Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High
		profile)
116 65	50556	Screw, 1/4-28 x 5/8"
118 29		
		Line, Fuel (Braided 8.25")
118 30		Line, Fuel (Braided 16")
118 30		Line, Fuel (Braided 32")
119 28	8819	Spring, Fuel line (Use as required)
120 28	8837	Strainer & Fitting, Fuel
121 29	9745	Extension, Blower housing
122 65		Screw, 10-24 x 1/2"
123 26		Clamp, Fuel line (Use as required)
129 65		
		Screw, 1/4-20 x 5/8"
139 33		* Gasket, Muffler
140B 30		Screw, 1/4-20 x 1/2"
140A 83	345	Flatwasher, 1/4"
	50774	Screw, 1/4-20 x 2-3/8"
140 65	50774	
140 65 140 30		
140 30	0063	Screw, 1/4-20 x 1/2" (Use as required)
140 30 140D 26	0063 6073	Screw, 1/4-20 x 1/2" (Use as required) Washer, flat
140 30	0063 6073 50628A	Screw, 1/4-20 x 1/2" (Use as required)

		Qty	Description
	31335		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
201	610973		Terminal Assy. (Use as required)
203	33858A		Control Bracket(Incl.201,204,205,206, 207)
204	650139		Screw, 8-32 x 1/2" (Use as required)
204	650152		Screw, 8-32 x 3/8" (Use as required)
204	30200		Screw, 10-24 9/16" (Use as required)
205	30322		Nut & Lockwasher (Use as required)
206	650688		Screw, 10-32 x 1" (Used on early prod uction)
206	650549		Screw, 5-40 x 7/16" (Used on late pro duction)
	32924		Compression Spring (Used on early pro duction)
	31342		Compression Spring (Used on late prod uction)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	31426		Spring, Extension
	32410		Knob, Speed control
	650815		Washer, Belleville
	650816		Nut, Flywheel
	33668		Screen, Starter
	34694		Cup, Starter
	34080		Spacer, Flywheel key
	650872		Stud, Solid State Assy.
	35344		Decal, Control
	550223		Decal, Name
	34346		Decal. Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	631923		Carburetor (Incl. 87) (Refer to Division 5, Section A, page 140
2-1-1	001920		for breakdown)
245	611025		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
246	590420A		Rewind Starter NOTE: In original production some starters are riveted to the blowerhousing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter. (Refer to Division 5, Section C, page 25 for breakdown)
249	33683B		* Gasket Set (Incl. items marked *)

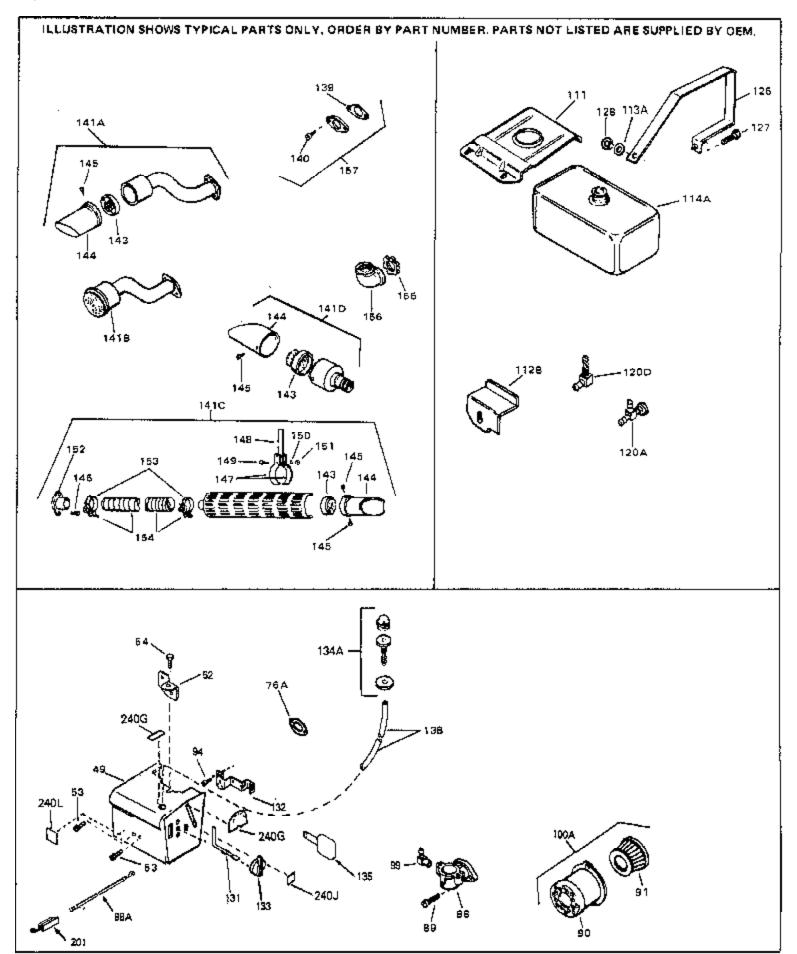

Ref #	Part Number	Qty Description
13	33876	Gasket, Stator
90	31715	Body, Air cleaner
91	30727	Element, Air cleaner
94	28820	Screw, 10-32 x 1/2"
100A	730164	Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
111	28371B	Fuel Tank Bracket
	28837	Strainer & Fitting, Fuel
139	33670A	* Gasket, Muffler
140	650774	Screw, 1/4-20 x 2-3/8"
140	30063	Screw, 1/4-20 x 1/2" (Use as required)
141D	391026	Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
157	730165	Muff.Adapter Kit (Incl.139,140)(As re quired)
	610973	Terminal Assy. (Use as required)
245	611025	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)

HS50-67040D Engine Parts List #3

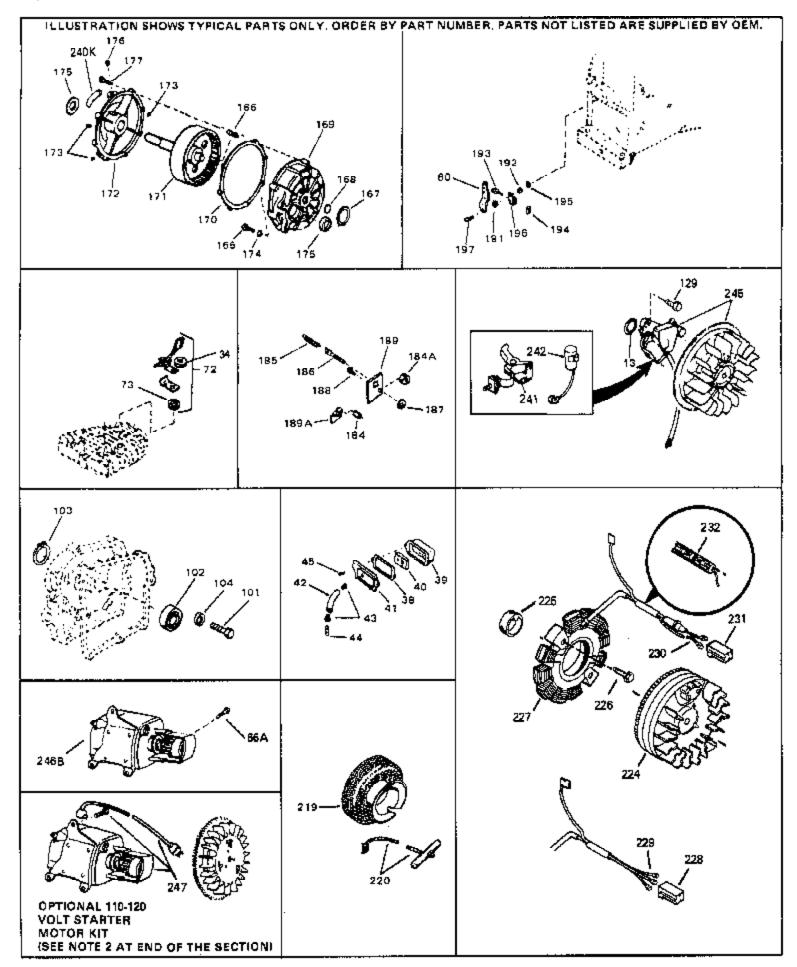

HS50-67040D Engine Parts List #3

Ref #	Part Number Qt	y Description
13	33876	Gasket, Stator
34	26073	Washer (Not used on late production)
34	650691	Washer (Use as required)
38	31619A	* Gasket, Breather
40	31410	Element, Breather
45	650128	Screw, 10-24 x 1/2"
120	28837	Strainer & Fitting, Fuel
197	650548	Screw, 8-32 x 5/16"
219	34788	Pulley, Starter rope
225	35189	Spacer, Coil Assy.
241	30547A	Contact Assy., Breaker
242	30548B	Condenser
245	611025	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
247	33290D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref