


|    |         | Description   |
|----|---------|---|
|    | 33674B  | Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)  |
| 2  | 26727   | Pin, Dowel  |
| 3  | 27642   | Oil Drain Plug  |
| 3  | 28582   | Oil Drain Plug  |
| 4  | 32600   | Seal, Oil   |
| 5  | 32644A  | Intake Valve (Std.) (Incl. 9)   |
| 5  | 32645A  | Intake Valve (1/32" OS) (Incl. 9)   |
|    | 29313C  | Exhaust Valve (Std.) (Incl. 9)  |
|    | 29315C  | Exhaust Valve (1/32" OS) (Incl. 9)  |
|    | 31672   | Spring, Valve   |
|    | 31673   | Cap, Lower valve spring   |
|    | 610951  | Key, Flywheel   |
|    | 33675   | Crankshaft  |
|    | 32323   | Washer, Thrust  |
|    | 33876   | Gasket, Stator  |
|    | 33562B  | Piston & Pin Ass'y.(Std.)(Incl.16)(2- 13/16")                                       |
|    | 33563B  | Piston & Pin Ass'y. (.010" OS) (Incl. 16)   |
|    | 33564B  | Piston & Pin Ass'y. (.020" OS) (Incl. 16)   |
|    | 34535   |   |
|    | 34536   | Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)<br>Piston, Pin & Ring Set (.010" OS) |
|    |         |   |
|    | 34537   | Piston, Pin & Ring Set (.020" OS)   |
|    | 33567   | Ring Set (Std.) (2-13/16" Bore)   |
|    | 33568   | Ring Set (.010" OS)   |
|    | 33569   | Ring Set (.020" OS)   |
|    | 20381   | Ring, Piston pin retaining  |
|    | 32875   | Rod Assy., Connecting (Incl. 18 & 20)   |
|    | 32610A  | Bolt, Connecting Rod  |
|    | 32654   | Dipper, Oil   |
|    | 27241   | Lifter, Valve   |
|    | 33158   | Camshaft  |
|    | 32700A  | Cover, Cylinder (Incl. 24, 29, 30, 31 & 106)  |
|    | 27897   | Seal, Oil   |
|    | 27677A  | * Gasket, Cylinder cover  |
|    | 650451  | Screw, 1/4-20 x 1" (Use as required)  |
|    | 650488  | Screw, 1/4-20 x 1-1/4" (Use as requir ed)   |
| 30 | 27625   | Plug, Oil filler (Incl. 31)   |
| 31 | 29673   | * Gasket, Oil fill plug   |
| 32 | 33554A  | Gasket, Cylinder head   |
| 33 | 33016A  | Head, Cylinder(Incl. 35)  |
| 34 | 26073   | Washer (Not used on late production)  |
| 34 | 650691  | Washer (Use as required)  |
| 35 | 650694A | Screw, 5/16-18 x 2" (Use as required)   |
| 35 | 650818  | Screw, 5/16-18 x 1-1/2" (Use as required)   |
|    | 650865  | Screw, 5/16-18 x 2" (Use as required)   |
|    | 6021A   | Screw, 5/16-18 x 1-1/2" (As req;not w /650691)                                      |
|    | 33636   | Resistor Spark Plug (RJ-8C)   |
|    | 31619A  | * Gasket, Breather  |
|    | 31337A  | Breather Ass'y. (Incl. 38 & 40)   |
|    | 31410   | Element, Breather   |
|    | 650128  | Screw, 10-24 x 1/2"   |
|    | 33673A  | * Gasket, Intake (1/32" thick)  |
|    | 33666   | Pipe, Intake  |
|    | 30646   | Screw, 1/4-20 x 1-3/8"  |
|    | 32698   | Link, Governor-to-throttle  |
|    | 31510   | Lever, Governor   |
|    |         |   |
|    | 31334   | Rod, Governor (Incl. 67)<br>Baffle, Blower beusing                                  |
|    | 33342   | Baffle, Blower housing  |
| CO | 650561  | Screw, 1/4-20 x 5/8"  |


|  |   | / Description  |
|--|---|--|
| 66<br>67<br>68<br>69   | 29752<br>28277<br>650168<br>29212<br>33663C   | Nut & Lockwasher Assy., 1/4-28 (As re quired)<br>Pop Rivet (Purchase locally)(Use as r equired)<br>Washer, Flat<br>Washer, Flat<br>Screw, 1/4-28 x 7/16"<br>Blower Housing (For electric starter) NOTE: In original<br>production some starters are riveted to the blower housing.<br>Replacement housing has threaded studs. Order four nuts<br>(29752) for remounting of starter.  |
| 77<br>78<br>81<br>82<br>83<br>84<br>85<br>86<br>87<br>90<br>92<br>93<br>93<br>94<br>95<br>98 | 27272A<br>34212<br>30200<br>29752<br>33341<br>650701<br>6201<br>650870<br>28212<br>26756<br>31715<br>650152<br>31914<br>28820<br>33344<br>34231<br>730127 | * Gasket, Air cleaner<br>Bracket, Holddown<br>Screw, 10-24 x 9/16"<br>Nut & Lockwasher Assy., 1/4-28<br>Extension, Baffle<br>Screw, 8-18 x 7/16"<br>Screw, 1/4-28 x 7/8"<br>Screw, 1/4-28 x 1-11/16"<br>Spacer<br>* Gasket, Carburetor<br>Body, Air cleaner<br>Screw, 8-32 x 3/8"<br>Bracket, Air cleaner<br>Screw, 10-32 x 1/2"<br>Baffle, Heat<br>Ground Wire<br>Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &<br>221A)(Use as required) |
| 106<br>107<br>108<br>109<br>111<br>112<br>113<br>114<br>115                                  | 30590A<br>30574<br>30591<br>30588A<br>29193<br>28371B<br>32762<br>650561<br>34711<br>410144B<br>33032   | Washer, Flat<br>Shaft, Mechanical governor<br>Gear Assy.,Governor (Incl. 105)<br>Spool Governor<br>Ring, Retaining<br>Fuel Tank Bracket<br>Fuel Tank Bracket<br>Screw, 1/4-20 x 5/8"<br>Fuel Tank (Incl. 115 & 123)<br>Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.)<br>Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low<br>profile)   |
| 115  | 34210   | Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High profile)   |
| 118<br>118<br>118<br>119<br>121<br>122<br>123<br>129<br>139<br>140<br>140<br>140C<br>140D    | 650665<br>29774<br>30795<br>30962<br>28819<br>29745<br>650128<br>26460<br>650489<br>33670A<br>792020<br>30063<br>650628A<br>26073<br>33697A               | Screw, 1/4-15 x 7/8"<br>Line, Fuel (Braided 8.25")<br>Line, Fuel (Braided 16")<br>Line, Fuel (Braided 32")<br>Spring, Fuel line (Use as required)<br>Extension, Blower housing<br>Screw, 10-24 x 1/2"<br>Clamp, Fuel line (Use as required)<br>Screw, 1/4-20 x 5/8"<br>* Gasket, Muffler<br>Screw, 1/4-20 x 2-1/4"<br>Screw, 1/4-20 x 1/2" (Use as required )<br>5/16-18 x 2-3/8"<br>Washer, flat<br>Muffler (Front Discharge)                   |

|      |         | ty Description   |
|------|---------|--|
|      | 29443   | Clip, Fuel line  |
|      | 31335   | Clamp, Governor lever  |
|      | 650548  | Screw, 8-32 x 5/16"  |
|      | 610973  | Terminal Assy. (Use as required)   |
| 203  | 33879A  | Control Brkt(In.201,204,205,206,207,2 09,210)  |
| 204  | 650139  | Screw, 8-32 x 1/2" (Use as required)   |
|      | 650152  | Screw, 8-32 x 3/8" (Use as required)   |
| 204  | 30200   | Screw, 10-24 9/16" (Use as required)   |
|      | 30322   | Nut & Lockwasher (Use as required)   |
| 206  | 650688  | Screw, 10-32 x 1" (Used on early prod uction)  |
| 206  | 650549  | Screw, 5-40 x 7/16" (Used on late pro duction)   |
| 207  | 32924   | Compression Spring (Used on early pro duction)   |
| 207  | 31342   | Compression Spring (Used on late prod uction)  |
| 209  | 28942   | Screw, 10-32 x 3/8"  |
|      | 27793   | Clip, Conduit  |
| 211  | 31426   | Spring, Extension  |
| 213  | 650815  | Washer, Belleville   |
| 214  | 650607  | Nut, Flywheel  |
| 217  | 33668   | Screen, Starter  |
| 218  | 33667   | Cup, Starter   |
| 221  | 34080   | Spacer, Flywheel key   |
| 222  | 650872  | Stud, Solid State Assy.  |
| 240A | 31517   | Decal, H.P   |
| 240A | 550223  | Decal, Name  |
| 240  | 34346   | Decal. Instruction   |
| 240B | 31752   | Decal, Air cleaner   |
| 243  | 631021  | Inlet Needle, Seat & Clip Assy.  |
| 244  | 631923  | Carburetor (Incl. 87) (Refer to Division 5, Section A, page 140  |
|      |         | for breakdown)   |
| 245  | 610942A | Magneto NOTE: The complete magneto is not available as<br>an assembly. The magneto number is shown for reference<br>purposes only. Order component partsindividually, as shown<br>in partslist. (Refer to Division 5, Section B, page 35 for<br>breakdown) |
| 246  | 590420A | Rewind Starter NOTE: In original production some starters<br>are riveted to the blowerhousing. Replacement housing has<br>threaded studs. Order four nuts (29752) for remounting of<br>starter. (Refer to Division 5, Section C, page 25 for<br>breakdown) |
| 249  | 33683B  | * Gasket Set (Incl. items marked *)  |
|      |         | · · · · · · · · · · · · · · · · · · ·  |

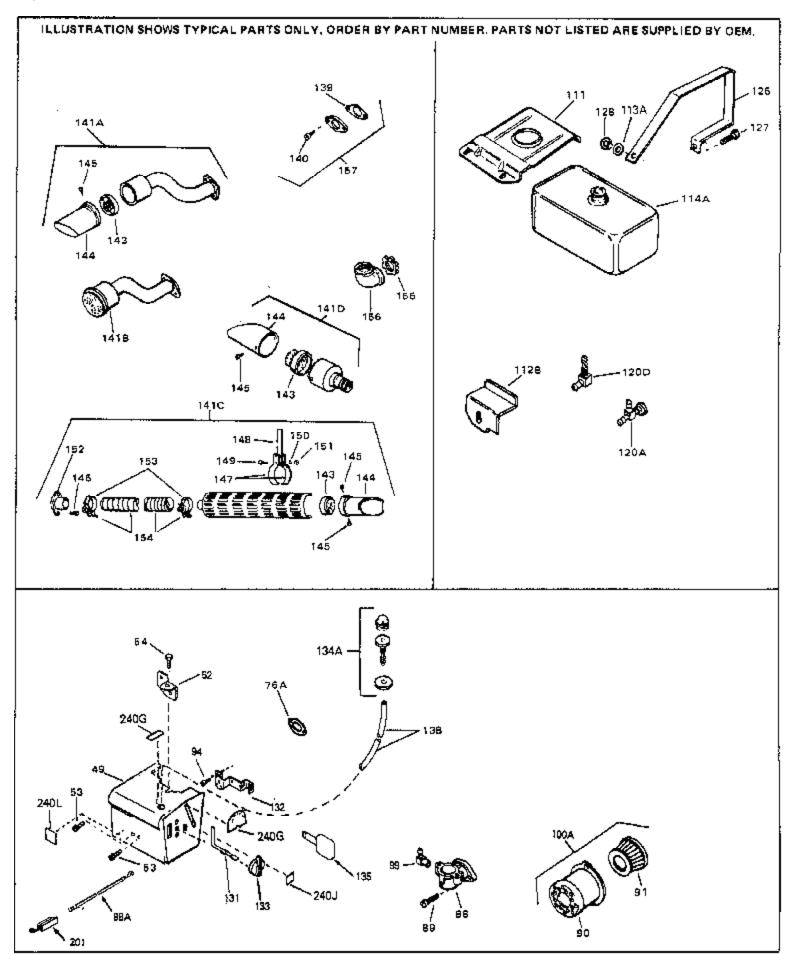

| Ref # | Part Number | Qty Desc                        | cription  |
|-------|-------------|---------------------------------|---|
| 13    | 33876       | Gask                            | ket, Stator   |
| 90    | 31715       | Body                            | /, Air cleaner  |
| 91    | 30727       | Elem                            | nent, Air cleaner   |
| 94    | 28820       | Screv                           | w, 10-32 x 1/2"   |
| 100A  | 730164      |                                 | Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use<br>equired)  |
| 111   | 28371B      | Fuel                            | Tank Bracket  |
| 139   | 33670A      | * Gas                           | sket, Muffler   |
| 140   | 792020      |                                 | w, 1/4-20 x 2-1/4"  |
| 140   | 30063       | Screv                           | w, 1/4-20 x 1/2" (Use as required )   |
| 141D  | 391026      |                                 | er (Incl. 143, 144 & 145) (This spark arrester mufflercan sed on any model.)  |
| 157   | 730165      | Muff.                           | Adapter Kit (Incl.139,140)(As re quired)  |
|       | 610973      |                                 | ninal Assy. (Use as required)   |
| 245   | 610942A     | Magr<br>an as<br>purpo<br>in pa | neto NOTE: The complete magneto is not available as<br>ssembly. The magneto number is shown for reference<br>oses only. Order component partsindividually, as shown<br>irtslist. (Refer to Division 5, Section B, page 35 for<br>kdown) |

HS50-67061C Engine Parts List #3

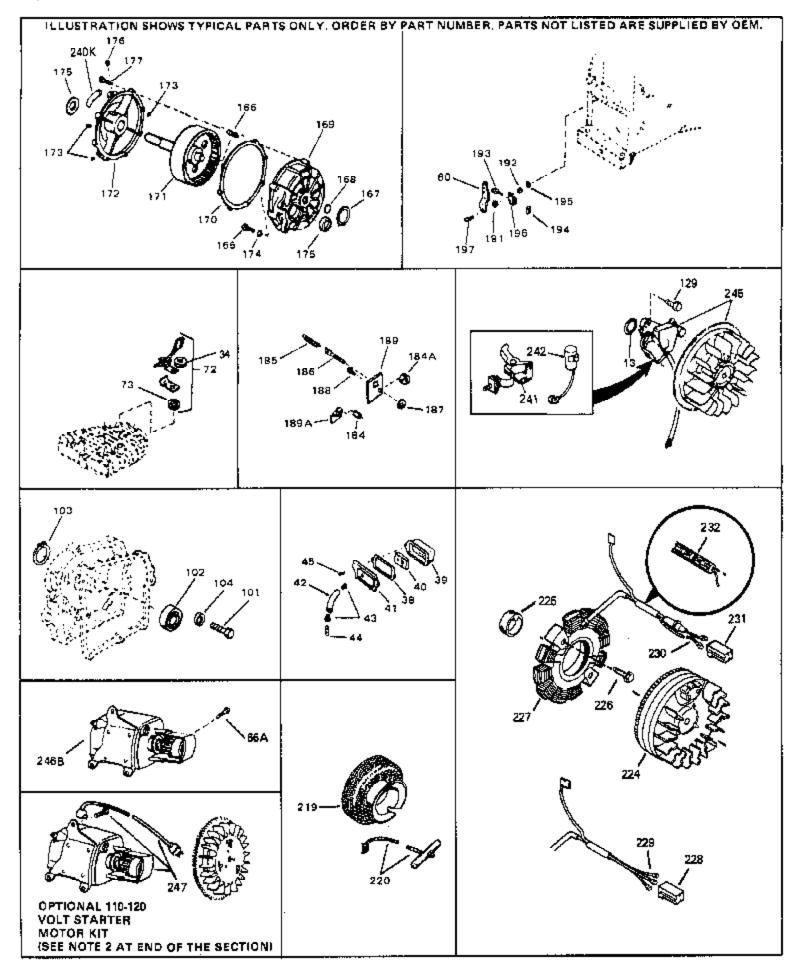

## HS50-67061C Engine Parts List #3

| Ref # | Part Number 0 | ty Description   |
|-------|---------------|--|
| 13    | 33876         | Gasket, Stator   |
| 34    | 26073         | Washer (Not used on late production)   |
| 34    | 650691        | Washer (Use as required)   |
| 38    | 31619A        | * Gasket, Breather   |
| 40    | 31410         | Element, Breather  |
| 45    | 650128        | Screw, 10-24 x 1/2"  |
| 197   | 650548        | Screw, 8-32 x 5/16"  |
| 219   | 34788         | Pulley, Starter rope   |
| 225   | 35189         | Spacer, Coil Assy.   |
| 241   | 30547A        | Contact Assy., Breaker   |
| 242   | 30548B        | Condenser  |
| 245   | 610942A       | Magneto NOTE: The complete magneto is not available as<br>an assembly. The magneto number is shown for reference<br>purposes only. Order component partsindividually, as shown<br>in partslist. (Refer to Division 5, Section B, page 35 for<br>breakdown)   |
| 247   | 33290D        | Starter Motor Kit (110-120 Volt) This 110-120 volt starter<br>motor kit may have been added to this engine. It can be<br>added only if cylinder hasdrilled and tapped starter mounting<br>bosses and a ring gear flywheel. Refer to service number<br>stamped on end cap of motor, or on decal, for identification.<br>Ref |