


| Ref # | Part Number Qty | Description |
|-------|-----------------|--|
| 1 | 33674B | Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore) |
| 2 | 26727 | Pin, Dowel |
| 3 | 27642 | Oil Drain Plug |
| 4 | 32600 | Seal, Oil |
| 5 | 32644A | Intake Valve (Std.) (Incl. 9) |
| | 32645A | Intake Valve (1/32" OS) (Incl. 9) |
| | 29313C | Exhaust Valve (Std.) (Íncl. 9) |
| | 29315C | Exhaust Valve (1/32" OS) (Incl. 9) |
| | 31672 | Spring, Valve |
| | 31673 | Cap, Lower valve spring |
| | 610951 | Key, Flywheel |
| | 33677A | Crankshaft |
| | 32323 | Washer, Thrust |
| | 33876 | Gasket, Stator |
| | 33562B | Piston & Pin Ass'y.(Std.)(Incl.16)(2-13/16") |
| | 33563B | Piston & Pin Ass'y. (.010" OS) (Incl. 16) |
| | 33564B | Piston & Pin Ass'y. (.020" OS) (Incl. 16) |
| | 34535 | Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore) |
| | 34536 | Piston, Pin & Ring Set (.010" OS) |
| | 34537 | Piston, Pin & Ring Set (.020" OS) |
| | 33567 | Ring Set (Std.) (2-13/16" Bore) |
| | 33568 | Ring Set (.010" OS) |
| | 33569 | Ring Set (.020" OS) |
| | 20381 | Ring, Piston pin retaining |
| | 32875 | Rod Assy., Connecting (Incl. 18 & 20) |
| | 32610A | Bolt, Connecting Rod |
| | 32654 | Dipper, Oil |
| | 27241 | Lifter, Valve |
| | 33158 | Camshaft |
| | 32700A | Cover, Cylinder (Incl. 24, 29, 30, 31 & 106) |
| 24 | 27897 | Seal, Oil |
| 25 | 33950A | Dipstick (Incl. 27) |
| 26 | 33951A | Tube, Oil filler |
| 27 | 33590 | "O" Ring |
| 28 | 27677A | * Gasket, Cylinder cover |
| 29 | 650451 | Screw, 1/4-20 x 1" (Use as required) |
| 29 | 650488 | Screw, 1/4-20 x 1-1/4" (Use as requir ed) |
| 30 | 27625 | Plug, Oil filler (Incl. 31) |
| 31 | 29673 | * Gasket, Oil fill plug |
| 32 | 33554A | Gasket, Cylinder head |
| 33 | 33016A | Head, Cylinder(Incl. 35) |
| 34 | 26073 | Washer (Not used on late production) |
| 34 | 650691 | Washer (Use as required) |
| | 650694A | Screw, 5/16-18 x 2" (Use as required) |
| | 650818 | Screw, 5/16-18 x 1-1/2" (Use as requi red) |
| | 650865 | Screw, 5/16-18 x 2" (Use as required) |
| | 6021A | Screw, 5/16-18 x 1-1/2" (As req;not w /650691) |
| | 33636 | Resistor Spark Plug (RJ-8C) |
| | 31619A | * Gasket, Breather |
| | 31337A | Breather Ass'y. (Incl. 38 & 40) |
| | 31410 | Element, Breather |
| | 650128 | Screw, 10-24 x 1/2" |
| | 33673A | * Gasket, Intake (1/32" thick) |
| | 33666 | Pipe, Intake |
| | 30646 | Screw, 1/4-20 x 1-3/8" |
| | 32698 | Link, Governor-to-throttle |
| | 31510 | Lever, Governor |
| 63A | 31334 | Rod, Governor (Incl. 67) |
| | | |


| Dof # | Dout Nu web or | 0. | Description |
|-------|----------------------|-----|---|
| | Part Number 33342 | Qty | Description Baffle, Blower housing |
| | 650561 | | Screw, $1/4-20 \times 5/8"$ |
| | 29752 | | Nut & Lockwasher Assy., 1/4-28 (As re quired) |
| 66 | 23132 | | Pop Rivet (Purchase locally)(Use as r equired) |
| | 28277 | | Washer, Flat |
| | 650168 | | Washer, Flat |
| | 29212 | | • |
| | 33663C | | Screw, 1/4-28 x 7/16" Blower Housing (For electric starter) NOTE: In original |
| 70 | 330030 | | Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing. |
| | | | Replacement housing has threaded studs. Order four nuts |
| | | | |
| | | | (29752) for remounting of starter. |
| | 27272A | | * Gasket, Air cleaner |
| | 34212 | | Bracket, Holddown |
| 78 | 30200 | | Screw, 10-24 x 9/16" |
| 81 | 29752 | | Nut & Lockwasher Assy., 1/4-28 |
| 82 | 33341 | | Extension, Baffle |
| 83 | 650701 | | Screw, 8-18 x 7/16" |
| 84 | 6201 | | Screw, 1/4-28 x 7/8" |
| | 650870 | | Screw, 1/4-28 x 1-11/16" |
| 86 | 28212 | | Spacer |
| | 26756 | | * Gasket, Carburetor |
| 90 | 31715 | | Body, Air cleaner |
| 92 | 650152 | | Screw, 8-32 x 3/8" |
| 93 | 31914 | | Bracket, Air cleaner |
| 94 | 28820 | | Screw, 10-32 x 1/2" |
| 95 | 33344 | | Baffle, Heat |
| | 34231 | | Ground Wire |
| 100 | 730127 | | Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, & |
| | | | 221A)(Use as required) |
| 105 | 30590A | | Washer, Flat |
| | 30574 | | Shaft, Mechanical governor |
| | 30591 | | Gear Assy., Governor (Incl. 105) |
| | 30588A | | Spool Governor |
| | 29193 | | Ring, Retaining |
| | 34183A | | Fuel Tank Bracket |
| | 650561 | | Screw, 1/4-20 x 5/8" |
| | 34156 | | Fuel Tank (Incl. 115 & 123) |
| | 410144B | | Fuel Cap (Std.)(Wh.Plastić)(1-1/2" I. D.) |
| 115 | 33032 | | Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low |
| | | | profile) |
| 115 | 34210 | | Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High |
| GLI | | | profile) |
| | | | . , |
| | 650665 | | Screw, 1/4-15 x 7/8" |
| | 650691 | | Washer |
| | 30795 | | Line, Fuel (Braided 16") |
| | 30962 | | Line, Fuel (Braided 32") |
| | 29774 | | Line, Fuel (Braided 8.25") |
| | 28819 | | Spring, Fuel line (Use as required) |
| | 29745 | | Extension, Blower housing |
| | 650128 | | Screw, 10-24 x 1/2" |
| | 26460 | | Clamp, Fuel line (Use as required) |
| | 650489 | | Screw, 1/4-20 x 5/8" |
| | 33670A | | * Gasket, Muffler |
| | 792020 | | Screw, 1/4-20 x 2-1/4" |
| | 30063 | | Screw, 1/4-20 x 1/2" (Use as required) |
| 140C | 650628A | | 5/16-18 x 2-3/8" |
| | | | |

| Ref # | Part Number Qty | Description |
|-------|-----------------|--|
| 140D | 26073 | Washer, flat |
| 141 | 33697A | Muffler (Front Discharge) |
| 161 | 29443 | Clip, Fuel line |
| 196A | 31335 | Clamp, Governor lever |
| 197 | 650548 | Screw, 8-32 x 5/16" |
| 201 | 610973 | Terminal Assy. (Use as required) |
| 203 | 33879A | Control Brkt(In.201,204,205,206,207,2 09,210) |
| 204 | 650139 | Screw, 8-32 x 1/2" (Use as required) |
| 204 | 650152 | Screw, 8-32 x 3/8" (Use as required) |
| 204 | 30200 | Screw, 10-24 9/16" (Use as required) |
| 205 | 30322 | Nut & Lockwasher (Use as required) |
| 206 | 650688 | Screw, 10-32 x 1" (Used on early prod uction) |
| 206 | 650549 | Screw, 5-40 x 7/16" (Used on late pro duction) |
| 207 | 32924 | Compression Spring (Used on early pro duction) |
| 207 | 31342 | Compression Spring (Used on late prod uction) |
| 209 | 28942 | Screw, 10-32 x 3/8" |
| 210 | 27793 | Clip, Conduit |
| 211 | 31426 | Spring, Extension |
| 213 | 650815 | Washer, Belleville |
| | 650607 | Nut, Flywheel |
| 217 | 33668 | Screen, Starter |
| 218 | 33667 | Cup, Starter |
| 221 | 34080 | Spacer, Flywheel key |
| 222 | 650872 | Stud, Solid State Assy. |
| | 550223 | Decal, Name |
| 240 | 34346 | Decal. Instruction |
| 240B | 31752 | Decal, Air cleaner |
| 243 | 631021 | Inlet Needle, Seat & Clip Assy. |
| 244 | 631923 | Carburetor (Incl. 87) (Refer to Division 5, Section A, page 140 |
| | | for breakdown) |
| 245 | 610942A | Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown) |
| 246 | 590420A | Rewind Starter NOTE: In original production some starters are riveted to the blowerhousing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter. (Refer to Division 5, Section C, page 25 for breakdown) |
| 249 | 33683B | * Gasket Set (Incl. items marked *) |
| 210 | | |

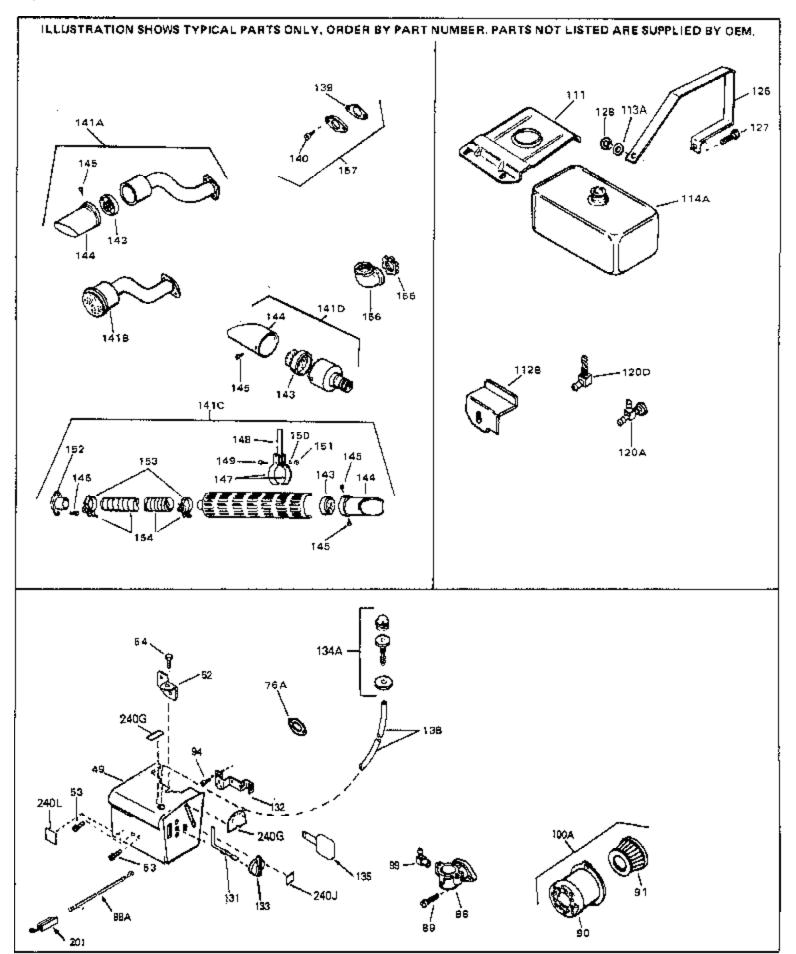

| Ref # | Part Number G | ty Description |
|-------|---------------|--|
| 13 | 33876 | Gasket, Stator |
| 90 | 31715 | Body, Air cleaner |
| 91 | 30727 | Element, Air cleaner |
| 94 | 28820 | Screw, 10-32 x 1/2" |
| 100A | 730164 | Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required) |
| 111 | 34183A | Fuel Tank Bracket |
| | 34182 | Fuel Tank Bracket |
| | 33670A | * Gasket, Muffler |
| 140 | 792020 | Screw, 1/4-20 x 2-1/4" |
| 140 | 30063 | Screw, 1/4-20 x 1/2" (Use as required) |
| 141D | 391026 | Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.) |
| 157 | 730165 | Muff.Adapter Kit (Incl.139,140)(As re quired) |
| | 610973 | Terminal Assy. (Use as required) |
| 245 | 610942A | Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown) |

HS50-67106C Engine Parts List #3

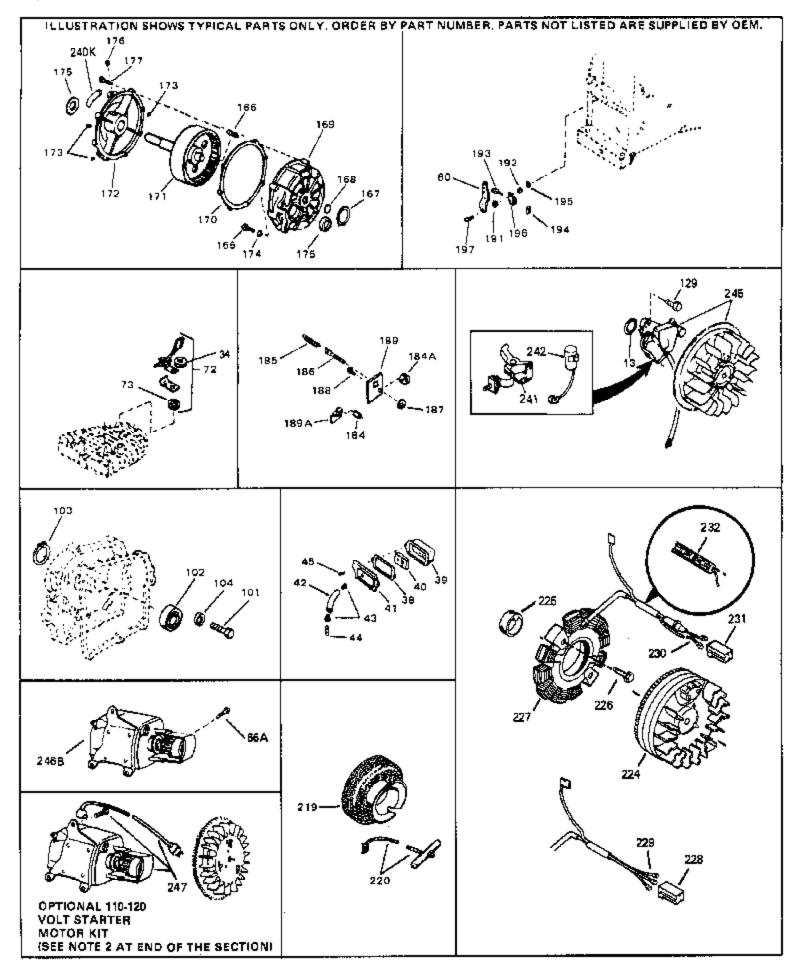

HS50-67106C Engine Parts List #3

| Ref # | Part Number | Qty | Description |
|-------|-------------|-----|--|
| 13 | 33876 | | Gasket, Stator |
| 34 | 26073 | | Washer (Not used on late production) |
| 34 | 650691 | | Washer (Use as required) |
| 38 | 31619A | | * Gasket, Breather |
| 40 | 31410 | | Element, Breather |
| 45 | 650128 | | Screw, 10-24 x 1/2" |
| 197 | 650548 | | Screw, 8-32 x 5/16" |
| 219 | 34788 | | Pulley, Starter rope |
| 225 | 35189 | | Spacer, Coil Assy. |
| 241 | 30547A | | Contact Assy., Breaker |
| 242 | 30548B | | Condenser |
| 245 | 610942A | | Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown) |
| 247 | 33290D | | Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref |