


Ref #	Part Number Qty	Description
1	33674B	Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
2	26727	Pin, Dowel
3	27642	Oil Drain Plug
4	32600	Seal, Oil
5	32644A	Intake Valve (Std.) (Incl. 9)
5	32645A	Intake Valve (1/32" OS) (Íncl. 9)
	29313C	Exhaust Valve (Std.) (Incl. 9)
	29315C	Exhaust Valve (1/32" OS) (Incl. 9)
	31672	Spring, Valve
	31673	Cap, Lower valve spring
	610951	Key, Flywheel
11	33675	Crankshaft
	32323	Washer, Thrust
	33876	Gasket, Stator
	33562B	Piston & Pin Ass'y.(Std.)(Incl.16)(2-13/16")
	33563B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33564B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34535	Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
	34536	Piston, Pin & Ring Set (.010" OS)
	34537	Piston, Pin & Ring Set (.020" OS)
	33567	Ring Set (Std.) (2-13/16" Bore)
	33568	Ring Set (.010" OS)
	33569	Ring Set (.020" OS)
	20381	Ring, Piston pin retaining
	32875	Rod Assy., Connecting (Incl. 18 & 20)
	32610A	Bolt, Connecting Rod
	32654	Dipper, Oil
	27241	Lifter, Valve
	33158	Camshaft
	32700A	Cover, Cylinder (Incl. 24, 29, 30, 31 & 106)
	27897	Seal, Oil
25	34053A	Dipstick (Incl. 27)
26	33893A	Tube Oil filler
27	33590	"O" Ring
28	27677A	* Gasket, Cylinder cover
29	650451	Screw, 1/4-20 x 1" (Use as required)
29	650488	Screw, 1/4-20 x 1-1/4" (Use as requir ed)
30	27625	Plug, Oil filler (Incl. 31)
31	29673	* Gasket, Oil fill plug
32	33554A	Gasket, Cylinder head
33	33016A	Head, Cylinder(Incl. 35)
34	26073	Washer (Not used on late production)
34	650691	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650818	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650865	Screw, 5/16-18 x 2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
	33636	Resistor Spark Plug (RJ-8C)
	31619A	* Gasket, Breather
	31337A	Breather Ass'y. (Incl. 38 & 40)
	31410	Element, Breather
	650128	Screw, 10-24 x 1/2"
	33673A	* Gasket, Intake (1/32" thick)
	33666	Pipe, Intake
	30646	Screw, 1/4-20 x 1-3/8"
	32698	Link, Governor-to-throttle
	31510	Lever, Governor
63A	31334	Rod, Governor (Incl. 67)


		Qty	Description
64	33342		Baffle, Blower housing
65	650561		Screw, 1/4-20 x 5/8"
	29752		Nut & Lockwasher Assy., 1/4-28 (As re quired)
	29152		
66			Pop Rivet (Purchase locally)(Use as r equired)
67	28277		Washer, Flat
68	650168		Washer, Flat
	29212		
			Screw, 1/4-28 x 7/16"
70	33663C		Blower Housing (For electric starter) NOTE: In original
			production some starters are riveted to the blower housing.
			Replacement housing has threaded studs. Order four nuts
			(29752) for remounting of starter.
76	27272A		* Gasket, Air cleaner
	34212		Bracket, Holddown
78	30200		Screw, 10-24 x 9/16"
81	29752		Nut & Lockwasher Assy., 1/4-28
	33341		Extension, Baffle
	650701		Screw, 8-18 x 7/16"
84	6201		Screw, 1/4-28 x 7/8"
85	650870		Screw, 1/4-28 x 1-11/16"
	28212		Spacer
			1
	26756		* Gasket, Carburetor
90	31715		Body, Air cleaner
92	650152		Screw, 8-32 x 3/8"
	31914		Bracket, Air cleaner
94	28820		Screw, 10-32 x 1/2"
95	33344		Baffle, Heat
	35349		Ground Wire
100	730127		Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &
			221A)(Use as required)
405	205004		Mashar Elet
	30590A		Washer, Flat
106	30574		Shaft, Mechanical governor
107	30591		Gear Assy., Governor (Incl. 105)
	30588A		Spool Governor
109	29193		Ring, Retaining
111	28371B		Fuel Tank Bracket
112	32762		Fuel Tank Bracket
	650561		Screw, 1/4-20 x 5/8"
	34711		Fuel Tank (Incl. 115 & 123)
115	410144B		Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.)
	33032		Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low
			profile)
			home
115	34210		Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High
115			
			profile)
110	650665		Scrow $1/4_{15} \times 7/8''$
	650665		Screw, 1/4-15 x 7/8"
118	30962		Line, Fuel (Braided 32")
118	29774		Line, Fuel (Braided 8.25")
	30795		Line, Fuel (Braided 16")
	28819		Spring, Fuel line (Use as required)
121	29745		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	26460		Clamp, Fuel line (Use as required)
129	650489		Screw, 1/4-20 x 5/8"
139	33670A		* Gasket, Muffler
	747/17/1		
140	792020		Screw, 1/4-20 x 2-1/4"
140 140	792020 30063 650628A		Screw, 1/4-20 x 2-1/4 Screw, 1/4-20 x 1/2" (Use as required ) 5/16-18 x 2-3/8"

Ref #	Part Number Qty	Description
140D	26073	Washer, flat
141	33697A	Muffler (Front Discharge)
161	29443	Clip, Fuel line
196A	31335	Clamp, Governor lever
197	650548	Screw, 8-32 x 5/16"
201	610973	Terminal Assy. (Use as required)
203	33879A	Control Brkt(In.201,204,205,206,207,2 09,210)
204	650139	Screw, 8-32 x 1/2" (Use as required)
204	650152	Screw, 8-32 x 3/8" (Use as required)
204	30200	Screw, 10-24 9/16" (Use as required)
205	30322	Nut & Lockwasher (Use as required)
206	650688	Screw, 10-32 x 1" (Used on early prod uction)
206	650549	Screw, 5-40 x 7/16" (Used on late pro duction)
207	32924	Compression Spring (Used on early pro duction)
207	31342	Compression Spring (Used on late prod uction)
209	28942	Screw, 10-32 x 3/8"
210	27793	Clip, Conduit
211	31426	Spring, Extension
213	650815	Washer, Belleville
214	650607	Nut, Flywheel
217	33668	Screen, Starter
218	33667	Cup, Starter
221	34080	Spacer, Flywheel key
222	650872	Stud, Solid State Assy.
240A	550223	Decal, Name
240	34346	Decal. Instruction
240B	31752	Decal, Air cleaner
243	631021	Inlet Needle, Seat & Clip Assy.
244	631923	Carburetor (Incl. 87) (Refer to Division 5, Section A, page 140
		for breakdown)
245	610942A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)
246	590420A	Rewind Starter NOTE: In original production some starters are riveted to the blowerhousing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter. (Refer to Division 5, Section C, page 25 for breakdown)
249	33683B	* Gasket Set (Incl. items marked *)

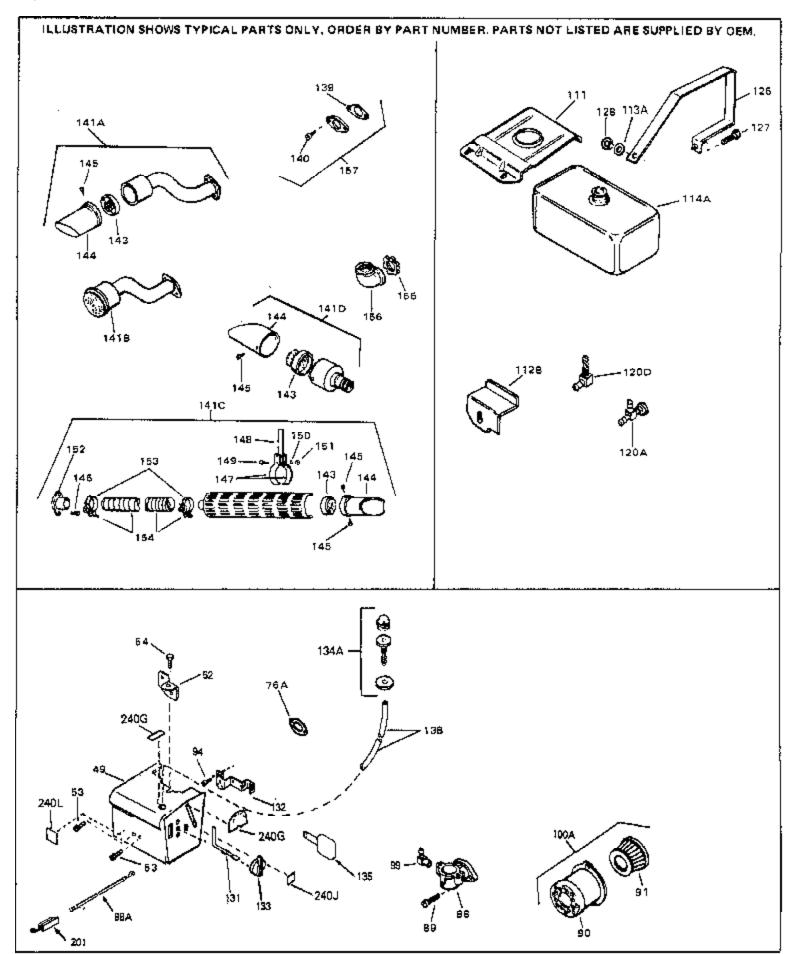

Ref #	Part Number	Qty	Description
13	33876		Gasket, Stator
90	31715		Body, Air cleaner
91	30727		Element, Air cleaner
94	28820		Screw, 10-32 x 1/2"
100A	730164		Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
111	28371B		Fuel Tank Bracket
139	33670A		* Gasket, Muffler
140	792020		Screw, 1/4-20 x 2-1/4"
140	30063		Screw, 1/4-20 x 1/2" (Use as required )
141D	391026		Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
157	730165		Muff.Adapter Kit (Incl.139,140)(As re quired)
201	610973		Terminal Assy. (Use as required)
245	610942A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)

HS50-67131C Engine Parts List #3

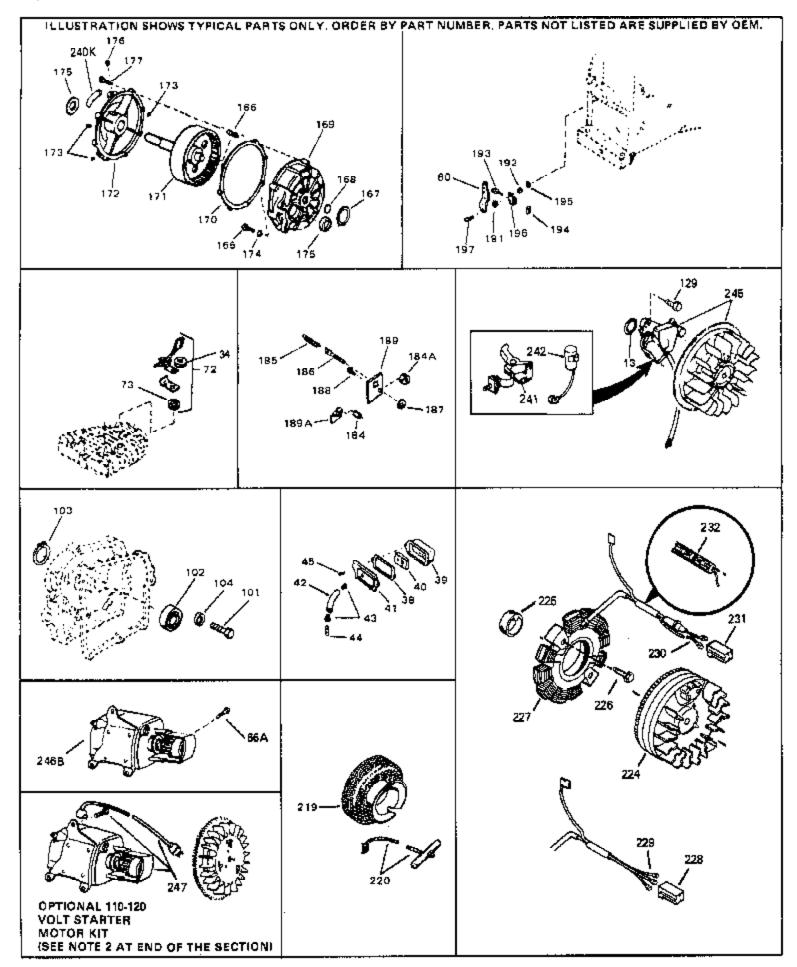

## HS50-67131C Engine Parts List #3

Ref #	Part Number 0	ty Description
13	33876	Gasket, Stator
34	26073	Washer (Not used on late production)
34	650691	Washer (Use as required)
38	31619A	* Gasket, Breather
40	31410	Element, Breather
45	650128	Screw, 10-24 x 1/2"
197	650548	Screw, 8-32 x 5/16"
219	34788	Pulley, Starter rope
225	35189	Spacer, Coil Assy.
241	30547A	Contact Assy., Breaker
242	30548B	Condenser
245	610942A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)
247	33290D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref