



Ref #	Part Number	Qty	Description
	33674B	٠.,	Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
	26727		Pin, Dowel
	27642		Oil Drain Plug
	32600		Seal, Oil
	32644A		Intake Valve (Std.) (Incl. 9)
	32645A		Intake Valve (1/32" OS) (Incl. 9)
	29313C		Exhaust Valve (Std.) (Incl. 9)
	29315C		Exhaust Valve (1/32" OS) (Incl. 9)
8	31672		Spring, Valve
9	31673		Cap, Lower valve spring
10	610951		Key, Flywheel
11	33676		Crankshaft (Incl. 24)
	33876		Gasket, Stator
	33562B		Piston & Pin Ass'y.(Std.)(Incl.16)(2- 13/16")
	33563B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33564B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34535		Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
	34536		Piston, Pin & Ring Set (.010" OS)
	34537		Piston, Pin & Ring Set (.020" OS)
	33567		Ring Set (Std.) (2-13/16" Bore)
	33568		Ring Set (.010" OS)
	33569		Ring Set (.020" OS)
	20381		Ring, Piston pin retaining
17	32875		Rod Assy., Connecting (Incl. 18 & 20)
18	32610A		Bolt, Connecting Rod
20	32654		Dipper, Oil
21	27241		Lifter, Valve
22	33158		Camshaft
	30756B		Cover, Cylinder (Incl. 24, 30, 31 & 1 06)
	28540		Seal, Oil
	27677A		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1" (Use as required)
	650488		Screw, 1/4-20 x 1-1/4" (Use as required)
	27625		Plug, Oil filler (Incl. 31)
	29673		* Gasket, Oil fill plug
	33554A		Gasket, Cylinder head
	33016A		Head, Cylinder (Incl. 35)
	26073		Washer (Not used on late production)
	650691		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650818		Screw, 5/16-18 x 1-1/2" (Use as requi red)
35	650865		Screw, 5/16-18 x 2" (Use as required)
36	6021A		Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
37	33636		Resistor Spark Plug (RJ-8C)
38	31619A		* Gasket, Breather
	31337A		Breather Ass'y. (Incl. 38 & 40)
	31410		Element, Breather
	650128		Screw, 10-24 x 1/2"
	33673A		* Gasket, Intake (1/32" thick)
	33666		Pipe, Intake
	30646		Screw, 1/4-20 x 1-3/8"
	32698		Link, Governor-to-throttle
	31510		Lever, Governor
	31334		Rod, Governor (Incl. 67)
	33342		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	29752		Nut & Lockwasher Assy., 1/4-28 (As re quired)
66			Pop Rivet (Purchase locally)(Use as r equired)

Ref # Part Number Qty Description 67 28277 Washer, Flat 68 650168 Washer, Flat 69 29212 Screw, 1/4-28 x 7/16" 70 33663C Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing has threaded studs. Order fou (29752) for remounting of starter. 76 27272A * Gasket, Air cleaner 77 34212 Bracket, Holddown 78 30200 Screw, 10-24 x 9/16" 81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 14-28 x 7/8" 85 650870 Screw, 1/4-28 x 7/8" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire Air Cleaner Assy. (Incl.76,76A,90A,91A,92,93,94, & 221A)(Use as required)	ısing.
68 650168 69 29212 70 33663C Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing has threaded studs. Order fou (29752) for remounting of starter. 76 27272A 78 30200 78 30200 78 30200 79 33411 79 3221 81 29752 82 33341 83 650701 84 6201 85 650870 86 28212 87 26756 89 31715 89 31914 89 428820 99 31914 99 34231 100 730127 Washer, Flat Screw, 1/4-28 x 7/16" Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing has threaded studs. Order fou (29752) for remounting of starter. * Gasket, Air cleaner Bracket, Holddown Screw, 10-24 x 9/16" Nut & Lockwasher Assy., 1/4-28 Extension, Baffle Screw, 8-18 x 7/16" Screw, 8-8 x 7/16" Screw, 1/4-28 x 7/8" Screw, 1/4-28 x 1-11/16" Spacer * Gasket, Carburetor Body, Air cleaner Screw, 8-32 x 3/8" Bracket, Air cleaner Screw, 10-32 x 1/2" Bracket, Air cleaner	ısing.
69 29212 Screw, 1/4-28 x 7/16" 70 33663C Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing has threaded studs. Order four (29752) for remounting of starter. 76 27272A * Gasket, Air cleaner 77 34212 Bracket, Holddown 81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Assy. (Incl.76,76A,90A,91A,92,93,94, &	ısing.
Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower house placement housing has threaded studs. Order four (29752) for remounting of starter. 76 27272A	ısing.
production some starters are riveted to the blower hou Replacement housing has threaded studs. Order four (29752) for remounting of starter. 76 27272A	ısing.
Replacement housing has threaded studs. Order four (29752) for remounting of starter. * Gasket, Air cleaner * Gasket, Holddown * 30200 * Screw, 10-24 x 9/16" * Nut & Lockwasher Assy., 1/4-28 * Sasy, 1/4-28 * Screw, 8-18 x 7/16" * Screw, 8-18 x 7/16" * Screw, 1/4-28 x 7/8" * Gasket, Carburetor * Gasket, Air cleaner * Gasket, Holddown * Screw, 10-24 x 9/16" * Nut & Lockwasher Assy., 1/4-28 * Screw, 8-18 x 7/16" * Screw, 1/4-28 x 7/16" * Screw, 1/4-28 x 7/8" * Screw, 1/4-28 x 1-11/16" * Sasy, 1/4-28 x 1-11/16" *	•
Replacement housing has threaded studs. Order four (29752) for remounting of starter. * Gasket, Air cleaner * Gasket, Holddown * 30200 * Screw, 10-24 x 9/16" * Nut & Lockwasher Assy., 1/4-28 * Sasy, 1/4-28 * Screw, 8-18 x 7/16" * Screw, 8-18 x 7/16" * Screw, 1/4-28 x 7/8" * Gasket, Carburetor * Gasket, Air cleaner * Gasket, Holddown * Screw, 10-24 x 9/16" * Nut & Lockwasher Assy., 1/4-28 * Screw, 8-18 x 7/16" * Screw, 1/4-28 x 7/16" * Screw, 1/4-28 x 7/8" * Screw, 1/4-28 x 1-11/16" * Sasy, 1/4-28 x 1-11/16" *	•
(29752) for remounting of starter. 76 27272A * Gasket, Air cleaner 77 34212 Bracket, Holddown Screw, 10-24 x 9/16" Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 87 26756 89 31715 Body, Air cleaner 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
* Gasket, Air cleaner 77 34212 Bracket, Holddown 78 30200 Screw, 10-24 x 9/16" 81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
77 34212 Bracket, Holddown 78 30200 Screw, 10-24 x 9/16" 81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
78 30200 Screw, 10-24 x 9/16" 81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
81 29752 Nut & Lockwasher Assy., 1/4-28 82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
82 33341 Extension, Baffle 83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
83 650701 Screw, 8-18 x 7/16" 84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
84 6201 Screw, 1/4-28 x 7/8" 85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
85 650870 Screw, 1/4-28 x 1-11/16" 86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
86 28212 Spacer 87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
87 26756 * Gasket, Carburetor 90 31715 Body, Air cleaner 92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
90 31715 Body, Air cleaner 91 650152 Screw, 8-32 x 3/8" 92 31914 Bracket, Air cleaner 93 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
92 650152 Screw, 8-32 x 3/8" 93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
93 31914 Bracket, Air cleaner 94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
94 28820 Screw, 10-32 x 1/2" 95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
95 33344 Baffle, Heat 98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
98 34231 Ground Wire 100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
100 730127 Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &	
221A)(Use as required)	
102 28458 Bearing, Ball	
105 30590A Washer, Flat	
,	
$^{\prime}$	
107 30591 Gear Assy.,Governor (Incl. 105)	
108 30588A Spool Governor	
109 29193 Ring, Retaining	
111 28371B Fuel Tank Bracket	
112 32762 Fuel Tank Bracket	
113 650561 Screw, 1/4-20 x 5/8"	
114 35584 Fuel Tank (Incl. 115 & 123)	
115 410144B Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.)	
115 33032 Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, L	.OW
profile)	
145 24240 Fuel Con / Bod Blootie)/4 2/46" LD \ / Court recistont L	liab
115 34210 Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Fuel Cap (Red Plastic) (1-3/16" I.D.)	lign
profile)	
116 650665 Screw, 1/4-15 x 7/8"	
118 30962 Line, Fuel (Braided 32")	
118 29774 Line, Fuel (Braided 8.25")	
118 30795 Line, Fuel (Braided 16")	
119 28819 Spring, Fuel line (Use as required)	
121 29745 Extension, Blower housing	
121 29745 Extension, Blower Housing 122 650128 Screw, 10-24 x 1/2"	
·	
123 26460 Clamp, Fuel line (Use as required)	
129 650489 Screw, 1/4-20 x 5/8"	
139 33670A * Gasket, Muffler	
140 792020 Screw, 1/4-20 x 2-1/4"	
140 30063 Screw, 1/4-20 x 1/2" (Use as required)	
140C 650628A 5/16-18 x 2-3/8"	
140D 26073 Washer, flat	
141 33671A Muffler (Side Discharge)	
196A 31335 Clamp, Governor lever	
17	

Ref #	Part Number	Qty	Description
197	650548		Screw, 8-32 x 5/16"
201	610973		Terminal Assy. (Use as required)
203	33858A		Control Bracket(Incl.201,204,205,206, 207)
204	650139		Screw, 8-32 x 1/2" (Use as required)
204	650152		Screw, 8-32 x 3/8" (Use as required)
204	30200		Screw, 10-24 9/16" (Use as required)
205	30322		Nut & Lockwasher (Use as required)
206	650688		Screw, 10-32 x 1" (Used on early prod uction)
206	650549		Screw, 5-40 x 7/16" (Used on late pro duction)
207	32924		Compression Spring (Used on early pro duction)
207	31342		Compression Spring (Used on late prod uction)
211	31426		Spring, Extension
212	32410		Knob, Speed control
213	650815		Washer, Belleville
214	650607		Nut, Flywheel
217	33668		Screen, Starter
218	33667		Cup, Starter
221	34080		Spacer, Flywheel key
222	650872		Stud, Solid State Assy.
240	34346		Decal. Instruction
240A	550223		Decal, Name
240B	31752		Decal, Air cleaner
	631021		Inlet Needle, Seat & Clip Assy.
244	631923		Carburetor (Incl. 87) (Refer to Division 5, Section A, page 140 for breakdown)
245	610942A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)
246	590420A		Rewind Starter NOTE: In original production some starters are riveted to the blowerhousing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter. (Refer to Division 5, Section C, page 25 for breakdown)
249	33683B		* Gasket Set (Incl. items marked *)

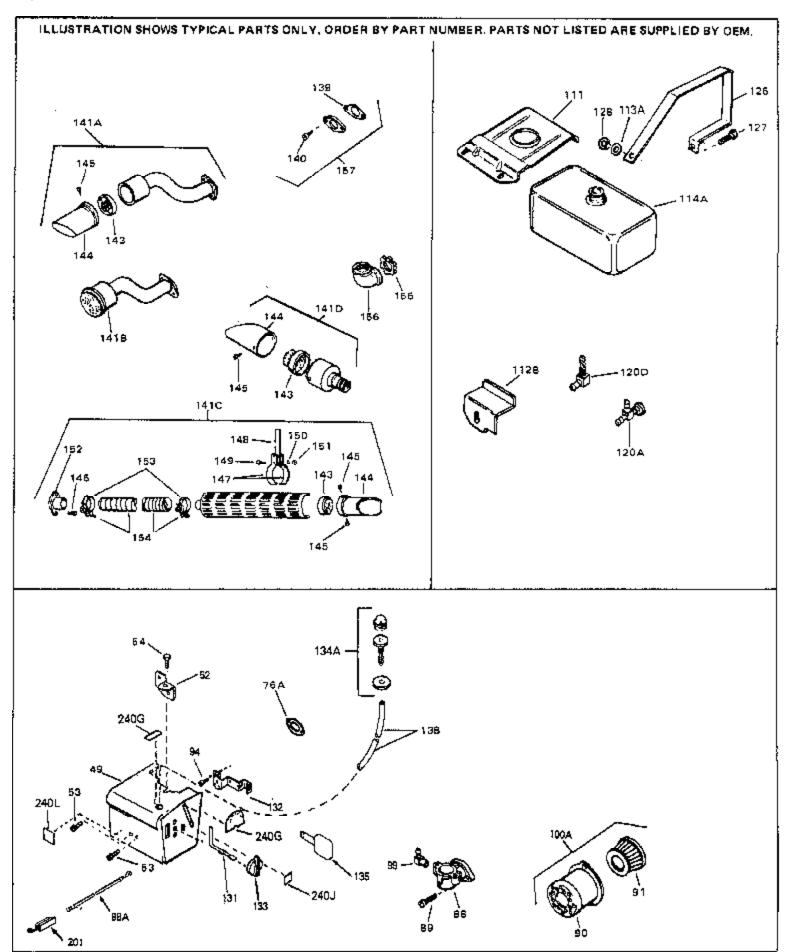

Ref #	Part Number	Qty	Description
13	33876	Ť	Gasket, Stator
90	31715		Body, Air cleaner
91	30727		Element, Air cleaner
94	28820		Screw, 10-32 x 1/2"
100A	730164		Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
111	28371B		Fuel Tank Bracket
139	33670A		* Gasket, Muffler
140	792020		Screw, 1/4-20 x 2-1/4"
140	30063		Screw, 1/4-20 x 1/2" (Use as required)
141D	391026		Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
157	730165		Muff.Adapter Kit (Incl.139,140)(As re quired)
201	610973		Terminal Assy. (Use as required)
245	610942A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)

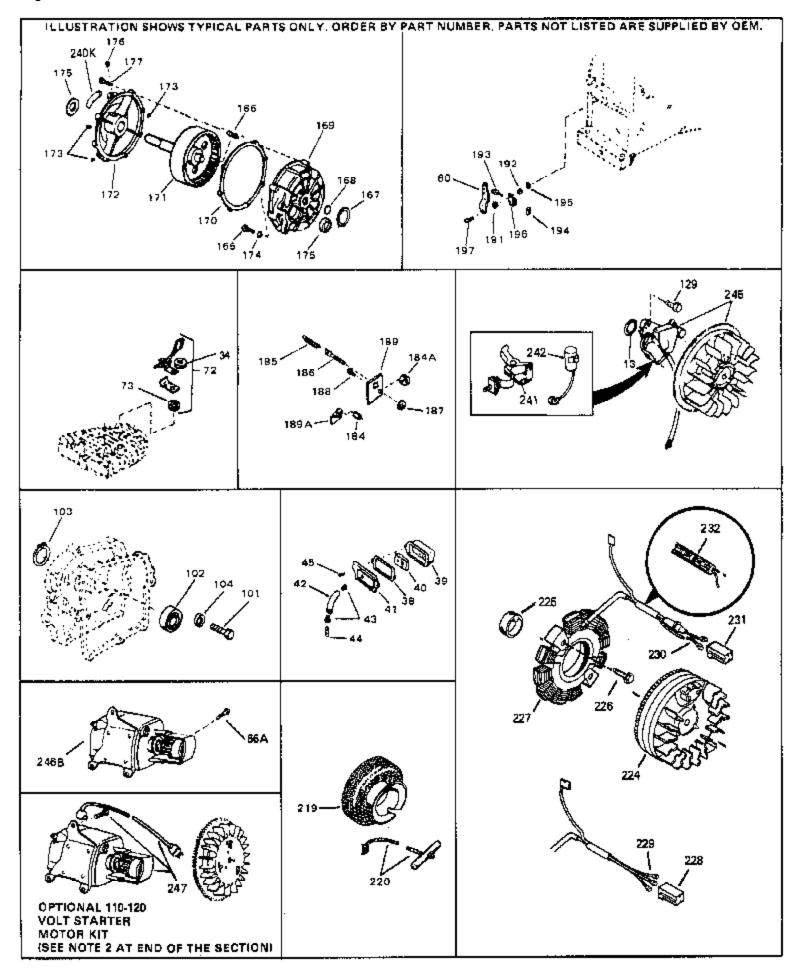

Ref #	Part Number C	ty Description
13	33876	Gasket, Stator
34	26073	Washer (Not used on late production)
34	650691	Washer (Use as required)
38	31619A	* Gasket, Breather
40	31410	Element, Breather
45	650128	Screw, 10-24 x 1/2"
101	30200	Screw, 10-24 x 9/16"
102	28458	Bearing, Ball
103	28539	Ring, Retaining
104	28537	Washer, Flat
197	650548	Screw, 8-32 x 5/16"
219	34788	Pulley, Starter rope
225	35189	Spacer, Coil Assy.
241	30547A	Contact Assy., Breaker
242	30548B	Condenser
245	610942A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown)
247	33290D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref