



		Qty	Description
1	33674B		Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
2	26727		Pin, Dowel
3	27642		Oil Drain Plug
4	32600		Seal, Oil
5	32644A		Intake Valve (Std.) (Incl. 9)
	32645A		Intake Valve (1/32" OS) (Incl. 9)
	29313C		Exhaust Valve (Std.) (Incl. 9)
	29315C		Exhaust Valve (1/32" OS) (Incl. 9)
	31672		Spring, Valve
	31673		Cap, Lower valve spring
	610951		Key, Flywheel
	33677A		Crankshaft
	32323		Washer, Thrust
	33876		
			Gasket, Stator Pioton & Pio Apply (Std.) (Incl. 16)(2, 13/16")
	33562B		Piston & Pin Ass'y.(Std.)(Incl.16)(2- 13/16")
	33563B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33564B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34535		Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
	34536		Piston, Pin & Ring Set (.010" OS)
	34537		Piston, Pin & Ring Set (.020" OS)
	33567		Ring Set (Std.) (2-13/16" Bore)
	33568		Ring Set (.010" OS)
	33569		Ring Set (.020" OS)
	20381		Ring, Piston pin retaining
	32875		Rod Assy., Connecting (Incl. 18 & 20)
	32610A		Bolt, Connecting Rod
20	32654		Dipper, Oil
21	27241		Lifter, Valve
22	33158		Camshaft
23	32700A		Cover, Cylinder (Incl. 24, 29, 30, 31 & 106)
24	27897		Seal, Oil
28	27677A		* Gasket, Cylinder cover
29	650451		Screw, 1/4-20 x 1" (Use as required)
29	650488		Screw, 1/4-20 x 1-1/4" (Use as requir ed)
	27625		Plug, Oil filler (Incl. 31)
31	29673		* Gasket, Oil fill plug
	33554A		Gasket, Cylinder head
	33016A		Head, Cylinder(Incl. 35)
	26073		Washer (Not used on late production)
	650691		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650818		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650865		Screw, 5/16-18 x 2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
	33636		Resistor Spark Plug (RJ-8C)
	31619A		* Gasket, Breather
	31337A		
			Breather Ass'y. (Incl. 38 & 40)
	31410		Element, Breather
	650128		Screw, 10-24 x 1/2" * Cooket Intelse (4/22" thick)
	33673A		* Gasket, Intake (1/32" thick)
	33691		Intake Pipe
	32698		Link, Governor-to-throttle
	32871		Lever, Governor
	31334		Rod, Governor (Incl. 67)
	33342		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	29752		Nut & Lockwasher Assy., 1/4-28 (As re quired)
66			Pop Rivet (Purchase locally)(Use as r equired)

Ref #	Part Number 0	Qty Description
67 68 69	28277 650168 29212 33663C	Washer, Flat Washer, Flat Screw, 1/4-28 x 7/16" Blower Housing (For electric starter) NOTE: In original production some starters are riveted to the blower housing. Replacement housing has threaded studs. Order four nuts (29752) for remounting of starter.
78 81 82 83 84 85 86 87 94 95	34212 30200 29752 33341 650701 6201 650870 28212 26756 28820 33344 34241 730127	Bracket, Holddown Screw, 10-24 x 9/16" Nut & Lockwasher Assy., 1/4-28 Extension, Baffle Screw, 8-18 x 7/16" Screw, 1/4-28 x 7/8" Screw, 1/4-28 x 1-11/16" Spacer * Gasket, Carburetor Screw, 10-32 x 1/2" Baffle, Heat Ground Wire Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, & 221A)(Use as required)
106 107 108 109 111 112 113A 113 114	30590A 30574 30591 30588A 29193 28371B 32762 650675 650805 34711 410144B 33032	Washer, Flat Shaft, Mechanical governor Gear Assy.,Governor (Incl. 105) Spool Governor Ring, Retaining Fuel Tank Bracket Fuel Tank Bracket Washer, Flat Screw, 1/4-20 x 11/16" Fuel Tank (Incl. 115 & 123) Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.) Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low profile)
115	34210	Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High profile)
118 118 119 121 122 123 129 130 138 139 140 140 140D 140C 141 161A 180	650665 29774 30795 30962 28819 29745 650128 26460 650489 610118 32180C 33670A 650327 30063 26073 650628A 33697A 27275 34126 28545	Screw, 1/4-15 x 7/8" Line, Fuel (Braided 8.25") Line, Fuel (Braided 16") Line, Fuel (Braided 32") Spring, Fuel line (Use as required) Extension, Blower housing Screw, 10-24 x 1/2" Clamp, Fuel line (Use as required) Screw, 1/4-20 x 5/8" Cover, Spark plug Line, Primer * Gasket, Muffler Screw, 1/4-20 x 2-1/2" Screw, 1/4-20 x 1/2" (Use as required) Washer, flat 5/16-18 x 2-3/8" Muffler (Front Discharge) Clip, Wire retaining Bracket, Grommet mounting Grommet, Plastic

Ref #	Part Number Qty	Description
183	650760	Screw, 8-32 x 3/8"
196A	31335	Clamp, Governor lever
197	650548	Screw, 8-32 x 5/16"
201	610973	Terminal Assy. (Use as required)
203	33858A	Control Bracket(Incl.201,204,205,206, 207)
204	650139	Screw, 8-32 x 1/2" (Use as required)
204	650152	Screw, 8-32 x 3/8" (Use as required)
204	30200	Screw, 10-24 9/16" (Use as required)
205	30322	Nut & Lockwasher (Use as required)
206	650688	Screw, 10-32 x 1" (Used on early prod uction)
206	650549	Screw, 5-40 x 7/16" (Used on late pro duction)
207	32924	Compression Spring (Used on early pro duction)
207	31342	Compression Spring (Used on late prod uction)
	31426	Spring, Extension
	32410	Knob, Speed control
	650815	Washer, Belleville
	650607	Nut, Flywheel
	32576	Seal, Snow guard
216	34127	Guard, Starter
	33668	Screen, Starter
	33667	Cup, Starter
	34080	Spacer, Flywheel key
	650872	Stud, Solid State Assy.
	34170	Decal, Instruction
	35344	Decal, Control
	34346	Decal. Instruction
	631021	Inlet Needle, Seat & Clip Assy.
244	632107	Carburetor (Incl. 87) (Refer to Division 5, Section A, page 168
		for breakdown)
245	610944A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown.
246	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
249	33683B	* Gasket Set (Incl. items marked *)

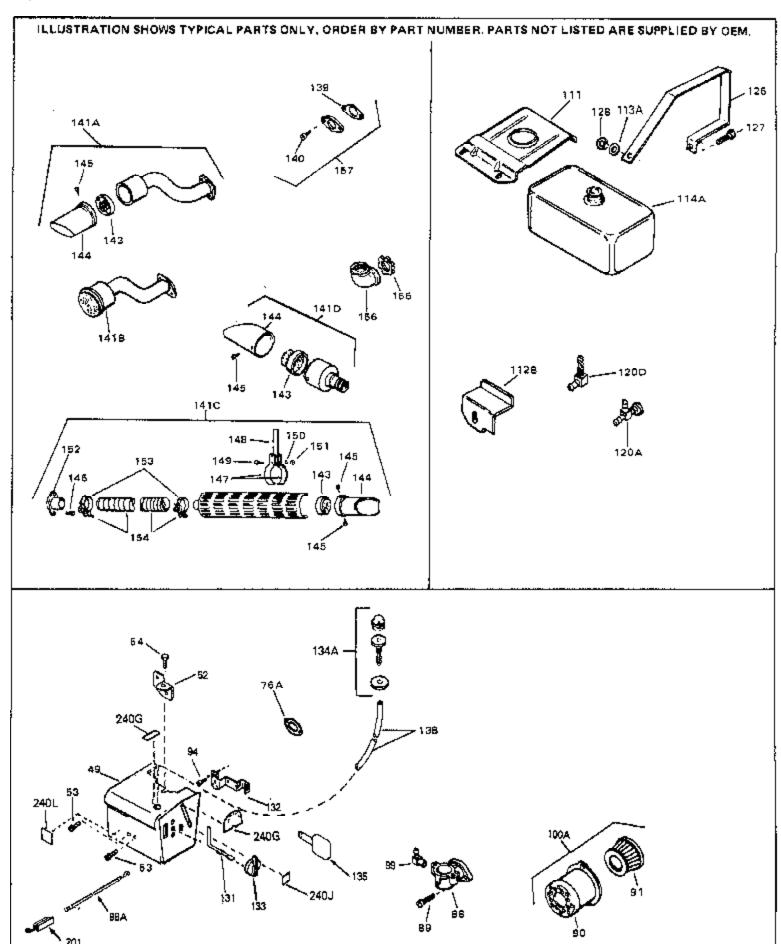

Ref #	Part Number	Qty	Description
	33876	-	Gasket, Stator
49	34134		Cover, Carburetor
52	33333		Bracket, Carburetor cover
53	650257		Screw, 8-32 x 5/16"
54	650732		Screw, 10-24 x 3/8"
	28820		Screw, 10-32 x 1/2"
100A	730164		Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
111	28371B		Fuel Tank Bracket
113A	650675		Washer, Flat
131	34582		Rod, Choke
132	34583		Bracket, Choke
133	35438		Knob, Choke
134A	570629A		Primer Assy.
138	32180C		Line, Primer
139	33670A		* Gasket, Muffler
140	650327		Screw, 1/4-20 x 2-1/2"
140	30063		Screw, 1/4-20 x 1/2" (Use as required)
141D	391026		Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
	730165 610973		Muff.Adapter Kit (Incl.139,140)(As re quired) Terminal Assy. (Use as required)
	34414		Decal, Warning
	34144		Decal, Primer
	34589		Decal, "Choke "
	610944A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown.

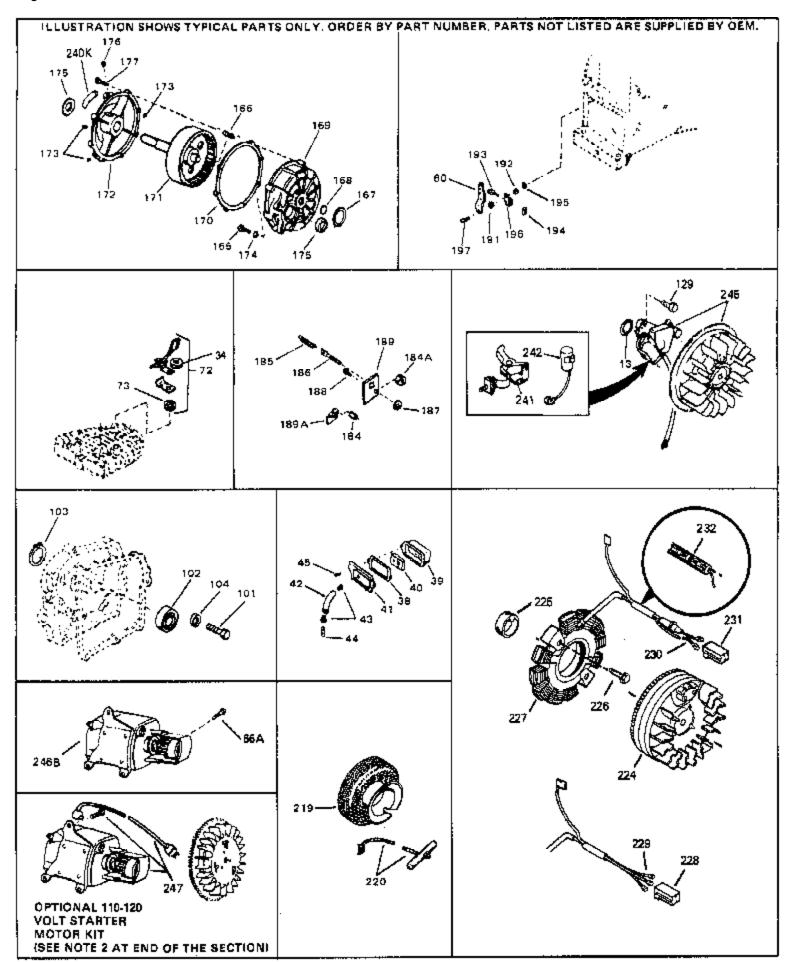

Ref #	Part Number	Qty	Description
13	33876	•	Gasket, Stator
34	26073		Washer (Not used on late production)
34	650691		Washer (Use as required)
38	31619A		* Gasket, Breather
40	31410		Element, Breather
45	650128		Screw, 10-24 x 1/2"
197	650548		Screw, 8-32 x 5/16"
219	34788		Pulley, Starter rope
225	35189		Spacer, Coil Assy.
241	30547A		Contact Assy., Breaker
242	30548B		Condenser
245	610944A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 35 for breakdown.
247	33290D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref