



D. C. C. D. C. M. C.	
Ref # Part Number	Qty Description
1 33674B	Cylinder (Incl. 2, 3 & 4) (2-13/16" B ore)
2 26727	Pin, Dowel
3 27642	Oil Drain Plug
3 28582	Oil Drain Plug
4 32600	Seal, Oil
5 32644A	Intake Valve (Std.) (Incl. 9)
5 32645A	Intake Valve (1/32" OS) (Incl. 9)
6 29313C	Exhaust Valve (Std.) (Incl. 9)
6 29315C	Exhaust Valve (1/32" OS) (Incl. 9)
8 31672	Spring, Valve
9 31673	Cap, Lower valve spring
10 610961	Key Flywheel
11 34740	Crankshaft
12 32323	Washer, Thrust
13 33876	Gasket, Stator
	·
14 34535	Piston, Pin & Ring Set (Std.) (2-13/1 6" Bore)
14 34536	Piston, Pin & Ring Set (.010" OS)
14 34537	Piston, Pin & Ring Set (.020" OS)
14A 33562B	Piston & Pin Ass'y.(Std.)(Incl.16)(2- 13/16")
14A 33563B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 33564B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15 33567	Ring Set (Std.) (2-13/16" Bore)
15 33568	Ring Set (.010" OS)
15 33569	Ring Set (.020" OS)
16 20381	Ring, Piston pin retaining
17 32875	Rod Assy., Connecting (Incl. 18 & 20)
18 32610A	Bolt, Connecting Rod
20 32654	Dipper, Oil
21 27241	Lifter, Valve
22 33158	Camshaft
23 32700A	Cover, Cylinder (Incl. 24, 29, 30, 31 & 106)
24 27897	Seal, Oil
25 34763	Dipstick (Incl. 27)
26 34762	Tube, Oil fill
27 33590	"O" Ring
28 27677A	* Gasket, Cylinder cover
29 650451	Screw, 1/4-20 x 1" (Use as required)
29 650488	Screw, 1/4-20 x 1-1/4" (Use as required)
32 33554A	Gasket, Cylinder head
33 33016A	Head, Cylinder Incl. 35)
34 26073	Washer (Not used on late production)
34 650691	Washer (Use as required)
35 650694A	Screw, 5/16-18 x 2" (Use as required)
35 650818	Screw, 5/16-18 x 1-1/2" (Use as requi red)
35 650865	Screw, 5/16-18 x 2" (Use as required)
36 6021A	Screw, 5/16-18 x 1-1/2" (As req;not w /650691)
37 34251	Resistor Spark Plug (RJ-17LM)
38 31619A	* Gasket, Breather
39A 31337A	Breather Ass'y. (Incl. 38 & 40)
40 31410	Element, Breather
45 650128	Screw, 10-24 x 1/2"
46 33673A	* Gasket, Intake (1/32" thick)
48 30646	Screw, 1/4-20 x 1-3/8"
59 32698	Link, Governor-to-throttle
60 31510	Lever, Governor
63A 31334	Rod, Governor (Incl. 67)
64 33342	Baffle, Blower housing
65 650561	Screw, 1/4-20 x 5/8"
33 300001	

Ref #	Part Number Qty	Description
66	29752	Nut & Lockwasher Assy., 1/4-28 (As re quired)
66		Pop Rivet (Purchase locally)(Use as r equired)
67	28277	Washer, Flat
68	650168	Washer, Flat
	29212	Screw, 1/4-28 x 7/16"
	33663C	Blower Housing (For electric starter) NOTE: In original
		production some starters are riveted to the blower housing.
		Replacement housing has threaded studs. Order four nuts
		(29752) for remounting of starter.
	34212	Bracket, Holddown
	30200	Screw, 10-24 x 9/16"
	29752	Nut & Lockwasher Assy., 1/4-28
	650701	Screw, 8-18 x 7/16"
	6201	Screw, 1/4-28 x 7/8"
	650870	Screw, 1/4-28 x 1-11/16"
	26756	* Gasket, Carburetor
	35349	Ground Wire
100	730127	Air Cleaner Ass'y. (Incl.76,76A,90A,91A,92,93,94, &
		221A)(Use as required)
105	30590A	Washer, Flat
	30574	Shaft, Mechanical governor
	30591	Gear Assy.,Governor (Incl. 105)
	30588A	Spool Governor
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
	650675	Washer, Flat
	410144B	Fuel Cap (Std.)(Wh.Plastic)(1-1/2" I. D.)
	33032	Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, Low
110	00002	profile)
115	34210	Fuel Cap (Red Plastic)(1-3/16" I.D.) (Spurt resistant, High
		profile)
118	29774	Line, Fuel (Braided 8.25")
118	30795	Line, Fuel (Braided 16")
118	30962	Line, Fuel (Braided 32")
	28819	Spring, Fuel line (Use as required)
121	29745	Extension, Blower housing
122	650128	Screw, 10-24 x 1/2"
123	26460	Clamp, Fuel line (Use as required)
129	650489	Screw, 1/4-20 x 5/8"
130	610118	Cover, Spark plug
134	34814	Primer Assy.
138	32180C	Line, Primer
139	33670A	* Gasket, Muffler
140B	30063	Screw, 1/4-20 x 1/2"
140D	26073	Washer, flat
140C	650628A	5/16-18 x 2-3/8"
140	650327	Screw, 1/4-20 x 2-1/2"
140	30063	Screw, 1/4-20 x 1/2" (Use as required )
140A	8345	Flatwasher, 1/4"
141	34622A	Muffler
161A	27275	Clip, Wire retaining
	33356	Terminal, Ground
	28545	Grommet, Plastic
	650760	Screw, 8-32 x 3/8"
	31335	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"

Ref #	Part Number	Qty	Description
201	610973		Terminal Assy. (Use as required)
204	650139		Screw, 8-32 x 1/2" (Use as required)
204	650152		Screw, 8-32 x 3/8" (Use as required)
204	30200		Screw, 10-24 9/16" (Use as required)
205	30322		Nut & Lockwasher (Use as required)
213	650815		Washer, Belleville
214	650816		Nut, Flywheel
	33668		Screen, Starter
218	34694		Cup, Starter
	34080		Spacer, Flywheel key
	650872		Stud, Solid State Assy.
	34346		Decal. Instruction
	631021		Inlet Needle, Seat & Clip Assy.
244	632198		Carburetor (Incl. 87) (Refer to Division 5, Section A, page 176 for breakdown)
245	611030		Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
246	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
249	33683B		* Gasket Set (Incl. items marked *)

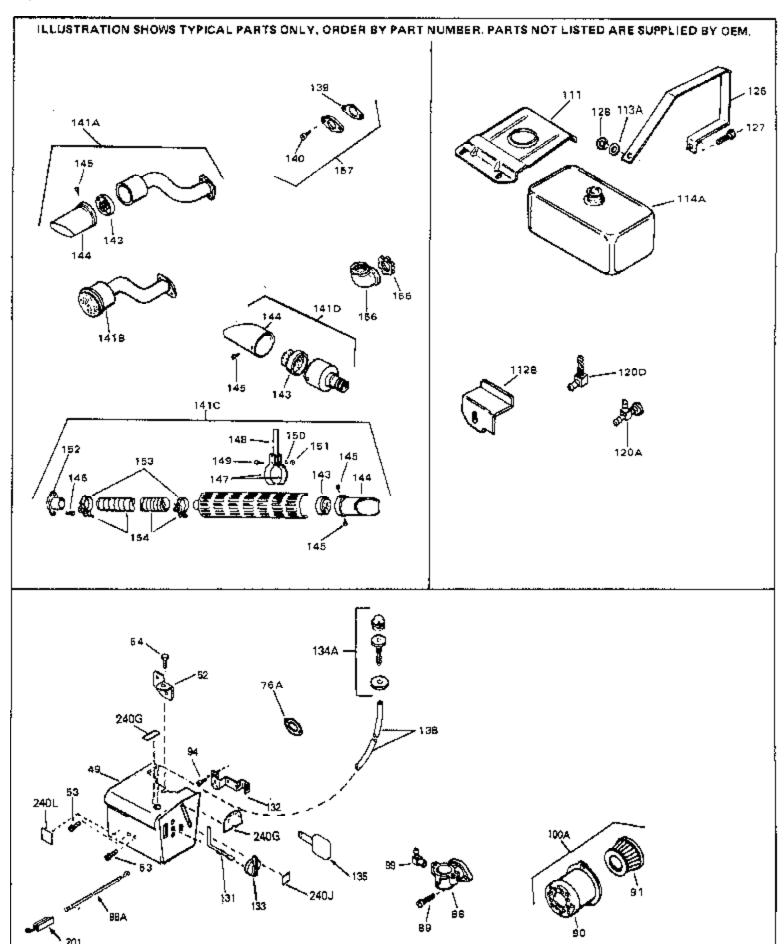

Ref #	Part Number	Qty	Description
	33876 730164	•	Gasket, Stator Air Cleaner Ass'y. (Incl. 76, 90, 91, 92, 93, 94, & 221B) (Use as required)
138 139 140 140	650675 32180C 33670A 650327 30063 391026		Washer, Flat Line, Primer  * Gasket, Muffler Screw, 1/4-20 x 2-1/2" Screw, 1/4-20 x 1/2" (Use as required ) Muffler (Incl. 143, 144 & 145) (This spark arrester mufflercan be used on any model.)
201	730165 610973 611030		Muff.Adapter Kit (Incl.139,140)(As re quired) Terminal Assy. (Use as required) Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)

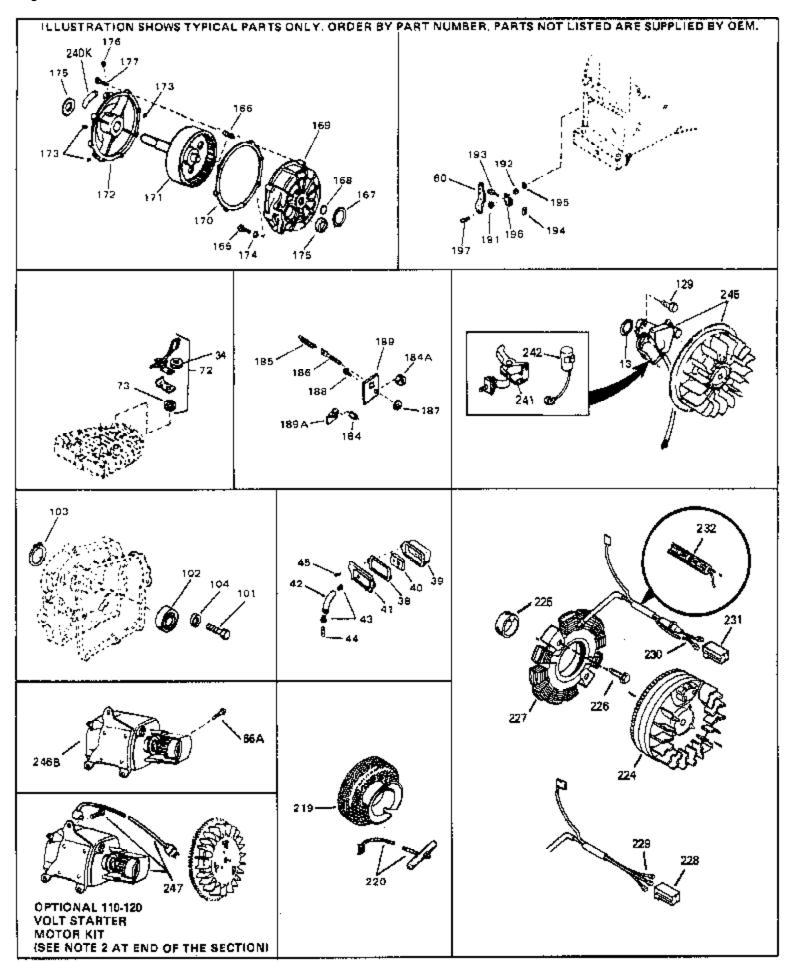

Ref #	Part Number	Qty	Description
13	33876		Gasket, Stator
34	26073		Washer (Not used on late production)
34	650691		Washer (Use as required)
	31619A		* Gasket, Breather
40	31410		Element, Breather
	650128		Screw, 10-24 x 1/2"
	33450		Nut, Hex
	30342		Spring Extension
	30845A		Bolt, Governor spring adj.
	650518		Washer, Lock
	30200		Screw, 10-24 x 9/16"
	30846		Bracket, Governor adj. bolt
	650548		Screw, 8-32 x 5/16"
	34788		Pulley, Starter rope
	35189		Spacer, Coil Assy.
	30547A		Contact Assy., Breaker
	30548B		Condenser
245	611030		Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component partsindividually, as shown in partslist. (Refer to Division 5, Section B, page 39 for breakdown)
247	33290D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel. Refer to service number stamped on end cap of motor, or on decal, for identification. Ref