
LAV40-50200E Engine Parts List #1

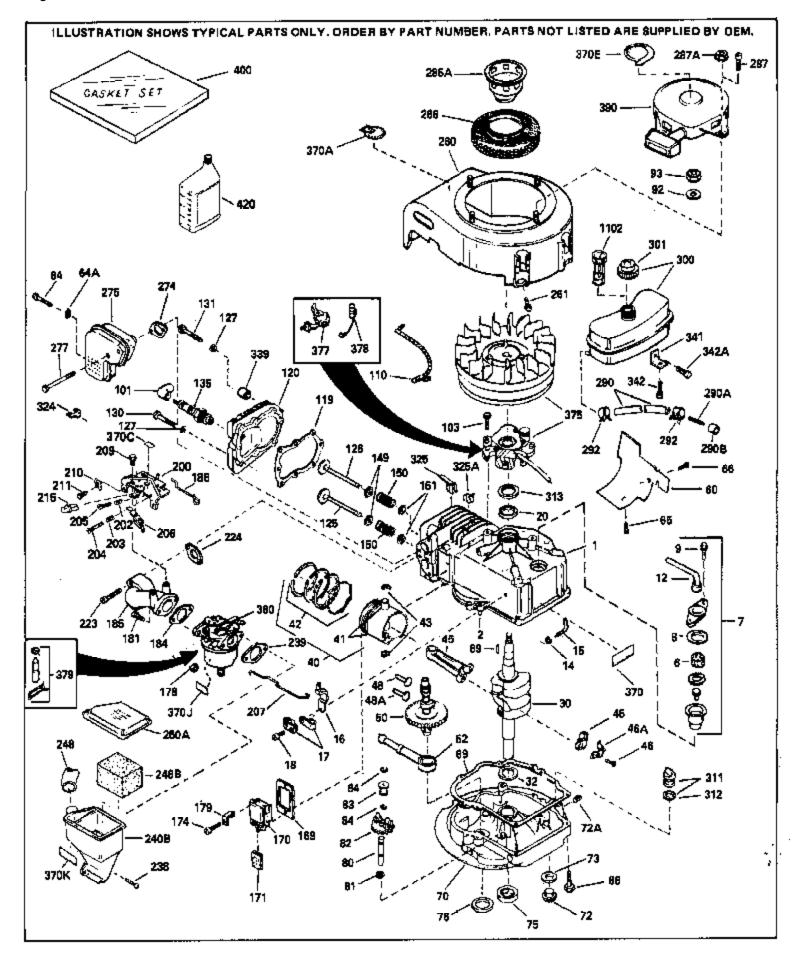




Ref #	Part Number Qty	Description
	33027B	Cylinder (Incl. 2, 8, 9 & 20) (2-5/8" Bore)
	26727	Pin, Dowel
	28277	
		Washer, Flat
	30589	Rod, Governor (Incl. 14)
	32651	Lever, Governor
17	31335	Clamp, Governor lever (Clamp is positioned towardsspark
		plug end on 1977-78 and latermodels. It is positioned
		opposite spark plugend on earlier models.)
		··· · · · · · · ·
18	650548	Screw, 8-32 x 5/16"
19	31386	Spring, Governor
20	32600	Seal, Oil
	32881B	Crankshaft
	32323	Washer, Thrust
	34851	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34852	Piston, Pin & Ring Set (.010" OS)
	34853	Piston, Pin & Ring Set (.020" OS)
	32603B	Piston & Pin Ass'y.(Std.)(Incl. 43)(2 -5/8")
41	32604B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	32605B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	20381	Ring, Piston pin retaining
	32875	Rod Assy., Connecting (Incl. 18)
	32610	Connecting Rod Bolt (Early Production)
	32610A	Bolt, Connecting rod
46A	32609	Plate, Lock (Do not use with 32610A locking type screw)
48	27241	Lifter, Exhaust valve
48A	27241	Lifter, Intake valve
	33154	Camshaft
	29914	Pump Assy., Oil
	29745	Extension, Blower housing
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	35261	* Gasket, Mounting flange
	32612A	Flange Ass'y. (Incl. 72, 75 & 80)
	30572	Plug, Oil drain (Incl. 73)
72A	9556	Oil Drain Plug (Use as required)
73	28833	* Drain Plug Gasket (Do not use w/plast ic plug)
75	27897	Seal, Oil
	30574	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	
		Spool, Governor
	29193	Ring, Retaining
	650488	Screw, 1/4-20 x 1-1/4"
	610951	Key, Flywheel
	650815	Washer, Belleville
93	650607	Nut, Flywheel
103	650489	Screw, 1/4-20 x 5/8"
	35349	Ground Wire
	33015A	* Gasket, Cylinder head
	33016A	
		Head, Cylinder (Incl. 131)
	32644A	Intake Valve (STD)(Incl.151) (Inverte d Ports)
	32645A	Intake Valve (1/32" OS)(Incl.151) (Inverted Ports)
	29313C	Exhaust Valve (STD)(Incl. 151) (Inverted Ports)
	29315C	Exhaust Valve (1/32" OS)(Incl. 151) (Inverted Ports)
127	26073	Washer (Not used in late production)
		· · · ·


	Part Number Qt	
127	650691	Washer (Used on late production)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
130	650818	Screw, 5/16-18 x 1-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	33636	
		Spark Plug (J-8C)
	31671	Valve Spring Cap) (Used in early prod uction)
	31672	Spring, Valve
	31673	Cap, Lower valve spring
169	31619A	* Gasket, Valve spring cover
170	31337A	Body Assy., Breather (Incl. 169 & 171)
171	31410	Element, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
	6201	Screw, 1/4-28 x 7/8"
	6201	Screw, 1/4-28 x 7/8"
	26756	* Gasket, Carburetor
	32650	Pipe, Intake
	32653	Link, Governor spring
	32181A	Control Bracket (Incl. 203, 204 & 206)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
206	610973	Terminal Assy.
207	33133	Link, Governor-to-throttle
	30200	Screw, 10-24 x 9/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	650664	Screw, 1/4-20 x 1-19/32"
	32649A	* Gasket, Intake
	650707	Screw, 10-32 x 5/8"
	33051	* Gasket, Air cleaner
240B	33005	Body, Air cleaner
246B	33006	Element, Air cleaner
248	33008	Tube, Air cleaner
	33007	Cover, Air cleaner
	33738D	Blower Housing NOTE: Replacement hardware may differ
200	001002	when servicing starter assy. or blower housing. Refer to
		Service Bulletin 508.
		Service Duileun 506.
261	650561	Screw, 1/4 20 x 5/8"
	26754A	* Gasket, Exhaust
	35771	Muffler (Incl. 274)
	30063	
		Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
	33667	Cup, Starter
	33668	Screen, Starter cup
	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
287A	29752	Nut & Lockwasher, 1/4-28 (Use as required)
	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
	30705	Fuel Line (Braided 16")(40 cm)(Use as req.)
	26460	Fuel Line Clamp (Use as required)
	32671	Fuel Tank (Incl. 292 & 301)
	410144B	Fuel Cap (Std.) (Use as required)
301	33032	Fuel Cap (Use as required)
301	34210 27625	Fuel Cap (use as required)

Ref #	Part Number Qt	y Description
312	29673	* Gasket, Oil filler
313	33876	Gasket, Stator
325A	27275	Clip, Hi-tension wire (Use as require d)
370A	550223	Name & Instruction Decal
370	34346	Decal, Instruction
375	610942A	Magneto NOTE: This magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts breakdown. Refer to Division 5, Section B, page35 or Fiche 6, Grid F-13 for breakdown)
378 379	30547A 30548B 631021 631597	Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184) Refer to Division 5, SectionA, page 104 or Fiche 6, Grid E-1 for breakdown)
390	590420A	Rewind Starter NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
400 420	33238D 730225	* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart)

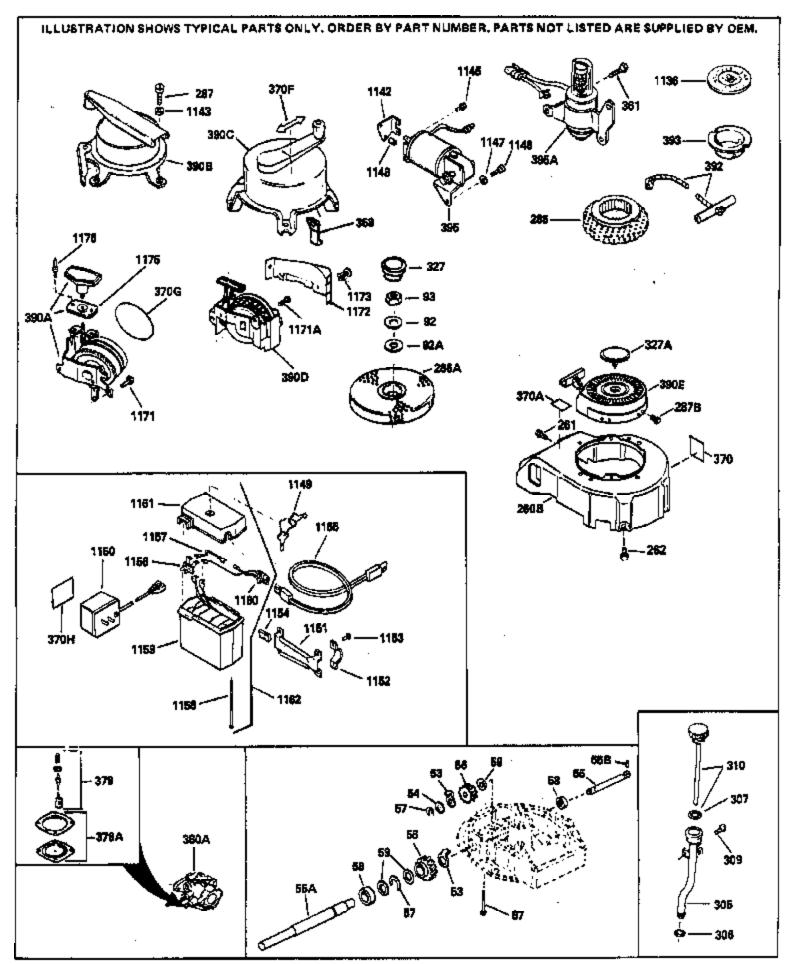

LAV40-50200E Engine Parts List #2

Ref #	Part Number Q	ty Description
19	31386	Spring, Governor
32	32323	Washer, Thrust
92	650815	Washer, Belleville
93	650607	Nut, Flywheel
182	6201	Screw, 1/4-28 x 7/8"
261	650561	Screw, 1/4 20 x 5/8"
262	650561	Screw, 1/4-20 x 5/8"
287	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
306	34282	"O" Ring (This "O" ring is required with metal fill tube only
		when replacement mounting flange with .777 dia. oil fill hole
		has been used.)
370A	550223	Name & Instruction Decal
370	34346	Decal, Instruction
379	631021	Inlet Needle, Seat & Clip Assy.
	590441	Bracket Ass'y. (Use as required)
1176	650639	Open End Rivet (Use as required)
1110		

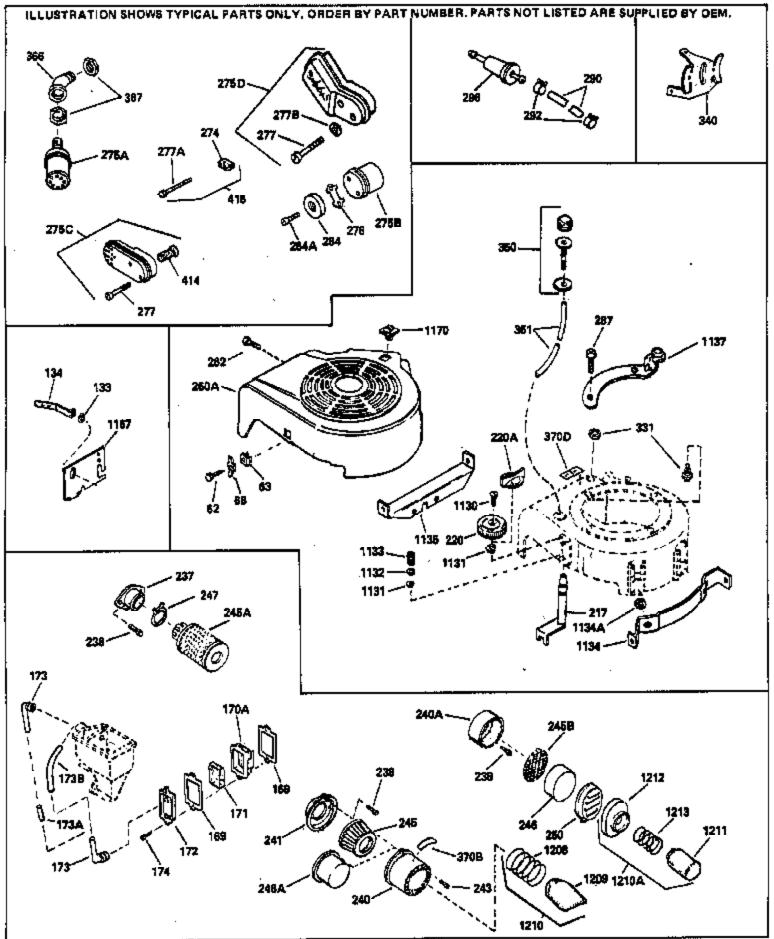

Ref #	Part Number Qty	Description
19	31386	Spring, Governor
32	32323	Washer, Thrust
169	31619A	* Gasket, Valve spring cover
171	31410	Element, Breather
174	650128	Screw, 10-24 x 1/2"
182	6201	Screw, 1/4-28 x 7/8"
238	650707	Screw, 10-32 x 5/8"
262	650561	Screw, 1/4-20 x 5/8"
274	26754A	* Gasket, Exhaust
277A	650774	Screw, 1/4-20 x 2-3/8"
277	30063	Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
287	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
290	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
290	30705	Fuel Line (Braided 16")(40 cm)(Use as req.)
292	26460	Fuel Line Clamp (Use as required)
415	730162	Muffler Adapter Kit (Incl. 274 & 277A) (Inverted Ports)