



1 2 14 15 16	Part Number 33027B 26727 28277 30589 32651 31335	Qty	Description Cylinder (Incl. 2, 8, 9 & 20) (2-5/8" Bore) Pin, Dowel Washer, Flat Rod, Governor (Incl. 14) Lever, Governor Clamp, Governor lever (Clamp is positioned towardsspark plug end on 1977-78 and latermodels. It is positioned opposite spark plugend on earlier models.)
18 19 20 30 32 40 40 41 41 41 41 42 42 42 42 43 45 46 46A 48A 50 52 60 66 69 70 72A 72 73 75 80 81 82 83 84 86 89 92 93	650548 31386 32600 32882A 32323 34851 34852 34853 32603B 32604B 32605B 34854 34856 20381 32875 32610 32610A 32609 27241 32646 32647 29914 29745 30063 35261 32612A 9556 30572 28833 27897 30574 30590A 30591 30588A 29193 650488 610951 650815 650607		plug end on 1977-78 and latermodels. It is positioned opposite spark plugend on earlier models.) Screw, 8-32 x 5/16" Spring, Governor Seal, Oil Crankshaft Washer, Thrust Piston, Pin & Ring Set (Std.) (2-5/8" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.) (Incl. 43) (2 -5/8") Piston & Pin Ass'y. (.010" OS) (Incl. 43) Piston & Pin Ass'y. (.020" OS) (Incl. 43) Ring Set (Std.) (2-5/8" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 18) Connecting Rod Bolt (Early Production) Bolt, Connecting rod Plate, Lock (Do not use with 32610A locking type screw) Lifter, Exhaust valve Lifter, Intake valve Camshaft (MCR) Pump Assy., Oil Extension, Blower housing Screw, Torx T-30, 1/4-20 x 1/2" * Gasket, Mounting flange Flange Ass'y. (Incl. 72, 75 & 80) Oil Drain Plug (Use as required) Plug, Oil drain (Incl. 73) * Drain Plug Gasket (Do not use w/plast ic plug) Seal, Oil Shaft, Mechanical governor Washer, Flat Gear Assy., Governor (Incl. 81) Spool, Governor Ring, Retaining Screw, 1/4-20 x 1-1/4" Key, Flywheel Washer, Belleville Nut, Flywheel
103 110	610118 650489 34231 33015A		Cover, Spark plug Screw, 1/4-20 x 5/8" Ground Wire * Gasket, Cylinder head
120 125 125 126	33016A 32644A 32645A 29313C 29315C		Head, Cylinder (Incl. 131) Intake Valve (STD)(Incl.151) (Inverte d Ports) Intake Valve (1/32" OS)(Incl.151) (Inverted Ports) Exhaust Valve (STD)(Incl. 151) (Inverted Ports) Exhaust Valve (1/32" OS)(Incl. 151) (Inverted Ports)

Ref # Part Number Qty Description 127 26073 Washer (Not used in late production) 127 650691 Washer (Used on late production) 130 6021A Screw, 5/16-18 x 1-1/2" (Use as requi red) 130 650818 Screw, 5/16-18 x 1-1/2" (Use as requi red) 131 650694A Screw, 5/16-18 x 2" (Use as required) 131 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red) 135 33636 Spark Plug (J-8C) 149 31671 Valve Spring Cap) (Used in early prod uction)	
127 650691 Washer (Used on late production) 130 6021A Screw, 5/16-18 x 1-1/2" (Use as requi red) 130 650818 Screw, 5/16-18 x 1-1/2" (Use as requi red) 131 650694A Screw, 5/16-18 x 2" (Use as required) 131 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red) 135 33636 Spark Plug (J-8C)	
130 6021A Screw, 5/16-18 x 1-1/2" (Use as requi red) 130 650818 Screw, 5/16-18 x 1-1/2" (Use as requi red) 131 650694A Screw, 5/16-18 x 2" (Use as required) 131 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 135 33636 Spark Plug (J-8C)	
130 650818 Screw, 5/16-18 x 1-1/2" (Use as requi red) 131 650694A Screw, 5/16-18 x 2" (Use as required) 131 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 135 33636 Spark Plug (J-8C)	
131 650694A Screw, 5/16-18 x 2" (Use as required) 131 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 135 33636 Spark Plug (J-8C)	
131 650697A Screw, 5/16-18 x 2-1/2" (Use as required) 135 33636 Spark Plug (J-8C)	
135 33636 Spark Plug (J-8C)	
1/0 316/1 \/ohi/o Shring Can) / lead in early bred viction)	
150 31672 Spring, Valve	
151 31673 Cap, Lower valve spring	
169 31619A * Gasket, Valve spring cover	
170 31337A Body Assy., Breather (Incl. 169 & 171)	
171 31410 Element, Breather	
174 650128 Screw, 10-24 x 1/2"	
178 29752 Nut & Lockwasher, 1/4-28	
179 30593 Clip, Magneto wire	
181 6201 Screw, 1/4-28 x 7/8"	
182 6201 Screw, 1/4-28 x 7/8"	
184 26756 * Gasket, Carburetor	
185 32650 Pipe, Intake	
186 34337 Link, Governor spring	
200 32264A Control Bracket (Incl. 203, 204 & 206)	
201 33150 Bracket, Control	
203 31342 Spring, Compression	
204 650549 Screw, 5-40 x 7/16"	
206 610973 Terminal Assy.	
207 34336 Link, Governor-to-throttle	
209 30200 Screw, 10-24 x 9/16"	
215 32410 Knob, Speed control	
223 650664 Screw, 1/4-20 x 1-19/32"	
224 32649A * Gasket, Intake	
238 650707 Screw, 10-32 x 5/8"	
239 33051 * Gasket, Air cleaner	
240B 33005 Body, Air cleaner	
246B 33006 Element, Air cleaner	
248 33008 Tube, Air cleaner	
250A 33007 Cover, Air cleaner	
260 33738D Blower Housing NOTE: Replacement hardware ma	av differ
when servicing starter assy. or blower housing. Re	
Service Bulletin 508.	
261 650561 Screw, 1/4 20 x 5/8"	
277 30063 Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)	
285A 33667 Cup, Starter	
286 33668 Screen, Starter cup	
287 29716 Screw, 1/4-28 x 7/16" (Use as require d)	
287 30513 Screw & Lockwasher, 1/4-28 x 1/2"	
287 Pop Rivet (Purchase locally) (3/16" d ia.)	
287A 29752 Nut & Lockwasher, 1/4-28 (Use as requ ired)	
290 29774 Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)	
290 34357 Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)	
290 30705 Fuel Line (Braided 16")(40 cm)(Use as req.)	
292 26460 Fuel Line Clamp (Use as required)	
300 32671 Fuel Tank (Incl. 292 & 301)	
301 410144B Fuel Cap (Std.) (Use as required)	
301 33032 Fuel Cap (Use as required)	
301 34210 Fuel Cap (use as required)	
311 27625 Plug, Oil filler (Incl. 312)	

Ref #	Part Number	Qty	Description
312	29673		* Gasket, Oil filler
313	33876		Gasket, Stator
	27275		Clip, Hi-tension wire (Use as require d)
	550223		Name & Instruction Decal
	35344		Decal, Speed control
370	34346		Decal, Instruction
375	610942A		Magneto NOTE: This magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts breakdown. Refer to Division 5, Section B, page35 or Fiche 6, Grid F-13 for breakdown)
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
360	631597		Carburetor (Incl. 184) Refer to Division 5, SectionA, page 104 or Fiche 6, Grid E-1 for breakdown)
390	590420A		Rewind Starter NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
	33238D 730225		* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart)

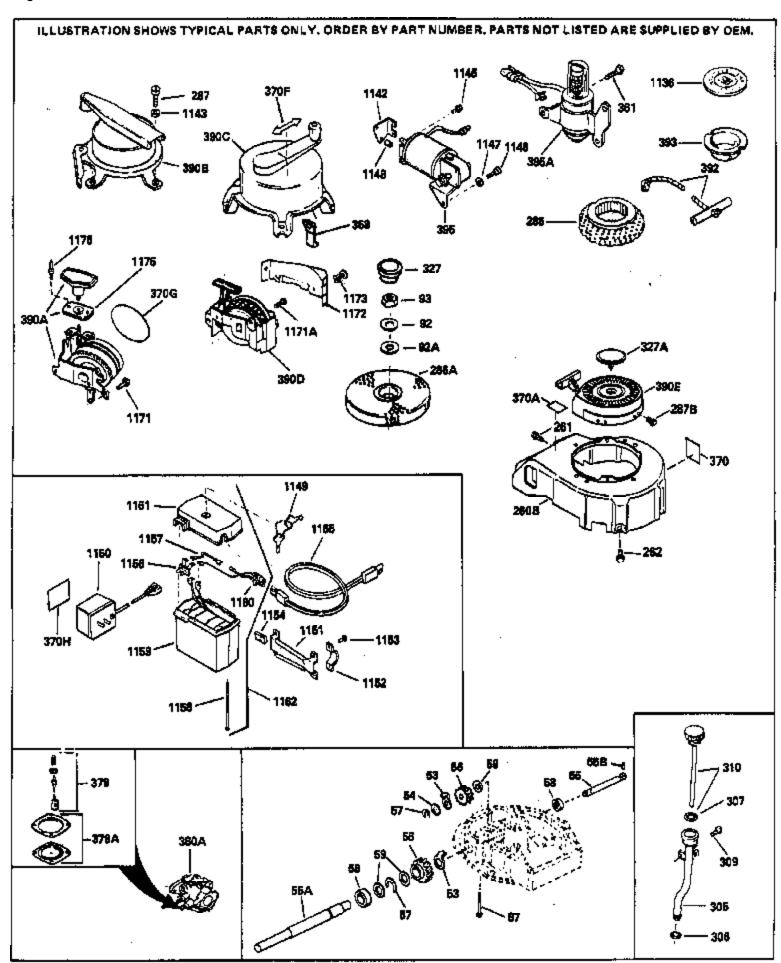

Ref #	Part Number	Qty	Description
19	31386		Spring, Governor
32	32323		Washer, Thrust
92	650815		Washer, Belleville
93	650607		Nut, Flywheel
182	6201		Screw, 1/4-28 x 7/8"
201	33150		Bracket, Control
261	650561		Screw, 1/4 20 x 5/8"
287	29716		Screw, 1/4-28 x 7/16" (Use as require d)
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" d ia.)
306	34282		"O" Ring (This "O" ring is required with metal fill tube only
			when replacement mounting flange with .777 dia. oil fill hole
			has been used.)
370A	550223		Name & Instruction Decal
	34346		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	590441		Bracket Ass'y. (Use as required)
	650639		Open End Rivet (Use as required)
			1 1 -7

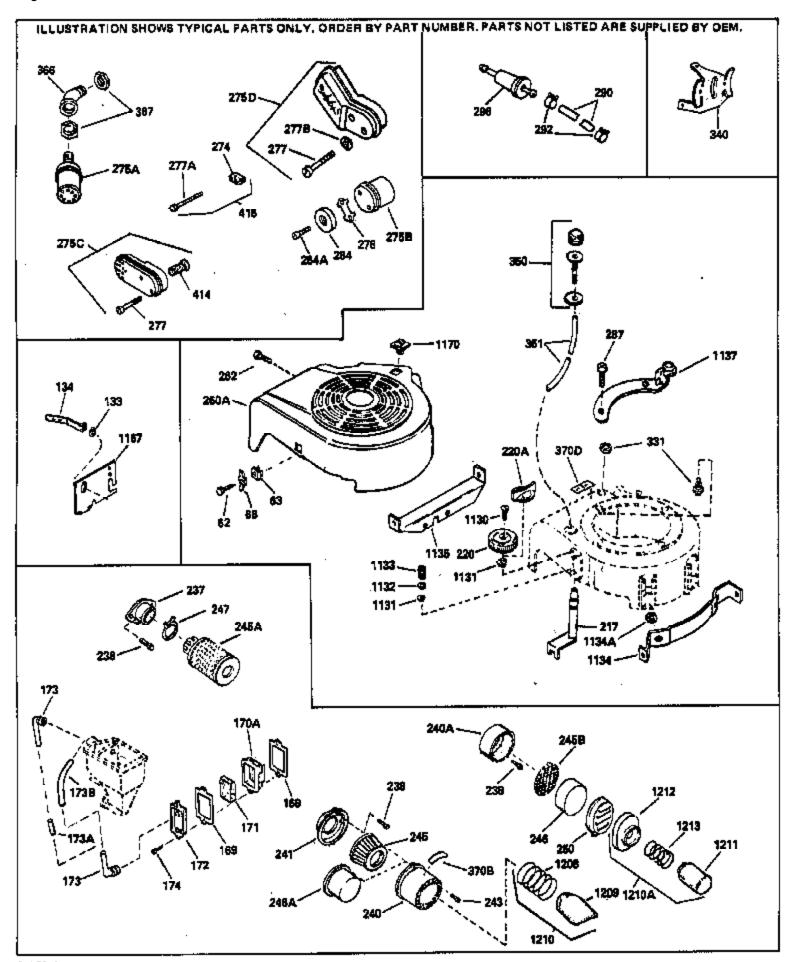

Ref #	Part Number C	ty Description
19	31386	Spring, Governor
32	32323	Washer, Thrust
169	31619A	* Gasket, Valve spring cover
171	31410	Element, Breather
174	650128	Screw, 10-24 x 1/2"
182	6201	Screw, 1/4-28 x 7/8"
201	33150	Bracket, Control
238	650707	Screw, 10-32 x 5/8"
277	30063	Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
287	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
290	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
290	30705	Fuel Line (Braided 16")(40 cm)(Use as req.)
292	26460	Fuel Line Clamp (Use as required)
415	730162	Muffler Adapter Kit (Incl. 274 & 277A) (Inverted Ports)