



Ref #	Part Number (Otv	Description
	33027B	-1-,	Cylinder (Incl. 2, 8, 9 & 20) (2-5/8" Bore)
	26727		Pin, Dowel
	28277		Washer, Flat
	30589		
			Rod, Governor (Incl. 14)
	32651		Lever, Governor
17	31335		Clamp, Governor lever (Clamp is positioned towardsspark
			plug end on 1977-78 and latermodels. It is positioned
			opposite spark plugend on earlier models.)
40	CEOE 10		Coroni 0 20 v E/46!!
	650548		Screw, 8-32 x 5/16"
	31386		Spring, Governor
	32600		Seal, Oil
	32882A		Crankshaft
32	32323		Washer, Thrust
40	34851		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
40	34852		Piston, Pin & Ring Set (.010" OS)
40	34853		Piston, Pin & Ring Set (.020" OS)
	32603B		Piston & Pin Ass'y.(Std.)(Incl. 43)(2 -5/8")
	32604B		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	32605B		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	20381		Ring, Piston pin retaining
	32875		Rod Assy., Connecting (Incl. 18)
	32609		Plate, Lock (Do not use with 32610A locking type screw)
46	32610		Connecting Rod Bolt (Early Production)
46	32610A		Bolt, Connecting rod
48A	27241		Lifter, Intake valve
48	27241		Lifter, Exhaust valve
	33154		Camshaft
	29914		Pump Assy., Oil
	29745		Extension, Blower housing
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	35261		* Gasket, Mounting flange
	32612A		
			Flange Ass'y. (Incl. 72, 75 & 80)
	9556		Oil Drain Plug (Use as required)
	30572		Plug, Oil drain (Incl. 73)
	28833		* Drain Plug Gasket (Do not use w/plast ic plug)
	27897		Seal, Oil
	30574		Shaft, Mechanical governor
81	30590A		Washer, Flat
82	30591		Gear Assy., Governor (Incl. 81)
83	30588A		Spool, Governor
84	29193		Ring, Retaining
	650488		Screw, 1/4-20 x 1-1/4"
	610951		Key, Flywheel
	650815		Washer, Belleville
	650607		Nut, Flywheel
	650489		Screw, 1/4-20 x 5/8"
			Ground Wire
	35349 33045 A		
	33015A		* Gasket, Cylinder head
	33016A		Head, Cylinder (Incl. 131)
	32644A		Intake Valve (STD)(Ind.151) (Inverte d Ports)
	32645A		Intake Valve (1/32" OS)(Incl.151) (Inverted Ports)
126	29313C		Exhaust Valve (STD)(Incl. 151) (Inverted Ports)
126	29315C		Exhaust Valve (1/32" OS)(Incl. 151) (Inverted Ports)
127	26073		Washer (Not used in late production)
			•

Ref #	Part Number Qty	Description
	650691	Washer (Used on late production)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650818	Screw, 5/16-18 x 1-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	33636	Spark Plug (J-8C)
149	31671	Valve Spring Cap) (Used in early prod uction)
150	31672	Spring, Valve
151	31673	Cap, Lower valve spring
	31619A	* Gasket, Valve spring cover
	31337A	Body Assy., Breather (Incl. 169 & 171)
	31410	Element, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	6201	Screw, 1/4-28 x 7/8"
	6201	Screw, 1/4-28 x 7/8"
	26756	* Gasket, Carburetor
185	32650	Pipe, Intake
186	32653	Link, Governor spring
200	32264A	Control Bracket (Incl. 203, 204 & 206)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33133	Link, Governor-to-throttle
	30200	
		Screw, 10-24 x 9/16"
	32410	Knob, Speed control
	650664	Screw, 1/4-20 x 1-19/32"
	32649A	* Gasket, Intake
	650707	Screw, 10-32 x 5/8"
239	33051	* Gasket, Air cleaner
240B	33005	Body, Air cleaner
246B	33006	Element, Air cleaner
	33008	Tube, Air cleaner
	33007	Cover, Air cleaner
	32455B	Housing, Blower NOTE: Replacement hardware may differ
200	02 1005	when servicing starter assy. or blower housing. Refer to
		Service Bulletin 508.
		Service Dulletin 506.
261	650561	Screw, 1/4 20 x 5/8"
	26754A	* Gasket, Exhaust
	35771	Muffler (Incl. 274)
	30063	Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
	590416	Cup, Starter
	590417	• •
		Screen, Starter cup
	29752	Nut & Lockwasher, 1/4-28 (Use as required)
	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
	29716	Screw, 1/4-28 x 7/16" (Use as require d)
290	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
	30705	Fuel Line (Braided 16")(40 cm)(Úse as req.)
	26460	Fuel Line Clamp (Use as required)
	32671	Fuel Tank (Incl. 292 & 301)
	410144B	Fuel Cap (Std.) (Use as required)
	33032	Fuel Cap (Use as required)
	34210	Fuel Cap (use as required)
	27625	Plug, Oil filler (Incl. 312)
312	29673	* Gasket, Oil filler

Ref #	Part Number	Qty	Description
325A	27275		Clip, Hi-tension wire (Use as require d)
370C	35344		Decal, Speed control
370	34346		Decal, Instruction
375	610755		Magneto (W/Ring Gear) NOTE: This magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts breakdown. Refer to Division 5, Section B, page24 or Fiche 6, Grid F-11 for breakdown)
378	30547A 30548B 631021		Contact Assy., Breaker Condenser
	631597		Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184) Refer to Division 5, SectionA, page 104 or Fiche 6, Grid E-1 for breakdown)
390	590420A		Rewind Starter NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
	33238D 730225		* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart)

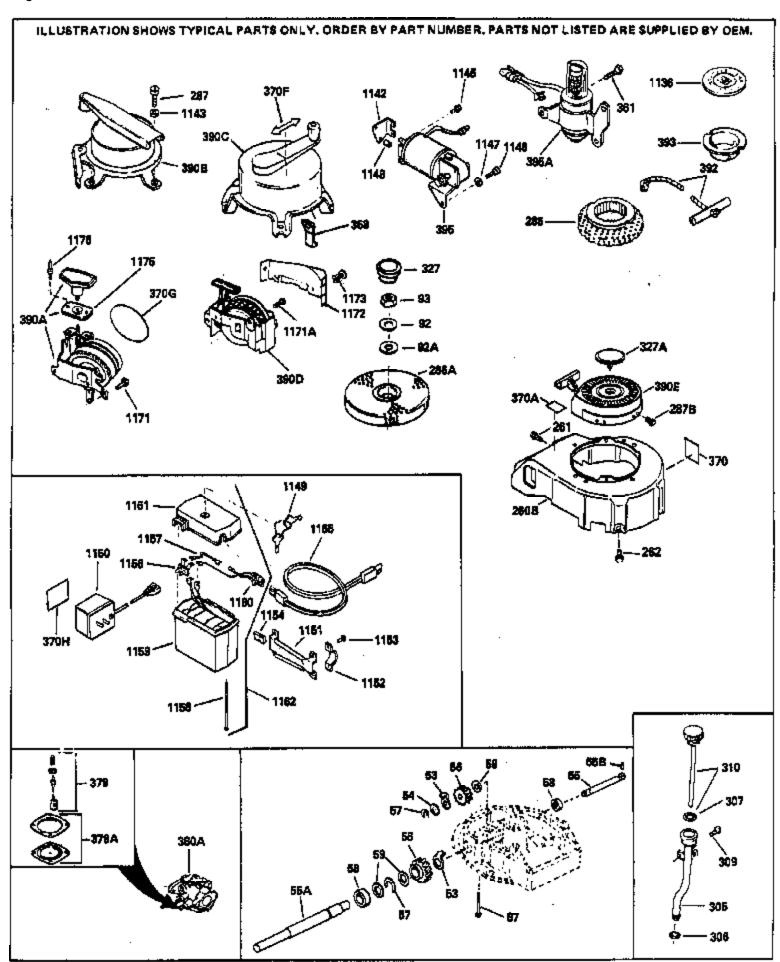

Ref #	Part Number	Qty	Description
19	31386		Spring, Governor
32	32323		Washer, Thrust
92	650815		Washer, Belleville
93	650607		Nut, Flywheel
182	6201		Screw, 1/4-28 x 7/8"
261	650561		Screw, 1/4 20 x 5/8"
262	650561		Screw, 1/4-20 x 5/8"
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" d ia.)
287	29716		Screw, 1/4-28 x 7/16" (Use as require d)
306	34282		"O" Ring (This "O" ring is required with metal fill tube only
			when replacement mounting flange with .777 dia. oil fill hole
			has been used.)
370	34346		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	590441		Bracket Ass'y. (Use as required)
	650639		Open End Rivet (Use as required)
			1 -7

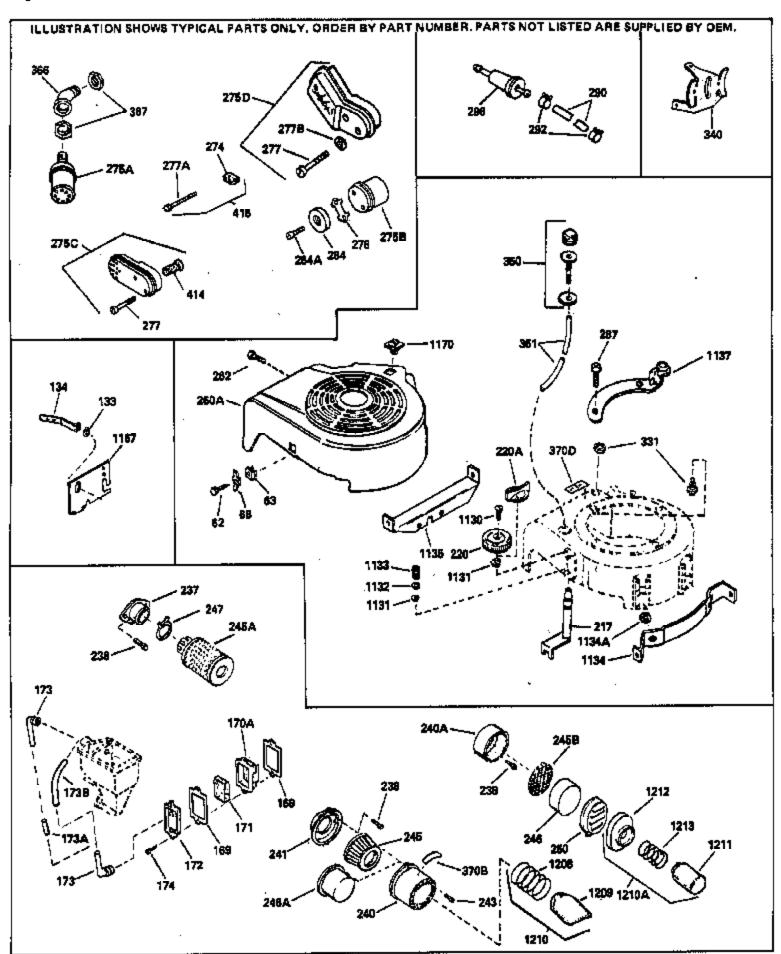

Ref #	Part Number Qt	y Description
19	31386	Spring, Governor
32	32323	Washer, Thrust
169	31619A	* Gasket, Valve spring cover
171	31410	Element, Breather
174	650128	Screw, 10-24 x 1/2"
182	6201	Screw, 1/4-28 x 7/8"
238	650707	Screw, 10-32 x 5/8"
243	650152	Screw, 8-32 x 3/8"
262	650561	Screw, 1/4-20 x 5/8"
274	26754A	* Gasket, Exhaust
277A	650774	Screw, 1/4-20 x 2-3/8"
277	30063	Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
287	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
290	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
290	30705	Fuel Line (Braided 16")(40 cm)(Use as req.)
292	26460	Fuel Line Clamp (Use as required)
415	730162	Muffler Adapter Kit (Incl. 274 & 277A) (Inverted Ports)