



1 2 14 15 16	Part Number 33027B 26727 28277 30589 32651 31335	Qty	Description Cylinder (Incl. 2, 8, 9 & 20) (2-5/8" Bore) Pin, Dowel Washer, Flat Rod, Governor (Incl. 14) Lever, Governor Clamp, Governor lever (Clamp is positioned towardsspark plug end on 1977-78 and latermodels. It is positioned opposite spark plugend on earlier models.)
19 20 30 32 40 40 41 41 41 42 42 42 43 45 46A 46 48 48A 50 52 60 66 69 70 72 72A 73 75 80 81 82	650548 31386 32600 32882A 32323 34851 34852 34853 32603B 32604B 32605B 34854 34855 34856 20381 32875 32609 32610 32610A 27241 27241 33154 29914 29745 30063 35261 32612A 30572 9556 28833 27897 30574 30590A 30591		opposite spark plugend on earlier models.) Screw, 8-32 x 5/16" Spring, Governor Seal, Oil Crankshaft Washer, Thrust Piston, Pin & Ring Set (Std.) (2-5/8" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.) (Incl. 43) (2 -5/8") Piston & Pin Ass'y. (.010" OS) (Incl. 43) Piston & Pin Ass'y. (.020" OS) (Incl. 43) Ring Set (Std.) (2-5/8" Bore) Ring Set (.010" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 18) Plate, Lock (Do not use with 32610A locking type screw) Connecting Rod Bolt (Early Production) Bolt, Connecting rod Lifter, Exhaust valve Lifter, Intake valve Camshaft Pump Assy., Oil Extension, Blower housing Screw, Torx T-30, 1/4-20 x 1/2" * Gasket, Mounting flange Flange Ass'y. (Incl. 72, 75 & 80) Plug, Oil drain (Incl. 73) Oil Drain Plug (Use as required) * Drain Plug Gasket (Do not use w/plast ic plug) Seal, Oil Shaft, Mechanical governor Washer, Flat Gear Assy., Governor (Incl. 81)
83 84 86 89 92 93 101 103 110 119 120 125 125	30591 30588A 29193 650488 610951 650815 650607 27276 650489 35349 33015A 33016A 32644A 32645A 29313C		Spool, Governor (Incl. 81) Spool, Governor Ring, Retaining Screw, 1/4-20 x 1-1/4" Key, Flywheel Washer, Belleville Nut, Flywheel Cover, Spark plug Screw, 1/4-20 x 5/8" Ground Wire * Gasket, Cylinder head Head, Cylinder (Incl. 131) Intake Valve (STD)(Incl.151) (Inverted Ports) Intake Valve (STD)(Incl. 151) (Inverted Ports) Exhaust Valve (1/32" OS)(Incl. 151) (Inverted Ports) Exhaust Valve (1/32" OS)(Incl. 151) (Inverted Ports)

Ref #	Part Number (Oty Description
	26073	Washer (Not used in late production)
	650691	Washer (Used on late production)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650818	Screw, 5/16-18 x 1-1/2" (Use as required)
	650694A	• • •
		Screw, 5/16-18 x 2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	33636	Spark Plug (J-8C)
	31671	Valve Spring Cap) (Used in early prod uction)
	31672	Spring, Valve
151	31673	Cap, Lower valve spring
169	31619A	* Gasket, Valve spring cover
170	31337A	Body Assy., Breather (Incl. 169 & 171)
171	31410	Element, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
181	6201	Screw, 1/4-28 x 7/8"
	6201	Screw, 1/4-28 x 7/8"
	26756	* Gasket, Carburetor
	32650	Pipe, Intake
	32653	Link, Governor spring
	32181A	Control Bracket (Incl. 203, 204 & 206)
	31342	· · · · · · · · · · · · · · · · · · ·
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33133	Link, Governor-to-throttle
	30200	Screw, 10-24 x 9/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	650664	Screw, 1/4-20 x 1-19/32"
	32649A	* Gasket, Intake
238	650707	Screw, 10-32 x 5/8"
239	33051	* Gasket, Air cleaner
240B	33005	Body, Air cleaner
246B	33006	Element, Air cleaner
248	33008	Tube, Air cleaner
250A	33007	Cover, Air cleaner
260	33738D	Blower Housing NOTE: Replacement hardware may differ
		when servicing starter assy. or blower housing. Refer to
		Service Bulletin 508.
004	CEOECA	
	650561	Screw, 1/4 20 x 5/8"
	26754A	* Gasket, Exhaust
	35771	Muffler (Incl. 274)
	30063	Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
	33667	Cup, Starter
	33668	Screen, Starter cup
	29752	Nut & Lockwasher, 1/4-28 (Use as required)
287	29716	Screw, 1/4-28 x 7/16" (Use as require d)
287	30513	Screw & Lockwasher, 1/4-28 x 1/2"
287		Pop Rivet (Purchase locally) (3/16" d ia.)
	29774	Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
	34357	Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
	30705	Fuel Line (Braided 16")(40 cm)(Use as req.)
	26460	Fuel Line Clamp (Use as required)
	32671	Fuel Tank (Incl. 292 & 301)
	410144B	Fuel Cap (Std.) (Use as required)
	33032	Fuel Cap (Std.) (Ose as required) Fuel Cap (Use as required)
		• • • •
301	34210	Fuel Cap (use as required)

Ref #	Part Number (Qty Description
311	27625	Plug, Oil filler (Incl. 312)
312	29673	* Gasket, Oil filler
313	33876	Gasket, Stator
325A	27275	Clip, Hi-tension wire (Use as require d)
	34346	Decal, Instruction
370C	35344	Decal, Speed control
375	610942A	Magneto NOTE: This magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts breakdown. Refer to Division 5, Section B, page35 or Fiche 6, Grid F-13 for breakdown)
378 379	30547A 30548B 631021 631597	Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184) Refer to Division 5, SectionA, page 104
		or Fiche 6, Grid E-1 for breakdown)
390	590420A	Rewind Starter NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
	33238D 730225	* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart)

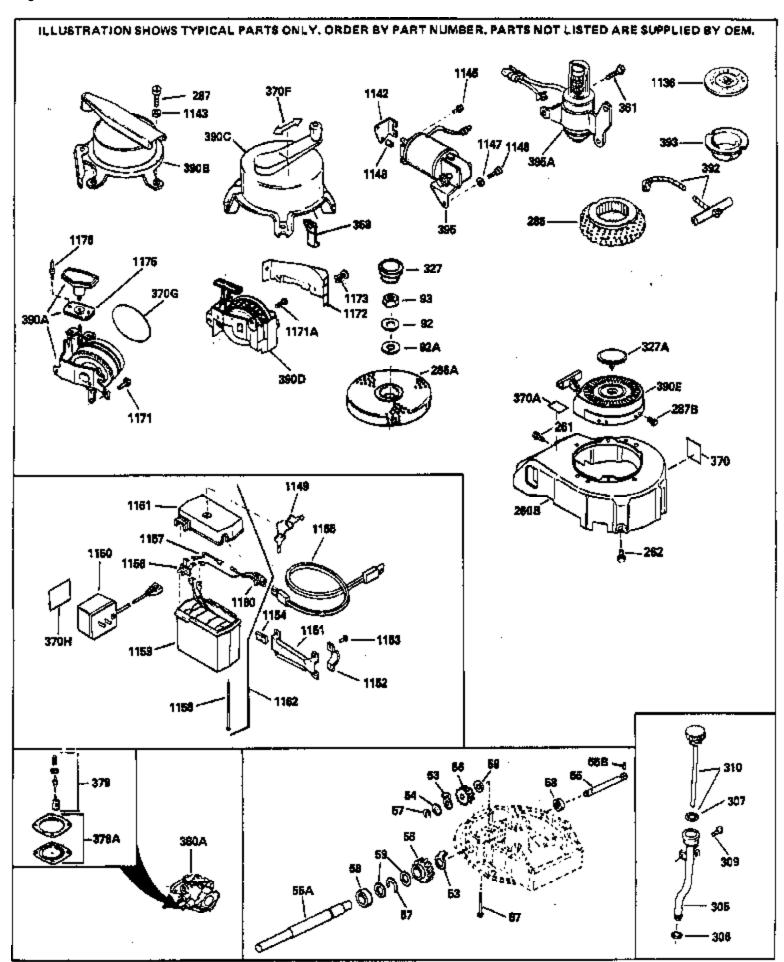

Ref #	Part Number	Qty	Description
19	31386		Spring, Governor
32	32323		Washer, Thrust
92	650815		Washer, Belleville
93	650607		Nut, Flywheel
182	6201		Screw, 1/4-28 x 7/8"
261	650561		Screw, 1/4 20 x 5/8"
262	650561		Screw, 1/4-20 x 5/8"
287	29716		Screw, 1/4-28 x 7/16" (Use as require d)
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" d ia.)
306	34282		"O" Ring (This "O" ring is required with metal fill tube only
			when replacement mounting flange with .777 dia. oil fill hole
			has been used.)
370	34346		Decal, Instruction
379	631021		Inlet Needle, Seat & Clip Assy.
1175	590441		Bracket Ass'y. (Use as required)
1176	650639		Open End Rivet (Use as required)

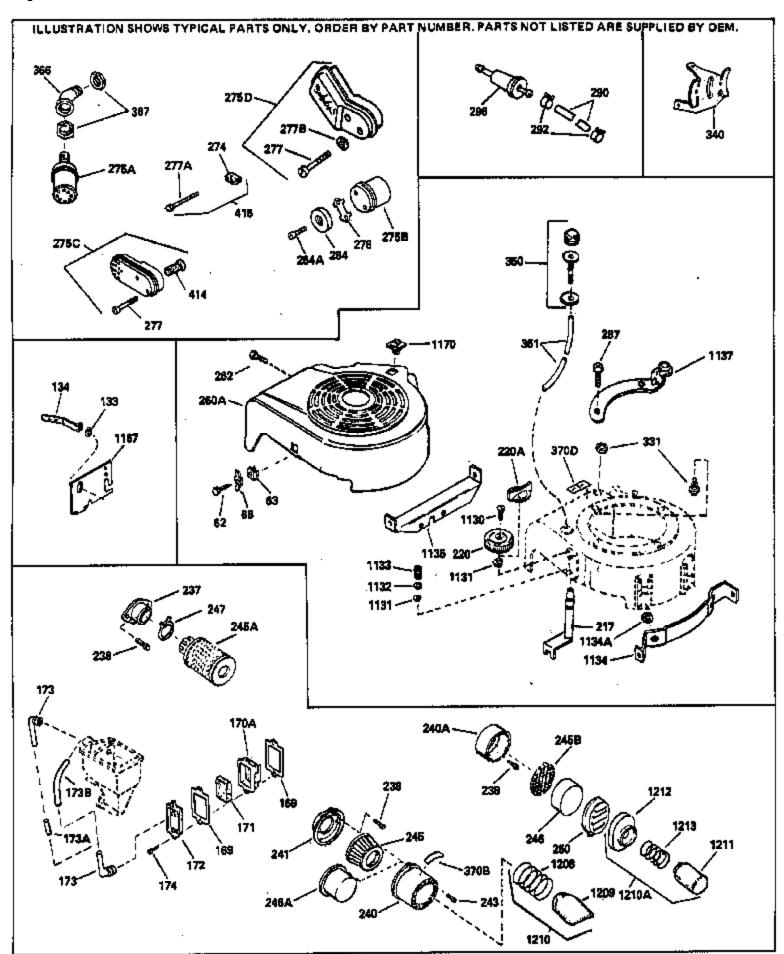

Ref #	Part Number	Qty	Description
	31386	Qty	Spring, Governor
	32323		Washer, Thrust
	31619A		* Gasket, Valve spring cover
	31410		Element, Breather
	650128		Screw, 10-24 x 1/2"
	6201		Screw, 1/4-28 x 7/8"
	650707		Screw, 10-32 x 5/8"
	650561		Screw, 1/4-20 x 5/8"
	26754A		* Gasket, Exhaust
	650774		Screw, 1/4-20 x 2-3/8"
	30063		Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
	29716		Screw, 1/4-28 x 7/16" (Use as require d)
	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287	30013		Pop Rivet (Purchase locally) (3/16" d ia.)
	20774		• • • • • • • • • • • • • • • • • • • •
	29774		Fuel Line (Braided 8-1/4") (21 cm) (Use as req.)
	34357		Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
	30705		Fuel Line (Braided 16")(40 cm)(Use as req.)
	26460		Fuel Line Clamp (Use as required)
415	730162		Muffler Adapter Kit (Incl. 274 & 277A) (Inverted Ports)