


Dof #	Part Number Qty	Description
	33729A	Cylinder (Incl. 2 & 20) (2-13/16" Bor e)
	26727	Pin, Dowel
	33734	Element, Breather
		·
	34214A	Breather Ass'y. (Incl. 6, 8, 9 & 12)
	33735	* Gasket, Breather
	30200	Screw, 10-24 x 9/16"
	33886	Tube, Breather
	28277	Washer, Flat
	30589	Rod, Governor (Incl. 14)
16	32651	Lever, Governor
17	31335	Clamp, Governor (Clamp is positioned towardsspark plug end
		on 1977-78 and latermodels. It is positioned opposite spark
		plugend on earlier models.)
40	CEOE 40	,
	650548	Screw, 8-32 x 5/16"
	31386	Spring, Governor
	32600	Seal, Oil
	33813	Crankshaft Ass'y.
32	32323	Washer, Thrust NOTE: This thrust washer maynot be
		required if a new crankshafthas been installed. Check the
		proper Mechanic's Handbook for acceptable end play. Use
		this .010" thrust washer if excess end play is measured.
40	34535	Piston, Pin & Ring Set (Std.) (2-13/1 6")
	34536	Piston, Pin & Ring Set (.010" OS)
	34537	Piston, Pin & Ring Set (.020" OS)
	33562B	Piston & Pin Ass'y.(Std)(Incl. 43)(2- 13/16")
	33563B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	33564B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	33567	Ring Set (Std.) (2-13/16" Bore)
	33568	Ring Set (.010" OS)
	33569	Ring Set (.020" OS)
	20381	Ring, Piston pin retaining
	32875	Rod Assy., Connecting (Incl. 18)
	32609	Plate, Lock (Do not use with No. 32610A locking type bolt.)
	32610	Bolt, Connecting rod (Early Productio n)
	32610A	Bolt, Connecting rod
	27241	Lifter, Valve
	33154	Camshaft
52	29914	Pump Assy., Oil
69	35261	* Gasket, Mounting flange
70	32612A	Flange Ass'y. (Incl. 72, 75 & 80)
72	30572	Plug, Oil drain (Incl. 73)
72A	9556	Plug, Pipe
73	28833	* Drain Plug Gasket(Not used w/ plastic plug)
	27897	Seal, Oil
	30574	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650488	Screw, 1/4-20 x 1-1/4"
	610951	Key, Flywheel
	650815	Washer, Belleville
	650607 650480	Nut, Flywheel
	650489	Screw, 1/4-20 x 5/8"
	34231	Wire, Ground
	33554A	* Gasket, Cylinder head
120	33016A	Head, Cylinder (Incl. 131)

		D 10
		Description (2(1) (1) (1) (1) (1) (1) (1)
125 32		Intake Valve (Std.) (Incl. 151) (Inverted Ports)
125 32		Intake Valve (1/32" OS) (Incl. 151) (Inverted Ports)
126 29		Exhaust Valve (Std.) (Incl. 151) (Inverted Ports)
126 29		Exhaust Valve (1/32" OS) (Incl. 151) (Inverted Ports)
127 26		Washer, Flat (Not used on late production)
127 65		Washer, Flat (Use as required)
130 65		Screw, 5/16-18 x 1-1/2" (Use as requi red)
130 60		Screw, 5/16-18 x 1-1/2" (Use as requi red)
131 65		Screw, 5/16-18 x 2" (Use as required)
135 33		Plug, Spark (J-8C)
149A 33		Cap, Upper valve spring (Exhaust)
149 31 150 31		Upper Cap (Int. & Ex.)(Early Producti on) Spring, Valve
150 31		Cap, Lower valve spring
169 27		* Gasket, Valve spring cover
170 32		Cover, Valve spring box
170 32		Screw, 10-24 x 1/2"
174 00		Nut & Lockwasher Assy.
179 30		Clip, Magneto wire
182 30		Screw, 1/4-28 x 1"
184 26		* Gasket, Carburetor
185 33		Pipe, Intake
186 32		Link, Governor spring
200 32		Speed Control (Incl. 203, 204 thru 20 6)
203 31		Spring, Compression
204 65		Screw, 5-40 x 7/16"
206 61		Terminal Assy. (Use as required)
207 33		Link, Throttle
209 30		Screw, 10-24 x 9/16"
215 32		Knob, Speed control
223 65		Screw, 1/4-20 x 1-1/8"
224 33		* Gasket, Intake
238 28		Screw, 10-32 x 1/2"
239 27	7272A	* Gasket, Air cleaner
240 31	1715	Body, Air cleaner
241 31	1691	Bracket, Air cleaner
243 65	50152	Screw, 8-32 x 3/8"
244 73	30164	Cleaner Kit (Incl. 238 thru 245 & 370 B) (Use as required)
245 30	0727	Element, Air cleaner
260 33	3738D	Housing, Blower NOTE: Replacement hardware may differ
		when servicing starter assy. or blower housing. Refer to
		Service Bulletin 508.
261 65	50561	Screw, 1/4-20 x 5/8"
274 26		* Gasket, Exhaust (Use as required)
274 33		* Gasket, Exhaust
275 35		Muffler (Incl. 274)
277 30		Screw, 1/4-20 x 1/2" (Use as required)
277 65		Screw, 1/4-20 x 2-3/8"
285 33		Cup, Starter
286 33		Screen, Starter cup
287B 29		Nut & Lockwasher 1/4-28 (Use as requi red)
290 29		Fuel Line (Braided 8-1/4") (21 cm)
290 30		Fuel Line (Braided 16") (40 cm)
291 33		Line, Fuel (Metal 3.360")
292 26		Clamp, Fuel line
300 32		Tank Assy., Fuel (Incl. 292 & 301)
301 41		Cap, Fuel (Standard) (Use as required)
		. , , , , , , , , , , , , , , , , , , ,

Ref #	Part Number	Qty Description
	33032 34282	Cap, Fuel (Use as required) "O" Ring (This "O" ring is required with metal fill tube only when replacement mounting flange with .777 dia. oil fill hole has been used.)
312 313 325 325 370B 370C 370A 370	27625 29673 33876 27275 33685 31752 35344 550223 34346 610942A	Plug, Oil filler (Incl. 312) * Gasket, Filler plug Gasket, Stator Clip, Wire retaining Clip, Wire retaining (Early Productio n) Decal, Air cleaner Decal, Speed control Decal, Name Decal, Instruction Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 35 or Fiche 6 Grid F-13 for breakdown)
378 379	30547A 30548B 631021 631716	Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184) (Refer to Division 5, Section A, page 122 or Fiche 6 Grid E-7 for breakdown)
390	590420	Starter, Rewind NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
	33740D 730225	* Gasket Set (Incl. items marked *) SAE 30, 4-Cycle Engine Oil (Quart)

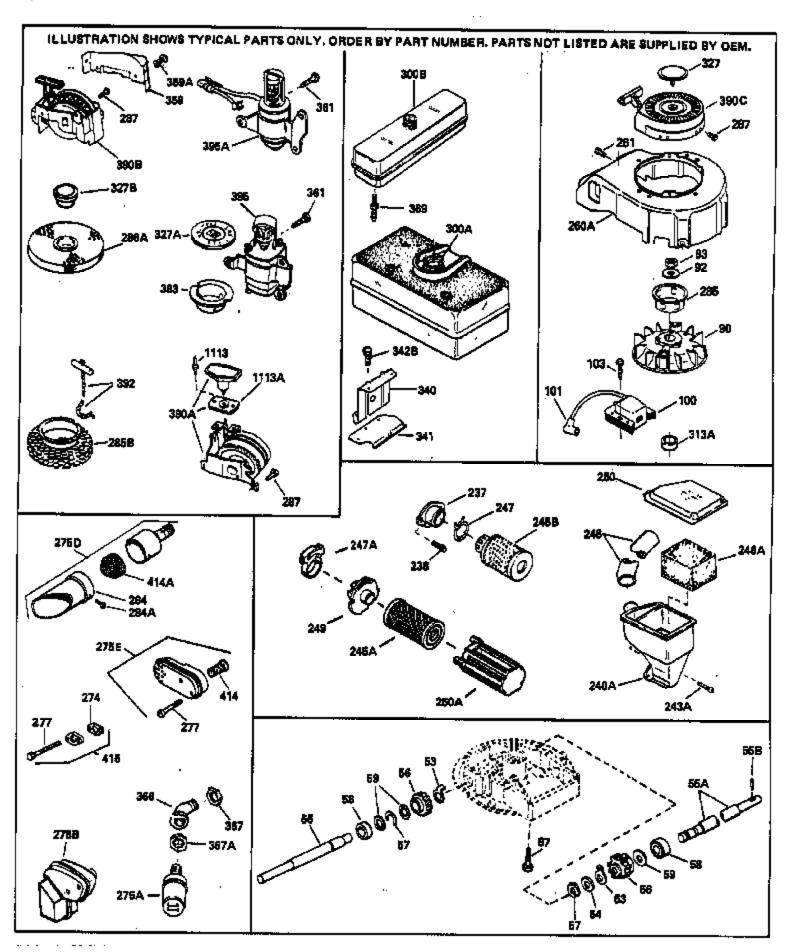

Ref #	Part Number	Qty D	Description
92	650815	W	Vasher, Belleville
93	650607	N	lut, Flywheel
238	28820	S	crew, 10-32 x 1/2"
261	650561	S	Screw, 1/4-20 x 5/8"
274	26754A	* (Gasket, Exhaust (Use as required)
274	33670A	* (Gasket, Exhaust
275D	391026	m	fuffler (Incl. 284, 284A & 414A) (This spark arrester nufflercan be used on any model with a 3/4-14 tapped xhaust port.)
277	30063	S	screw, 1/4-20 x 1/2" (Use as required)
277	650774	S	Screw, 1/4-20 x 2-3/8"
284A	650578	S	crew, 8-18 x 3/8" (Use as required)
284	33700	C	Cover & Tube, Muffler (Use as require d)
285	33667	С	Cup, Starter
287		Po	op Rivet(Purchase locally)(Use as re quired)
	33323		creen, Muffler (Use as required)
	730162		fluffler Adapter Kit (Incl. 121 & 128) (Conventional Ports)
415	730165	ac	fuffler Adapter Kit (Incl. 274 & 277) NOTE: This muffler dapter can be used only on models which haveexhaust port n top (above intake). (Inverted Ports)
1113		Ri	tivet, Open end (Can be purchased loc ally)