


Ref #	Part Number Qty	Description
1	33729A	Cylinder (Incl. 2 & 20) (2-13/16" Bor e)
2	26727	Pin, Dowel
6	33734	Element, Breather
7	34214A	Breather Ass'y. (Incl. 6, 8, 9 & 12)
8	33735	* Gasket, Breather
	30200	Screw, 10-24 x 9/16"
	33886	Tube, Breather
	28277	Washer, Flat
	30589	Rod, Governor (Incl. 14)
	32651	Lever, Governor
	31335	Clamp, Governor (Clamp is positioned towardsspark plug end
	0.1000	on 1977-78 and latermodels. It is positioned opposite spark
		plugend on earlier models.)
		plageria off carrier friedels.)
18	650548	Screw, 8-32 x 5/16"
19	31361	Spring, Governor
20	32600	Seal, Oil
30	34187	Crankshaft Ass'y.
32	32323	Washer, Thrust NOTE: This thrust washer maynot be
		required if a new crankshafthas been installed. Check the
		proper Mechanic's Handbook for acceptable end play. Use
		this .010" thrust washer if excess end play is measured.
40	34535	Piston, Pin & Ring Set (Std.) (2-13/1 6")
	34536	Piston, Pin & Ring Set (3.01.0" OS)
	34537	Piston, Pin & Ring Set (.020" OS)
	33562B	Piston & Pin Ass'y.(Std)(Incl. 43)(2- 13/16")
	33563B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	33564B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	33567	Ring Set (Std.) (2-13/16" Bore)
	33568	Ring Set (3id.) (213/10 Bole) Ring Set (.010" OS)
	33569	Ring Set (.020" OS)
	20381	
	32875	Ring, Piston pin retaining
	32610	Rod Assy., Connecting (Incl. 18)
	32610A	Bolt, Connecting rod (Early Productio n) Bolt, Connecting rod
	32609	
		Plate, Lock (Do not use with No. 32610A locking type bolt.)
	27241	Lifter, Valve
	33154	Camshaft
	29914	Pump Assy., Oil
	35261 34344B	* Gasket, Mounting flange
	34311B	Flange Ass'y. (Incl. 72, 75 & 80)
	30572	Plug, Oil drain (Incl. 73) * Proin Plug Cocket(Not used w/ plactic plug)
	28833	* Drain Plug Gasket(Not used w/ plastic plug)
	27897 20574	Seal, Oil Shaft Machanical governor
	30574	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650488	Screw, 1/4-20 x 1-1/4"
	610951	Key, Flywheel
	650815	Washer, Belleville
	650607	Nut, Flywheel
	650489	Screw, 1/4-20 x 5/8"
	34231	Wire, Ground
	33554A	* Gasket, Cylinder head
	33016A	Head, Cylinder (Incl. 131)
125	32644A	Intake Valve (Std.) (Incl. 151) (Inverted Ports)

Dof # Dort Number	Oty Description
Ref # Part Number 125 32645A	Qty Description Intake Valve (1/32" OS) (Incl. 151) (Inverted Ports)
126 29313C	Exhaust Valve (Std.) (Incl. 151) (Inverted Ports)
126 29315C	Exhaust Valve (1/32" OS) (Incl. 151) (Inverted Ports)
127 26073	Washer, Flat (Not used on late production)
127 650691	Washer, Flat (Use as required)
130 650818	Screw, 5/16-18 x 1-1/2" (Use as requi red)
130 6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
131 650694A	Screw, 5/16-18 x 2" (Use as required)
135 33636	Plug, Spark (J-8C)
149A 33678	Cap, Upper valve spring (Exhaust)
149 31671	Upper Cap (Int. & Ex.)(Early Production)
150 31672	Spring, Valve
151 31673	Cap, Lower valve spring
167 32924	Spring, Compression
168 650688	Screw, 10-32 x 1"
169 27234A	* Gasket, Valve spring cover
170 32755	Cover, Valve spring box
174 650128	Screw, 10-24 x 1/2"
178 29752	Nut & Lockwasher Assy.
179 30593	Clip, Magneto wire
182 30088A	Screw, 1/4-28 x 1"
184 26756	* Gasket, Carburetor
185 33739	Pipe, Intake
186 34358	Link, Governor spring
200 33155A	Control Assy., Speed (Incl. 206)
201 33150	Bracket, Control
206 610973	Terminal Assy. (Use as required)
207 34336	Link, Throttle
209 30200	Screw, 10-24 x 9/16"
210 27793	Clip, Conduit
211 28942	Screw, 10-32 x 3/8"
223 650142 224 22754 A	Screw, 1/4-20 x 1-1/8"
224 33751A	* Gasket, Intake
238 28820	Screw, 10-32 x 1/2" * Cooket Air desper
239 27272A 240 31715	* Gasket, Air cleaner
	Body, Air cleaner
241 31691 243 650453	Bracket, Air cleaner
243 650152 244 730464	Screw, 8-32 x 3/8"
244 730164 245 20727	Cleaner Kit (Incl. 238 thru 245 & 370 B) (Use as required)
245 30727 260 33739D	Element, Air cleaner
260 33738D	Housing, Blower NOTE: Replacement hardware may differ
	when servicing starter assy. or blower housing. Refer to
	Service Bulletin 508.
261 650561	Screw, 1/4-20 x 5/8"
274 26754A	* Gasket, Exhaust (Use as required)
274 33670A	* Gasket, Exhaust
275 35771	Muffler (Incl. 274)
277 30063	Screw, 1/4-20 x 1/2" (Use as required)
277 650774	Screw, 1/4-20 x 2-3/8"
285 33667	Cup, Starter
286 33668	Screen, Starter cup
287B 29752	Nut & Lockwasher 1/4-28 (Use as requi red)
290 29774	Fuel Line (Braided 8-1/4") (21 cm)
290 30705	Fuel Line (Braided 16") (40 cm)
292 26460	Clamp, Fuel line
300 32671	Tank Assy., Fuel (Incl. 292 & 301)
301 410144B	Cap, Fuel (Standard) (Use as required)

Ref #	Part Number	Qty Description
305 306	33032 34318 34265 34282	Cap, Fuel (Use as required) Tube Assy., Oil filler (Plastic) Gasket, Oil fill tube "O" Ring (This "O" ring is required with metal fill tube only when replacement mounting flange with .777 dia. oil fill hole has been used.)
309 310 313 325 325 370	33590 650562 34319 33876 27275 33685 34346 610942A	"O" Ring Screw, 10-32 x 1/2" Dipstick, Oil (Incl. 307) (Twist Lock) Gasket, Stator Clip, Wire retaining Clip, Wire retaining (Early Production) Decal, Instruction Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 35 or Fiche 6 Grid F-13 for breakdown)
378 379	30547A 30548B 631021 631716	Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184) (Refer to Division 5, Section A, page 122 or Fiche 6 Grid E-7 for breakdown)
390	590420	Starter, Rewind NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 25 or Fiche 6, Grid G-3 for breakdown)
	33740D 730225	* Gasket Set (Incl. items marked *) SAE 30, 4-Cycle Engine Oil (Quart)

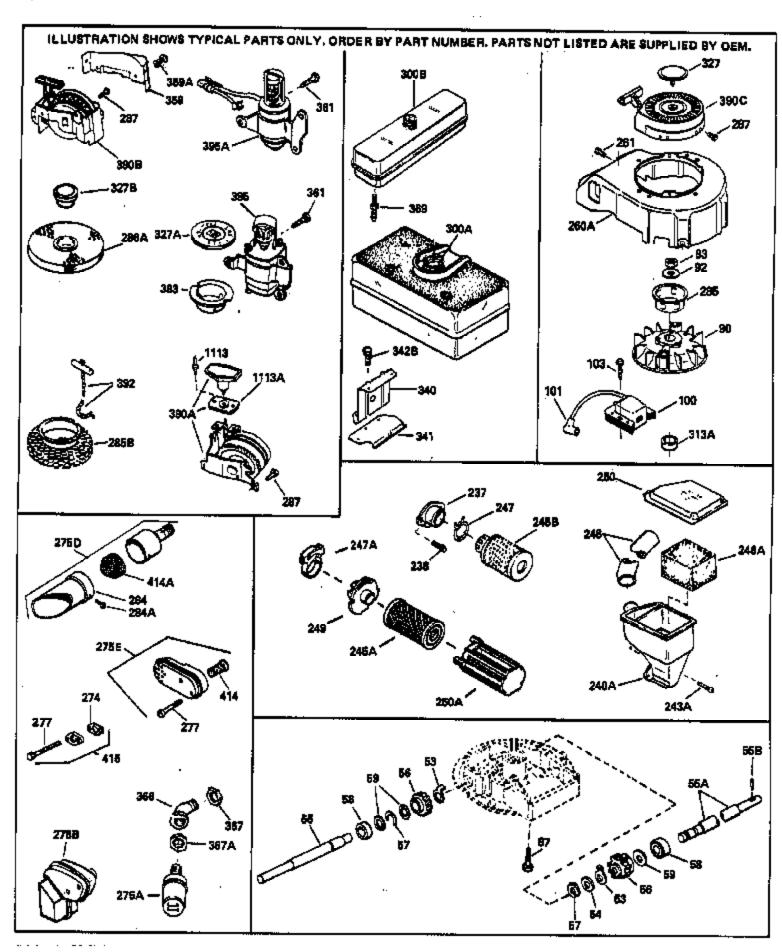

Ref #	Part Number	Qty	Description
	650815		Washer, Belleville
	650607		Nut, Flywheel
238	28820		Screw, 10-32 x 1/2"
261	650561		Screw, 1/4-20 x 5/8"
274	26754A		* Gasket, Exhaust (Use as required)
274	33670A		* Gasket, Exhaust
275D	391026		Muffler (Incl. 284, 284A & 414A) (This spark arrester mufflercan be used on any model with a 3/4-14 tapped exhaust port.)
277	30063		Screw, 1/4-20 x 1/2" (Use as required)
277	650774		Screw, 1/4-20 x 2-3/8"
	650578		Screw, 8-18 x 3/8" (Use as required)
	33700		Cover & Tube, Muffler (Use as require d)
	33667		Cup, Starter
287	0000		Pop Rivet(Purchase locally)(Use as re quired)
	33323		Screen, Muffler (Use as required)
	730162		Muffler Adapter Kit (Incl. 121 & 128) (Conventional Ports)
415	730165		Muffler Adapter Kit (Incl. 274 & 277) NOTE: This muffler adapter can be used only on models which have exhaust port on top (above intake). (Inverted Ports)
1113			Rivet, Open end (Can be purchased loc ally)