

1 2 2 2 2 2 2 4	33823A 31927 28483	Qty_	Description Cylinder (Incl. 2, 4 & 33) (3-5/16" B ore) Pipe Plug, 3/8-18 sq. head (Use as re quired) Pipe Plug (3/8-18 hex countersunk) (A s req.) Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local) Pipe Plug (1/8-27 sq. hd.) (Use as re quired) Pipe Plug(1/8-27 hex c/sunk headless) (As req) Pin, Dowel Crankshaft (Incl. 6 thru 9) NOTE: When using this crankshaft to repair older units equippedwith straight cut cam and governor gears,it will be necessary to order 34751 helical governor gear assembly and 34752 helical camshaft in order to the complete the repair.
7 8 9 11 11 11 11 11 11 11 11 11 11 11 11 1	29783 31931 31932 31928 34508 34509 34510 32001C 32002B 32003B 31919 32004 32006 33093A 34383 34384 32077 26073 28264 33470 33472 33471 33505 33645 33506 33646 33507 33508 34410 33509 33510 33473 650745 35479 30590A 31948 31956 B 32580A 31950 650451 650588		Pin, Crankshaft gear Gear, Crankshaft (Straight) Bearing, Tapered roller Cup, Bearing Piston, Pin & Ring Set (Std.) (3-5/16 " Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.12) Piston & Pin Ass'y. (.010" OS) (Incl. 12) Piston & Pin Ass'y. (.020" OS) (Incl. 12) Piston & Pin Ass'y. (.020" OS) (Incl. 12) Ring, Piston pin retaining Ring Set (.010" OS) Ring Set (.010" OS) Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17) Connecting Rod Assy.(.010" US)(Incl.1 5, 16,17) Connecting Rod Assy.(.020" US)(Incl.1 5,16,17) Bolt, Connecting rod Washer, Connecting rod Washer, Connecting rod Nut Assy. Camshaft (MCR) (Straight) Lifter, Valve Rod, Push Intake Valve (Std.) Intake Valve (1/32" OS) Exhaust Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (I/32" OS) Spring, Valve Retainer & Cap Set, Keeper valve * "O" Ring (Exhaust only) (Also Incl. in 251) * "O" Ring (Intake only) (Also Incl. in 251) Cap, Valve Governor Gear & Shaft Ass'y. (Straigh t) Washer, Flat Washer, Flat Washer, Flat Use with 35322 spool) Washer, Flat Spool, Governor * Gasket, Cylinder cover Cylinder Cover Assy.(Incl.2,33,36,37 & 38) * Seal, Oil Screw, 1/4-20 x 1" Screw, 1/4-20 x 2"
37	32425 32426 29193		Rod Assy., Governor Spacer, Governor rod Ring, Retaining


Ref #	Part Number Q	y Description
39	650687	Screw, 10-32 x 5/16"
40	33495	Cover, Cylinder head
	34225A	* Gasket, Cylinder head
	33763	Head, Cylinder
	31980	Pulley, Starter
	32046	Rope Assy., Starter
	33657	Spark Plug (L-82C)
	650691	Washer, Flat
		•
	650690	Washer, Belleville
	650746	Screw, 5/16-18 x 1-3/8"
	650692	Screw, 5/16-18 x 1-3/4"
	730218	Valve Guide Kit (Incl. 49)
	792035	Ring, Retaining
	33515A	* Gasket, Intake pipe
	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
55	33477A	Baffle, Air cleaner
56	792075	Nut, Lock 5/16-24 (Used in early prod uction)
57	33478	Link, Governor lever-to-throttle leve r
58	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
	650544	Screw, Torx T-25, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
	31984A	Lever Assy., Control
	28558	Washer, Wave
	31966	Bushing, Governor lever
	650597	•
		Screw, 10-24 x 5/8"
	31967	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	Spring
	32599	"O" Ring (Incl. in 251)
	650666	Washer, Lock
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	650592	Key, Flywheel
	730201	Trigger Pin Kit (Use as required)
	610909	Flywheel
	650594	Nut, Flywheel
	610906	Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
82	30063	Screw, 1/4-20 x 1/2"
83	650751	Screw, 1/4-20 x 7/16"
84	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
85A	8274	Washer, Lock
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	650595	Screw, 5/16-24 x 3/8"
	650752	Screw, 1/4-20 x 7/16"
	35475	Tube, Push rod
	33481	* "O" Ring (Also Incl. in 251)
	34754	Housing, Rocker arm
	33484	* "O" Ring (Also Incl. in 251)
94	· · · · · · · · · · · · · · · · · · ·	O TAINY (AISO INIOI. III 201)


Ref #	Part Number	Qty	Description
95	650168		Washer, Flat
96	32610A		Screw, 1/4-20 x 29/32"
97	33485		Arm, Rocker
98	33486		Ring, Retaining
99	650755		Screw, 1/4-20 x 3/4"
100	650864		Nut, Hex, 1/4-20
101	650756		Stud, Rocker arm
102	33487		* "O" Ring (Also Incl. in 251)
	33488		Cover, Rocker arm
	31958A		* Gasket, Breather (Also Incl. in 251)
	33489		Body Assy., Breather
	33490		Tube, Breather
	30102		* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
	650738		Screw, 1/4-20 x 5/8"
	35471		* Gasket, Air cleaner
	35472		Bracket, Air cleaner
	650399		Screw, 10-32 x 5/8"
	32008		Element, Air cleaner
	32810		Cover, Air cleaner
	650513		Nut, Wing
	31992		Spacer, Screen
	33776		Screen, Pulley
	650680		Screw, 1/4-20 x 1-1/2"
	27070		Washer, Lock
	650590		Nut, Conduit
	32143		Nipple, Exhaust
	32577		Cover, Cylinder NOTE: Determine the gap between the cover
			and the machined surface on the cylinder, which can be from .001" up to .007", in which case no shim gaskets will be
			required. Use of gaskets must be limited to a combined total
			of .010" thick. Steel spacersmust be used as required to eli
147	792028		Screw, 5/16-18 x 7/8"
155	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
156	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
100	0.072		between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
4	00004		'
15/	32031		* Spacer, Steel (.010 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used as re
158	610118		Cover, Spark plug
	610750		Grommet, Lead wire
	610408		Nut, 8-32
	610908		Terminal, Female
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
			•


		_	
Ref #	Part Number	Qty	Description
189	33984A		Dipstick (Incl. 190)
190	33590		"O" Ring
191	33893A		Tube, Oil filler
244B	31752		Decal, Air cleaner
244	34346		Decal, Instruction
244A	550223		Decal, Name
244A	32676		Decal, Solid state
246	631687		Valve, Seat & Spring Assy.
247	631718		Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A, page 124 for breakdown)
	33516G 35075		* Gasket Set (Incl. items marked *) "O" Ring Kit (Incl. Nos. items marked +)


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY CEM.


VIEW 2 of 3

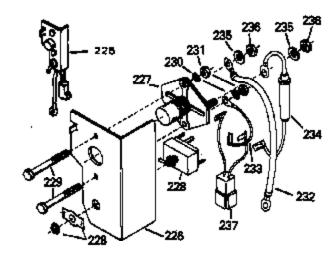


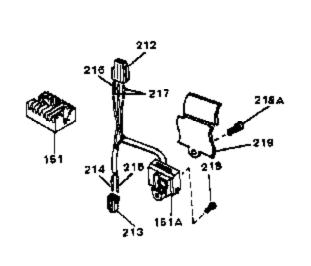


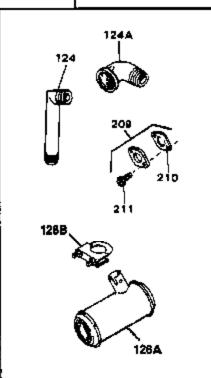

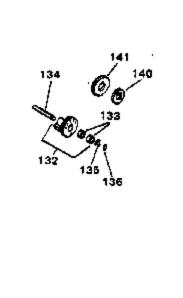

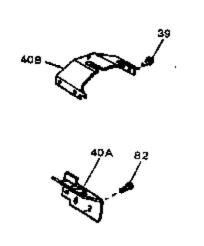


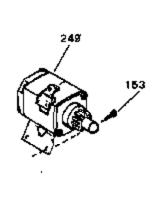

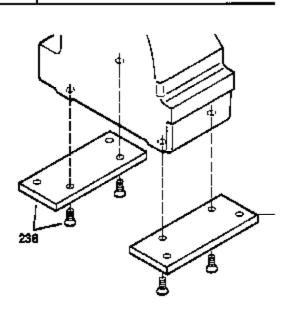

Ref #	Part Number	Qty	Description
82	650687 30063 35731		Screw, 10-32 x 5/16" Screw, 1/4-20 x 1/2" Muffler (Incl. 126B) Gear, Counterbalance weight (Straight teeth) (For replacement see Ref. 132. Order correct kit for your enginemodel number.)
149 151 153 153 162A 163A 163 209 210 211	610902 650521 610907A 792028 650781 610903 610905 610904 730178 34102B 30196 730212		Alt.Coil Ass'y. (Incl.162,163,163A) (20 amp) Screw, 10-32 x 1-1/8" Regulator (20 Amp)(Incl.151A, 154A & 218) Screw, 5/16-18 x 7/8"(Use w/32817 str .motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Connector, Flat Terminal Terminal Ech.Adapter Kit (Incl.210 & 211)(As r equired) Gasket, Exhaust (Use as required) Screw, 5/16-18 x 3/4" (Use as require d) Adapter Plate Kit (Optional) NOTE: If you are having mounting problems in using a HH100 thru0H180 inplace of a large frame competitivebrand, we would like to call your attention to 730212 adapter plate kit. The kit converts the bottom mounting system found on HH100 thru 0H180 to a top mounting sys
249	33835		Electric Starter Motor (12-Volt) (Refer to Division 5, Section D for breakdown)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

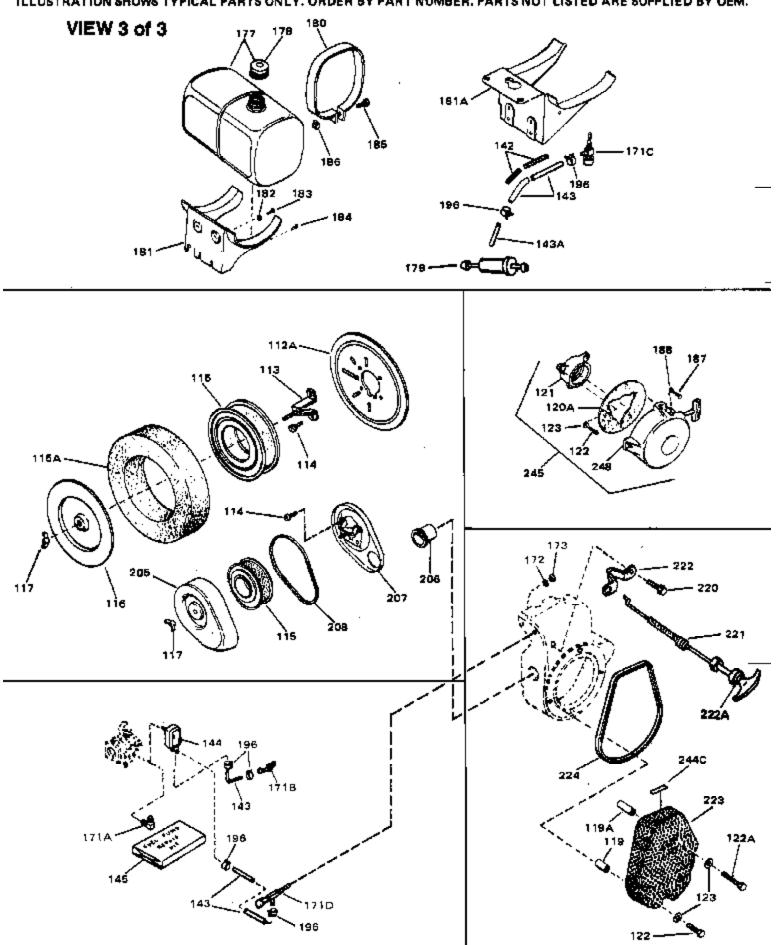

Ref #	Part Number (Qty	Description
114	650399		Screw, 10-32 x 5/8"
115	32008		Element, Air cleaner
117	650513		Nut, Wing
119	31992		Spacer, Screen
122	650680		Screw, 1/4-20 x 1-1/2"
123	27070		Washer, Lock
143	29774		Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705		Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962		Fuel Line (Braided 32")(81 cm)(As req uired)
144	32959		Pump, Impulse fuel
145	33010		Repair Kit, Impulse fuel pump
171B	32958		Fitting, Fuel pump
178	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
178	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
	26460 730134		Clamp, Fuel line (Use as required) Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)