


	Part Number Qt	
2 2 2 2 2 2 4	33823A 31927 28483 9556 28534 27652 34045A	Cylinder (Incl. 2, 4 & 33) (3-5/16" B ore) Pipe Plug, 3/8-18 sq. head (Use as re quired) Pipe Plug (3/8-18 hex countersunk) (A s req.) Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local) Pipe Plug (1/8-27 sq. hd.) (Use as re quired) Pipe Plug(1/8-27 hex c/sunk headless) (As req) Pin, Dowel Crankshaft (Incl. 6 thru 9) NOTE: When using this crankshaft to repair older units equippedwith straight cut cam and governor gears,it will be necessary to order 34751 helical governor gear assembly and 34752 helical camshaft in order to the complete the repair.
$\begin{array}{c} 7\\ 8\\ 9\\ 10A\\ 10\\ 11A\\ 11A\\ 11A\\ 11A\\ 11\\ 11\\ 12\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13$	29783 31931 31932 31928 34223 34222 32001C 32002B 32003B 34508 34509 34510 31919 32004 32005 32006 33093A 34383 34384 32077 26073 28264 33470 33472 33471 33505 33645 33506 33646 33507 33508 34410 33509 33510 33473 650745 35479 30590A 31948 31956B 34221	Pin, Crankshaft gear Gear, Crankshaft (Straight) Bearing, Tapered roller Cup, Bearing Bearing & Seal Assy., Needle Bearing, Needle Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.12) Piston & Pin Ass'y. (000" OS) (Incl. 12) Piston & Pin Ass'y. (000" OS) (Incl. 12) Piston, Pin & Ring Set (Std.) (3-5/16 " Bore) Piston, Pin & Ring Set (000" OS) Ring, Piston pin retaining Ring Set (Std.) (3-5/16" Bore) Ring Set (Std.) (3-5/16" Bore) Ring Set (000" OS) Ring Set (000" OS) Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17) Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17) Connecting Rod Assy.(000" US)(Incl.1 5,16.17) Bolt, Connecting rod Washer, Connecting rod Nut Assy. Camshaft (MCR) (Straight) Lifter, Valve Rod, Push Intake Valve (Std.) Intake Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (1/32" OS) Exhaust Valve (Std.) Exhaust Valve
34	31950 650451 650588	* Seal, Oil Screw, 1/4-20 x 1" Screw, 1/4-20 x 2"

	Part Number Qty	
	32425	Rod Assy., Governor
	32426	Spacer, Governor rod
	29193	Ring, Retaining
39	650736	Screw, 10-16 x 3/8"
40	33495	Cover, Cylinder head
41	34225A	* Gasket, Cylinder head
42	33763	Head, Cylinder
45	35552	Spark Plug (RL-82C)
46A	650691	Washer, Flat
46	650690	Washer, Belleville
47	650692	Screw, 5/16-18 x 1-3/4"
47A	650746	Screw, 5/16-18 x 1-3/8"
	730218	Valve Guide Kit (Incl. 49)
	792035	Ring, Retaining
	33515A	* Gasket, Intake pipe
	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
	33477A	Baffle, Air cleaner
	792075	Nut, Lock 5/16-24 (Used in early prod uction)
	33478	Link, Governor lever-to-throttle leve r
	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
	650544	Screw, Torx T-25, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	
		Plate, Governor spring
	31984A	Lever Assy., Control
	28558	Washer, Wave
	31966	Bushing, Governor lever
	650597	Screw, 10-24 x 5/8"
	31967	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	Spring
	32599	"O" Ring (Incl. in 251)
	650666	Washer, Lock
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	650592	Key, Flywheel
	730201	Trigger Pin Kit (Use as required)
	610967	Flywheel (w/ring gear)
	650594	Nut, Flywheel
	610906	Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	650751	Screw, 1/4-20 x 7/16"
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
	8274	Washer, Lock
	650624	Screw, 5/16-24 x 9/16"
	650595	Screw, 5/16-24 x 3/8"
	650752	Screw, 1/4-20 x 7/16"
88	35475	Tube, Push rod
89	33481	* "O" Ring (Also Incl. in 251)
90	34754	Housing, Rocker arm
93	8345	Washer, Flat
94	33484	* "O" Ring (Also Incl. in 251)

	Part Number (650168	Qty	
			Washer, Flat
	32610A		Screw, 1/4-20 x 29/32"
	33485		Arm, Rocker
	33486		Ring, Retaining
	650755		Screw, 1/4-20 x 3/4"
	650864		Nut, Hex, 1/4-20
	650756		Stud, Rocker arm
	33487		* "O" Ring (Also Incl. in 251)
	33488		Cover, Rocker arm
	31958A		* Gasket, Breather (Also Incl. in 251)
	33489		Body Assy., Breather
	33490		Tube, Breather
107	30102		* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
108	650738		Screw, 1/4-20 x 5/8"
111	35471		* Gasket, Air cleaner
112	35472		Bracket, Air cleaner
114	650399		Screw, 10-32 x 5/8"
	32008		Element, Air cleaner
	32810		Cover, Air cleaner
	650513		Nut, Wing
	650675		Washer, Flat
	32426		Spacer, Screen
	33776		Screen, Pulley
	650670		Screw, 1/4-20 x 3/4"
	27070		Washer, Lock
	650590		Nut, Conduit
	32143		Nipple, Exhaust
	32577		Cover, Cylinder NOTE: Determine the gap between the cover
140	52.511		and the machined surface on the cylinder, which can be from .001" up to .007", in which case no shim gaskets will be required. Use of gaskets must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eli
147	792028		Screw, 5/16-18 x 7/8"
	650399		Screw, 10-32 x 5/8"
	610965		Stator Plate Assy.
	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
100	31311		between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
			spacersmust be used a
156	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
	00004		·
157	32031		* Spacer, Steel (.010 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used as re
150	610118		Cover, Spark plug
	610750		Grommet, Lead wire
	610408		Nut, 8-32
100			

Ref #	Part Number Qty	Description
161	610908	Terminal, Female
164	33356	Terminal
165	650760	Screw, 8-32 x 3/8"
166	28545	Grommet, Plastic
167	650890	Washer, Lock
167A	26073	Washer, Flat
168	32039	Switch, Stop
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	33993A	Dipstick (Incl. 190)
190	33590	"O" Ring
	33992A	Tube, Oil filler
	29443	Clip, Wire
	34346	Decal, Instruction
	550223	Decal, Name
	632024	Valve, Seat & Spring Assy.
247	632032	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A, page 160 for breakdown)
250	33516G	* Gasket Set (Incl. items marked *)
251	35075	"O" Ring Kit (Incl. Nos. items marked +)

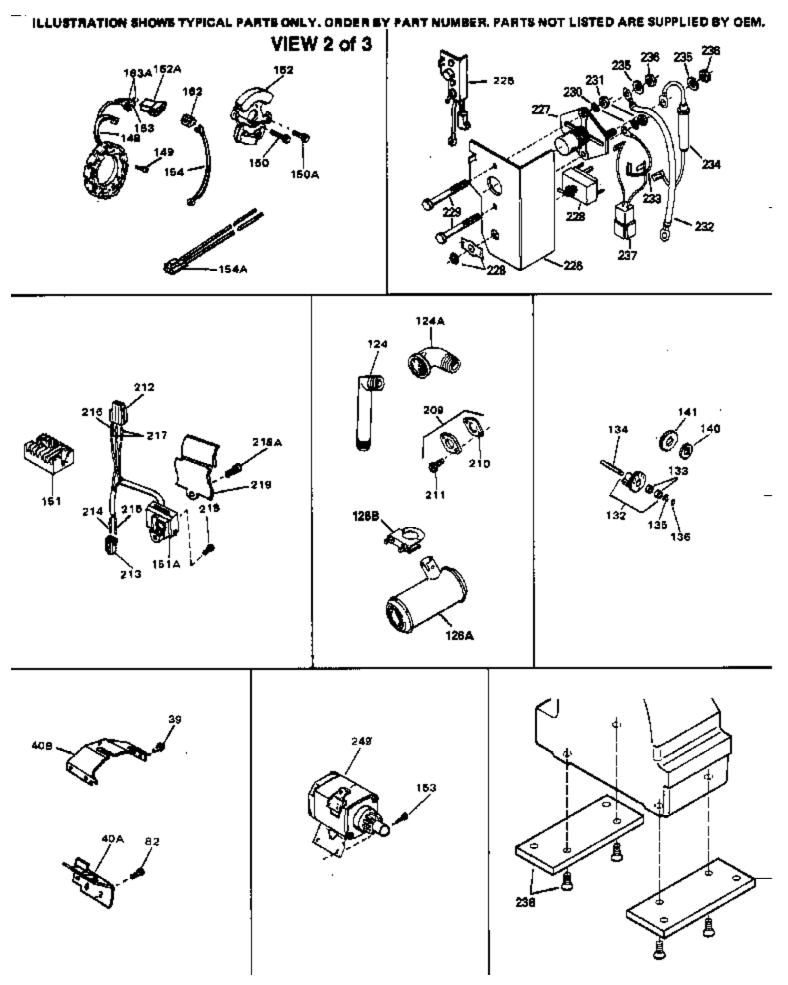

Ref #	Part Number	Qty Description	
	650736 35731	Screw, 10-16 x 3/8" Muffler (Incl. 126B) Gear, Counterbalance weight (Straight teeth) (For replacement see Ref. 132. Order correct kit for your enginemodel number.)	
153 209 210 211	792028 650781 730178 34102B 30196 730212	Screw, 5/16-18 x 7/8"(Use w/32817 str .motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Ech.Adapter Kit (Incl.210 & 211)(As r equired) Gasket, Exhaust (Use as required) Screw, 5/16-18 x 3/4" (Use as require d) Adapter Plate Kit (Optional) NOTE: If you are having mounting problems in using a HH100 thru0H180 inplace large frame competitivebrand, we would like to call your attention to 730212 adapter plate kit. The kit converts th bottom mounting system found on HH100 thru 0H180 to top mounting sys	he
249	33835	Electric Starter Motor (12-Volt) (Refer to Division 5, Sec D for breakdown)	tion


1714

145

143

1710 196

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

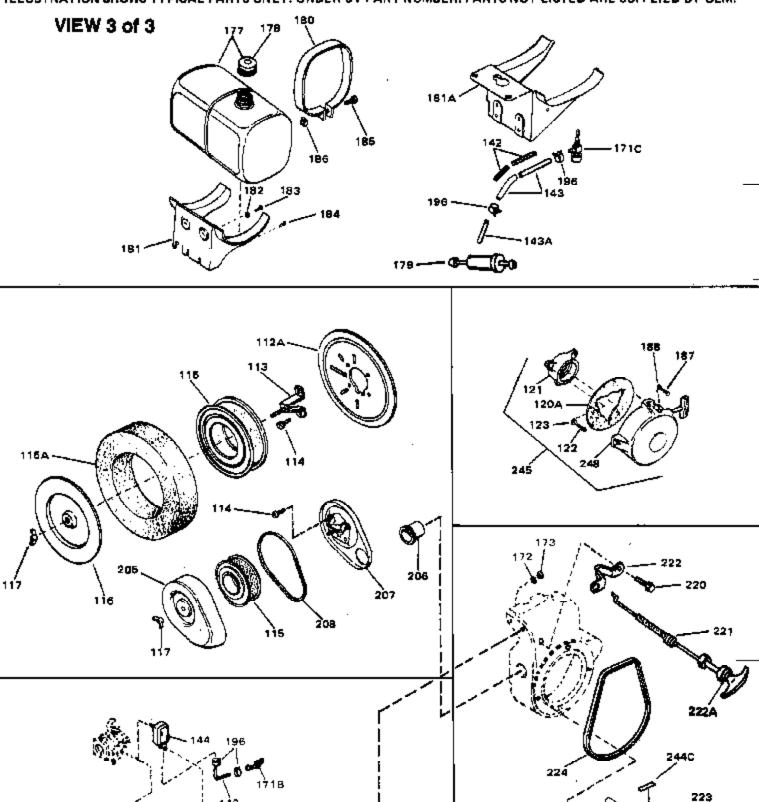

119Á

122

122A

Ref #	Part Number Qty	/ Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
119	32426	Spacer, Screen
122	650670	Screw, 1/4-20 x 3/4"
123	27070	Washer, Lock
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
144	33981	Pump, Impulse fuel
	33010	Repair Kit, Impulse fuel pump
171C	29683	Valve, Fuel strainer & shut-off
171B	32958	Fitting, Fuel pump
177	33979	Fuel Tank (Incl. 178)
178	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
		lequileu)
180	33980	Strap, Fuel tank
181	33978	Bracket, Fuel tank
182	650787	Washer, Belleville
183	650786	Screw, 1/4-20 x 5/8"
	650785	Screw, 5/16-18 x 5/8"
	650488	Screw, 1/4-20 x 1-1/4"
	650456	Nut, Lock
	26460	Clamp, Fuel line (Use as required)
245	730134	Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)