


(Page 1 of 2)

IMAGE FILE: ENOH140.2

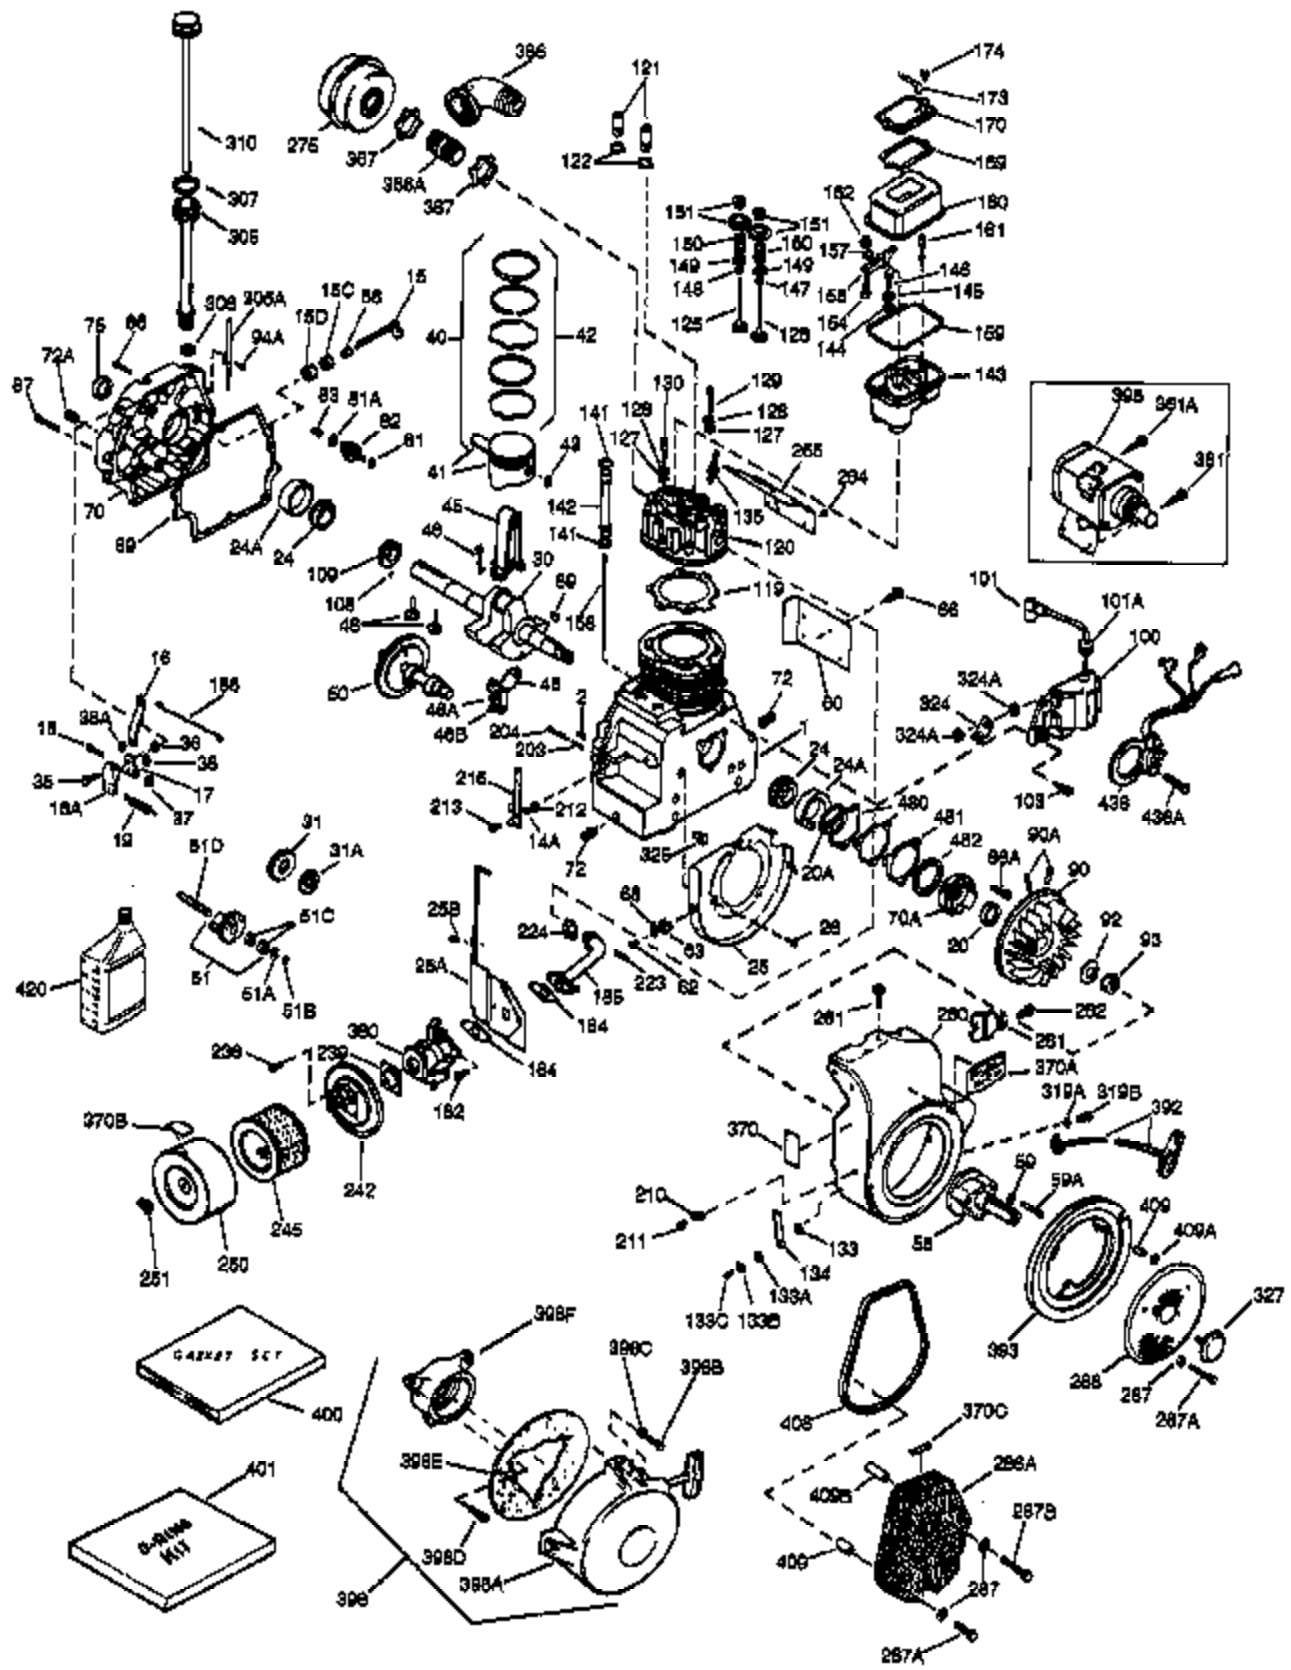

Ref #	Part Number	Qty	Description
	1 33823A	1	Cylinder (Incl. 2, 20 & 72)
	2 27652	2	Dowel Pin
	14A 28558	1	Washer
	15 32425	1	Governor Rod
	15C 34222	1	Needle Roller Bearing
	15D 34223	1	Needle Roller Bearing
	16A 31965	1	Governor Spring Plate
	16 31963	1	Governor Lever
	17 31964	1	Governor Lever Clamp
	18 650544	1	Screw, Torx T-25, 10-24 x 7/8"
	19 31967	1	Extension Spring
	20A 32599	1	* "O" Ring
	20 31950	1	* Oil Seal
	24A 31928	2	Bearing Cup
	24 31932	2	Tapered Roller Bearing
	25B 650738	1	Screw, 1/4-20 x 5/8"
	25 32579	1	Blower Housing Baffle
	25A 34285	1	Air Baffle
	26 650561	3	Screw, 1/4-20 x 5/8"
	30 34278B	1	Crankshaft
	35 30312	1	Screw, 10-32 x 1/2"
	36 8345	1	Flat Washer
	37 7975	1	Lock Nut, 10-24
	38 29193	1	Retaining Ring
	38A 650518	1	Washer
	40 34508	1	Piston, Pin & Ring Set (Std.)
	40 34509	1	Piston, Pin & Ring Set (.010" OS)
	40 34510	1	Piston, Pin & Ring Set (.020" OS)
	40 34850	1	Piston, Pin & Ring Set (.030" OS)
	40 34523	1	Piston, Pin & Ring Set (.040" OS)
	41 32001C	1	Piston & Pin Ass'y. (Std.) (Incl. 43)
	41 32002B	1	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	41 32003B	1	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	41 32619B	1	Piston & Pin Ass'y. (.030" OS) (Incl. 43)
	41 32620B	1	Piston & Pin Ass'y. (.040" OS) (Incl. 43)
	42 32004	1	Ring Set (Std.)
	42 32005	1	Ring Set (.010" OS)
	42 32006	1	Ring Set (.020" OS)
	42 32623	1	Ring Set (.030" OS)
	42 32624	1	Ring Set (.040" OS)
	43 31919	2	Piston Pin Retaining Ring
	45 33093A	1	Connecting Rod Ass'y. (Incl.46 - 46B)
	45 34383	1	Connecting Rod Ass'y.(.010" US)(Incl. 46-46B)
	45 34384	1	Connecting Rod Ass'y.(.020" US)(Incl. 46-46B)
	46A 26073	2	Washer
	46B 28264	2	Nut
	46 32077	2	Connecting Rod Bolt
	48 33472	2	Valve Lifter
	50 34752	1	Camshaft (MCR)
	62 650760	1	Screw, 8-32 x 3/8"
	63 28545	1	Grommet
	66 30063	2	Screw, Torx T-30, 1/4-20 x 1/2"
	68 33356	1	Ground Terminal
	69 31956B	1	* Cylinder Cover Gasket
	70A 32577	1	Cylinder Cover (See Ref. #'s 480-482)
	70 32685	1	Cylinder Cover (Incl. 15,38,72,75&88)
	72 31927	2	Oil Drain Plug
	75 31950	1	Oil Seal


Ref #	Part Number	Qty	Description
81A	650745	1	Washer
81	30590A	1	Washer
82	34751	1	Governor Gear Ass'y.
83	35322	1	Governor Spool
86A	792028	3	Screw, 5/16-18 x 7/8"
86	650588	1	Screw, 1/4-20 x 2"
87	650451	8	Screw, 1/4-20 x 1"
88	32426	1	Spacer
89	650592	1	Flywheel Key
90A	730201	1	Trigger Pin Kit
90	610967	1	Flywheel (Incl. 90A)
92	650666	1	Washer
93	650594	1	Flywheel Nut
100	610906	1	Solid State Ignition
101	610118	1	Spark Plug Cover
101A	610750	1	Grommet
103	650661	2	Screw, 1/4-20 x 3/4"
108	29783	1	Crankshaft Pin
109	34692	1	Crankshaft Gear
119	34225A	1	* Cylinder Head Gasket
120	34775	1	Cylinder Head
121	730218	2	Valve Guide Kit (Incl. 2 of 122)
122	792035	2	Retaining Ring
125	33506	1	Exhaust Valve (Std.) (Incl. 151)
125	33646	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	33505	1	Intake Valve (Std.) (Incl. 151)
126	33645	1	Intake Valve (1/32" OS) (Incl. 151)
127	650691	6	Washer
128	650690	6	Belleville Washer
129	650692	4	Screw, 5/16-18 x 1-3/4"
130	650746	2	Screw, 5/16-18 x 1-3/8"
133C	650624	1	Screw, 5/16-24 x 9/16"
133	650890	1	Lock Washer, 5/16
133A	26073	1	Washer
134	32039	1	Shorting Clip
135	33657	1	Resistor Spark Plug (RL82C)
141	33481	4	* "O" Ring (Also Incl. in 401)
142	35475	2	Push Rod Tube
143	34754	1	Rocker Arm Housing
144	33484	3	* "O" Ring (Also Incl. in 401)
145	650168	3	Washer
146	32610A	3	Screw, 1/4-20 x 29/32"
147	33509	1	* "O" Ring (Also Incl. in 401)
148	34410	1	* "O" Ring (Also Incl. in 401)
149	33510	2	Valve Spring Cap
150	33507	2	Valve Spring
151	33508	2	Valve Spring Keeper
154	650755	1	Screw, 1/4-20 x 3/4"
155	33485	1	Rocker Arm
157	33486	2	Retaining Ring
158	33471	2	Push Rod
159	33487	1	* "O" Ring (Also Incl. in 401)
160	33488	1	Rocker Arm Housing
161	650756	2	Rocker Arm Stud
162	650864	1	Nut, 1/4-20
169	31958A	1	* Valve Cover Gasket (Also Incl. in 401)
170	33489	1	Breather Body
173	33490	1	Breather Tube

Ref #	Part Number	Qty	Description
174	30102	2	* Screw, 10-32 x 5/8" (Also Incl. in 40 1)
182	650378	2	Screw, Torx T-30, 5/16-18 x 1-1/8"
184	33476A	2	* Carburetor To Intake Pipe Gasket
185	33475	1	Intake Pipe
186	33478	1	Governor Link
203	33099	1	Compression Spring
204	650591	1	Screw, 10-24 x 2"
212	31966	1	Bushing
213	650597	1	Screw, 10-24 x 5/8"
216	31984A	1	R.P.M. Adjusting Lever
223	792028	2	Screw, 5/16-18 x 7/8"
239	35471	1	* Air Cleaner Gasket
242	35473	1	Air Cleaner Bracket
245	32008	1	Air Cleaner Filter
250	34193	1	Air Cleaner Cover
251	650513	1	Wing Nut, 1/4-20
260	33775A	1	Blower Housing
261A	650751	1	Screw, 1/4-20 x 7/16"
261	650752	1	Screw, 1/4-20 x 7/16"
264	651028	2	Screw, 10-24 x 1/2"
265	34284	1	Cylinder Head Cover
269	33515A	1	* Exhaust Gasket
275	32043B	1	Muffler
281	33013	1	Starter Bubble Cover
282	650701	1	Screw, 8-18 x 7/16"
286	33776	1	Starter Screen
287	27070	3	Washer
287A	650680	3	Screw, 1/4-20 x 1-1/2"
305	35574	1	Oil Fill Tube
307	35499	1	"O" Ring
310	35599	1	Dipstick (Incl. 307)
319A	8274	1	Lock Washer
319B	650595	1	Screw, 5/16-24 x 3/8"
324	610908	1	Terminal
324A	610408	2	Nut, 8-32
325	29443	1	Wire Clip
355	590452	1	Starter Handle
366A	32143	1	Muffler Nipple
367	650590	1	Nut
370B	35274	1	Instruction Decal
370A	35532	1	Name Decal
370	34346	1	Lubrication Decal
380	632485	1	Carburetor (Incl. 184)
392	32046	1	Starter Rope
393	31980	1	Starter Rope Pulley
400	33516G	1	* Gasket Set (Incl. items marked PK i n notes) Incl. part #'s 29673 (1), 30102 (2), 31950 (2), 31956B (1), 31958A (1), 31971 (2), 31972 (1), 32031 (1), 32599 (1), 33476A (2), 33481 (4), 33484 (3), 33487 (1), 33509 (1), 33515A (1), 34225A (1), 34302A (1), 34410 (1), 34641A (1), 35471 (1)
401	35075A	1	* "O" Ring Set (Also Incl. in 400) 30102 (2), 31958A (1), 33481(4), 33484 (3), 33487 (1), 33509 (1), 34410 (1)
409	31992	3	Spacer
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)
436A	650399	2	Screw, 10-32 x 5/8"
436	610965	1	Stator Plate Ass'y.
480	31971	2	* Shim Gasket (.004/.005) (See Repair M anual)

Ref #	Part Number	Qty	Description
481	31972	1	* Shim Gasket (.005/.007) (See Repair Manual)
482	32031	1	* Steel Spacer (.010) (See Repair Manual)

(Page 2 of 2)

IMAGE FILE: ENOH140.2

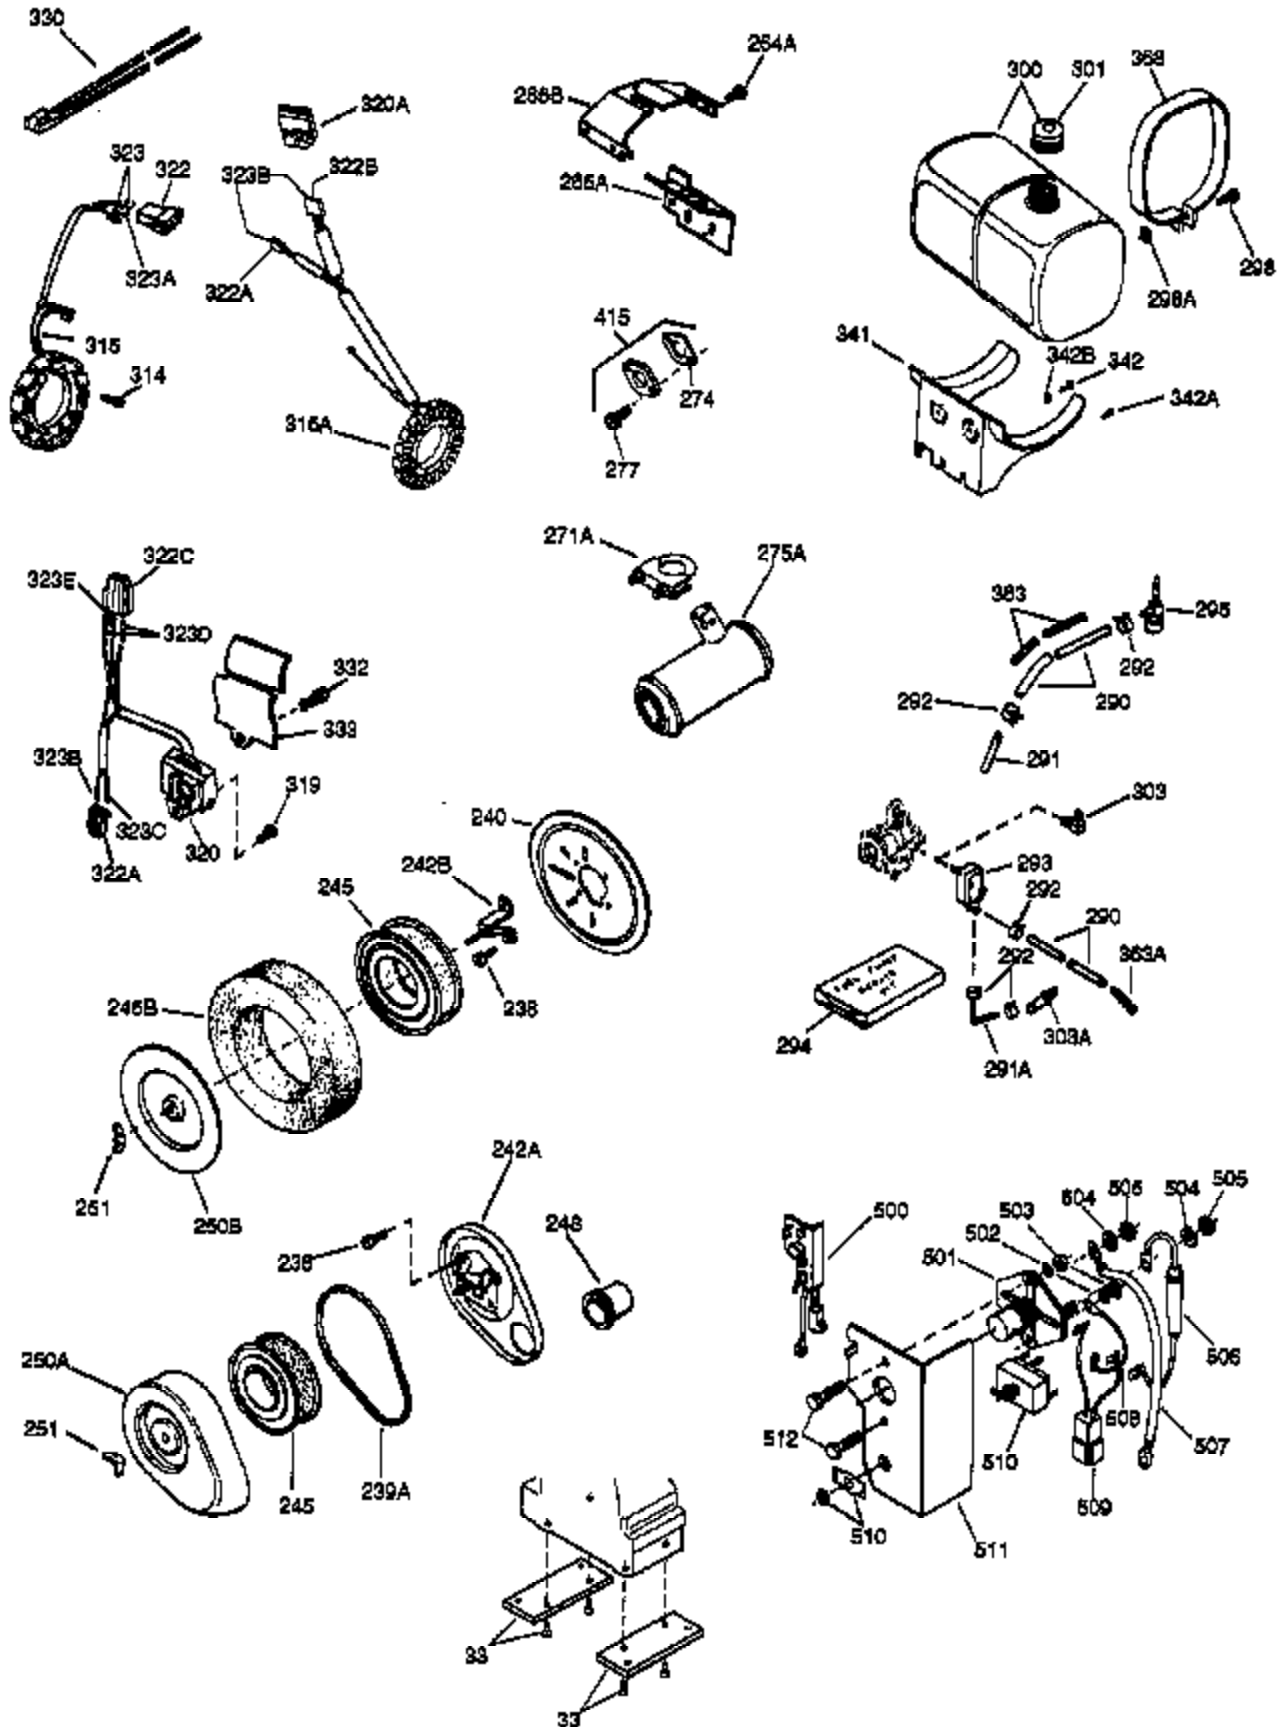

Ref #	Part Number	Qty	Description
239A	34197	1	Air Cleaner Gasket
245	32008	1	Air Cleaner Filter
248	34194A	1	Air Cleaner Tube
251	650513	1	Wing Nut, 1/4-20
261A	650751	1	Screw, 1/4-20 x 7/16"
269	33515A	1	* Exhaust Gasket
290	30962	1	Fuel Line
291	29774	1	Fuel Line
292	26460	4	Fuel Line Clamp
293	33715	1	Impulse Fuel Pump (Incl. 294)
294	33010	1	Impulse Fuel Pump Repair Kit
295	29683	1	Fuel Shut-Off Valve
298	650488	1	Screw, 1/4-20 x 1-1/4"
298A	650456	1	Lock Nut, 1/4-20
300	33979	1	Fuel Tank (Incl. 301)
301	33032	1	Fuel Cap
303	29634	1	Fuel Line Fitting
332	650736	1	Screw, 10-16 x 3/8"
333	34276	1	Cover Plate
341	33978	1	Fuel Tank Bracket
342B	650787	2	Belleville Washer
342A	650785	2	Screw, 5/16-18 x 5/8"
342	650786	2	Screw, 1/4-20 x 5/8"
355	590452	1	Starter Handle
363	34148	1	Fuel Line Spring
363A	34148	1	Fuel Line Spring
368	33980	2	Fuel Tank Strap