


(Page 1 of 2)

IMAGE FILE: ENOH140.2

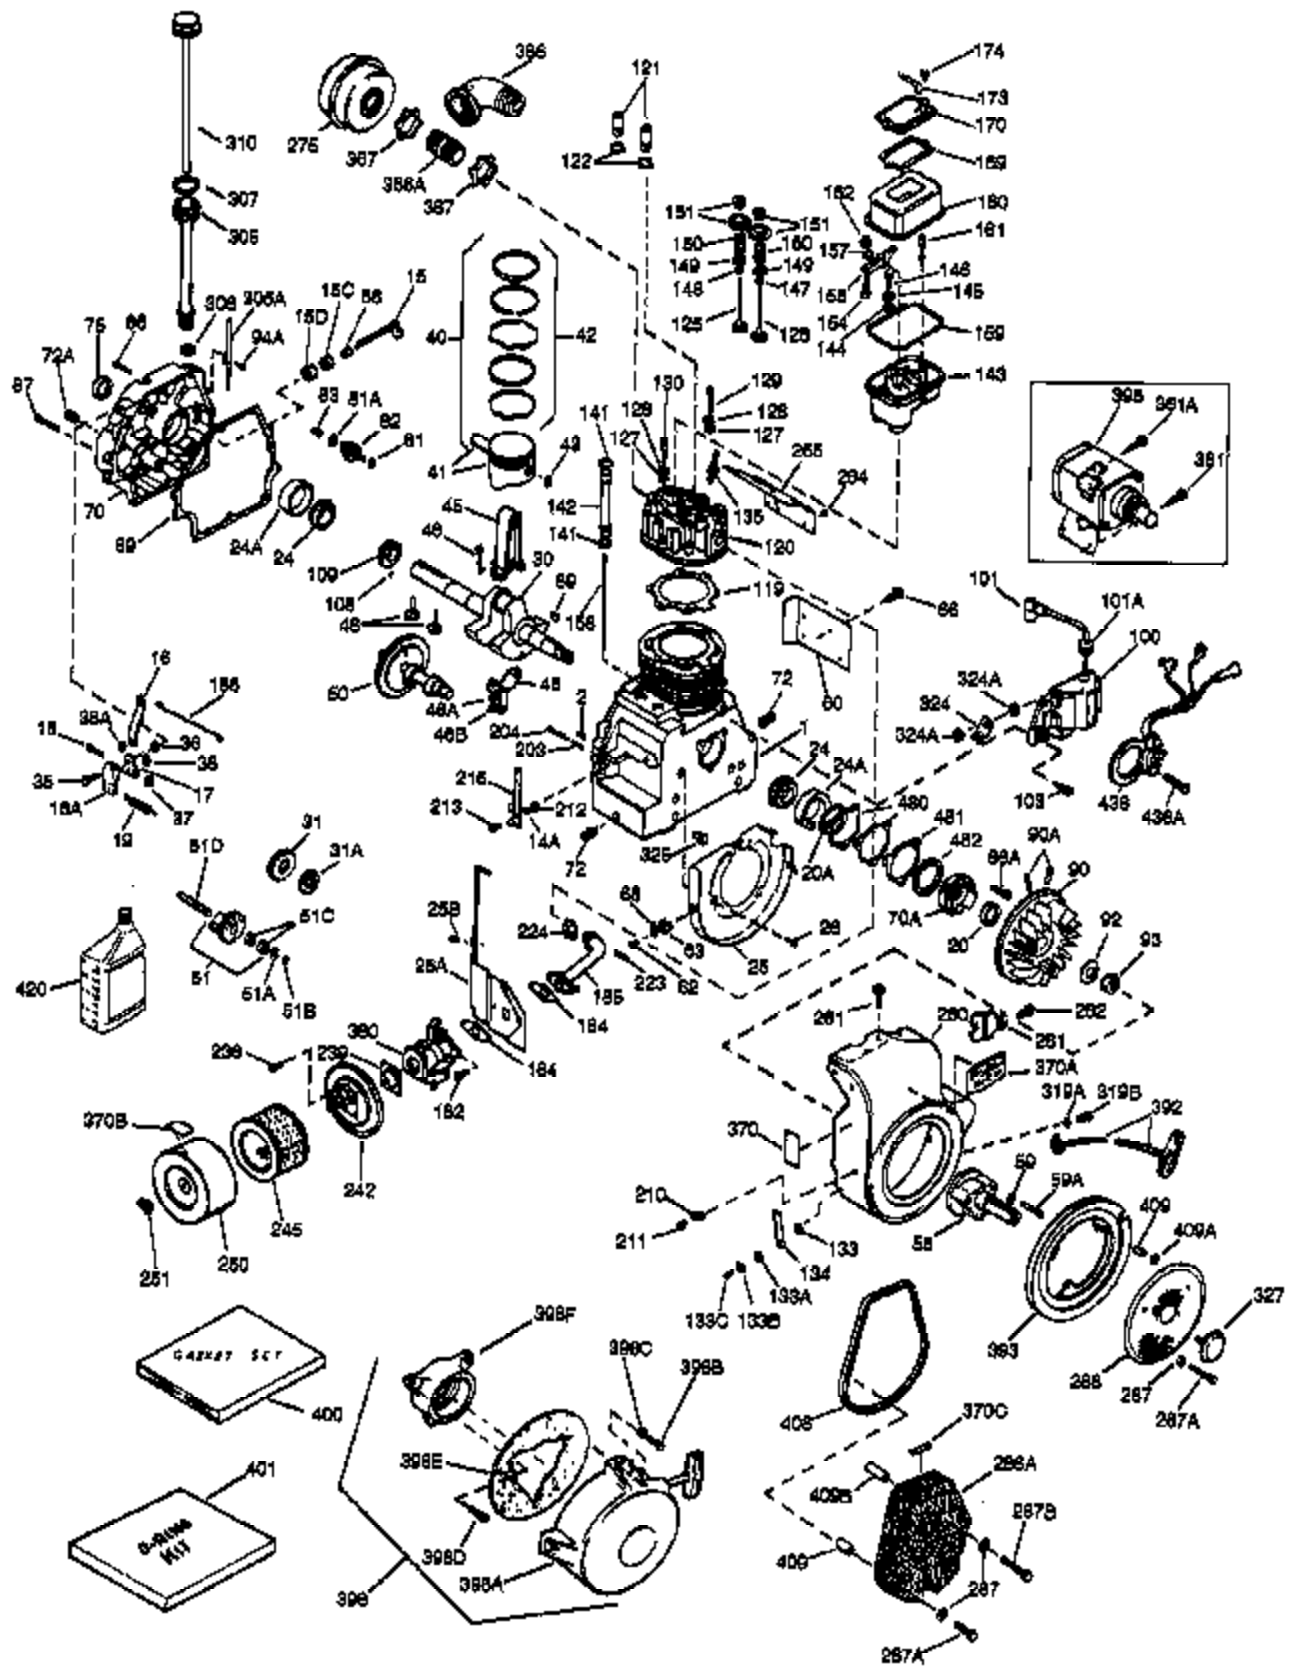


Ref #	Part Number	Qty	Description
	1 33823A	1	Cylinder (Incl. 2, 72 & 75)
	2 27652	2	Dowel Pin
	3 650797	1	Screw, 5/16-18 x 1/2"
	14A 28558	1	Washer
	15 32425	1	Governor Rod
	16A 31965	1	Governor Spring Plate
	16 31963	1	Governor Lever
	17 31964	1	Governor Lever Clamp
	18 650544	1	Screw, Torx T-25, 10-24 x 7/8"
	19 31967	1	Extension Spring
	20A 32599	1	* "O" Ring
	20 31950	1	* Oil Seal
	24A 31928	2	Bearing Cup
	24 31932	2	Tapered Roller Bearing
	25 32579	1	Blower Housing Baffle
	25B 650738	1	Screw, 1/4-20 x 5/8"
	25A 33477A	1	Air Baffle
	26 650561	3	Screw, 1/4-20 x 5/8"
	30 34278B	1	Crankshaft
	35 30312	1	Screw, 10-32 x 1/2"
	37 7975	1	Lock Nut, 10-24
	38A 650518	1	Washer
	38 29193	1	Retaining Ring
	40 34508	1	Piston, Pin & Ring Set (Std.)
	40 34509	1	Piston, Pin & Ring Set (.010" OS)
	40 34510	1	Piston, Pin & Ring Set (.020" OS)
	41 32001C	1	Piston & Pin Ass'y. (Std.) (Incl. 43)
	41 32002B	1	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	41 32003B	1	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	42 32004	1	Ring Set (Std.)
	42 32005	1	Ring Set (.010" OS)
	42 32006	1	Ring Set (.020" OS)
	43 31919	2	Piston Pin Retaining Ring
	45 33093A	1	Connecting Rod Ass'y. (Incl.46 - 46B)
	45 34383	1	Connecting Rod Ass'y.(.010" US)(Incl. 46-46B)
	45 34384	1	Connecting Rod Ass'y.(.020" US)(Incl. 46-46B)
	46A 26073	2	Washer
	46 32077	2	Connecting Rod Bolt
	46B 28264	2	Nut
	48 33472	2	Valve Lifter
	50 34752	1	Camshaft (MCR)
	60 33479	1	Blower Housing Extension
	69 31956B	1	* Cylinder Cover Gasket
	70A 32577	1	Cylinder Cover (See Ref. #'s 480-482)
	70 32685	1	Cylinder Cover (Incl. 15,20,38,72,88)
	72 31927	2	Oil Drain Plug
	75 31950	1	Oil Seal
	81A 650745	1	Washer
	81 30590A	1	Washer
	82 34751	1	Governor Gear Ass'y.
	83 35322	1	Governor Spool
	86 650588	1	Screw, 1/4-20 x 2"
	86A 792028	3	Screw, 5/16-18 x 7/8"
	87 650451	8	Screw, 1/4-20 x 1"
	88 32426	1	Spacer
	89 650592	1	Flywheel Key
	90 610909	1	Flywheel (Incl. 90A)
	90A 730201	1	Trigger Pin Kit

Ref #	Part Number	Qty	Description
92	650666	1	Washer
93	650594	1	Flywheel Nut
100	610906	1	Solid State Ignition
101	610118	1	Spark Plug Cover
101A	610750	1	Grommet
103	650661	2	Screw, 1/4-20 x 3/4"
108	29783	1	Crankshaft Pin
109	34692	1	Crankshaft Gear
119	34225A	1	* Cylinder Head Gasket
120	34775	1	Cylinder Head
121	730218	2	Valve Guide Kit (Incl. 2 of 122)
122	792035	2	Retaining Ring
125	33506	1	Exhaust Valve (Std.) (Incl. 151)
125	33646	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	33505	1	Intake Valve (Std.) (Incl. 151)
126	33645	1	Intake Valve (1/32" OS) (Incl. 151)
127	650691	6	Washer
128	650690	6	Belleville Washer
129	650692	4	Screw, 5/16-18 x 1-3/4"
130	650746	2	Screw, 5/16-18 x 1-3/8"
131	650752	1	Screw, 1/4-20 x 7/16"
135	33657	1	Resistor Spark Plug (RL82C)
141	33481	4	* "O" Ring (Also Incl. in 401)
142	35475	2	Push Rod Tube
143	34754	1	Rocker Arm Housing
144	33484	3	* "O" Ring (Also Incl. in 401)
145	650168	3	Washer
146	32610A	3	Screw, 1/4-20 x 29/32"
147	33509	1	* "O" Ring (Also Incl. in 401)
148	34410	1	* "O" Ring (Also Incl. in 401)
149	33510	2	Valve Spring Cap
150	33507	2	Valve Spring
151	33508	2	Valve Spring Keeper
154	650756	2	Rocker Arm Stud
155	33485	1	Rocker Arm
157	33486	2	Retaining Ring
158	33471	2	Push Rod
159	33487	1	* "O" Ring (Also Incl. in 401)
160	33488	1	Rocker Arm Housing
161	650755	1	Screw, 1/4-20 x 3/4"
162	650864	1	Nut, 1/4-20
169	31958A	1	* Valve Cover Gasket (Also Incl. in 401)
170	33489	1	Breather Body
173	33490	1	Breather Tube
174	30102	2	* Screw, 10-32 x 5/8" (Also Incl. in 40 1)
182	650378	2	Screw, Torx T-30, 5/16-18 x 1-1/8"
184	33476A	2	* Carburetor To Intake Pipe Gasket
185	33475	1	Intake Pipe
186	33478	1	Governor Link
203	33099	1	Compression Spring
204	650591	1	Screw, 10-24 x 2"
210	27793	1	Conduit Clip
211	28942	1	Screw, 10-32 x 3/8"
212	31966	1	Bushing
213	650597	1	Screw, 10-24 x 5/8"
216	31984A	1	R.P.M. Adjusting Lever
223	650971	2	Screw, Torx T-30, 5/16-18 x 7/8"
238	650399	4	Screw, 10-32 x 5/8"

Ref #	Part Number	Qty	Description
239	35471	1	* Air Cleaner Gasket
239	34197	1	Air Cleaner Gasket
242	35473	1	Air Cleaner Bracket
245	32008	1	Air Cleaner Filter
250	34193	1	Air Cleaner Cover
251	650513	1	Wing Nut, 1/4-20
260	34195B	1	Blower Housing
261A	650751	1	Screw, 1/4-20 x 7/16"
264	650650	2	Screw, 10-16 x 3/8"
265	33495	1	Cylinder Head Cover
269	33515A	1	* Exhaust Gasket
275	32043B	1	Muffler
286	33776	1	Starter Screen
287	27070	3	Washer
287A	650680	3	Screw, 1/4-20 x 1-1/2"
298B	650456	2	Lock Nut
305	32352	1	Oil Fill Tube
306	29673	1	* "O" Ring
307	29985	1	"O" Ring
310	33068	1	Dipstick (Incl. 306)
319A	8274	1	Lock Washer
324	610908	1	Terminal
324A	610408	2	Nut, 8-32
339	650787	2	Washer
340	33978	1	Fuel Tank Bracket
355	590701	1	Starter Handle
361	650781	2	Screw, 5/16-18 x 11/16"
366A	32143	1	Muffler Nipple
367	650590	1	Nut
370A	35532	1	Name Decal
370	36261	1	Instruction Decal
370B	35274	1	Instruction Decal
380	632485	1	Carburetor (Incl. 184)
392	32046	1	Starter Rope
393	31980	1	Starter Rope Pulley
395	33835	1	Electric Starter Motor (12 Volt)
400	33516G	1	* Gasket Set (Incl. items marked PK in notes) Incl. part #'s 29673 (1), 30102 (2), 31950 (2), 31956B (1), 31958A (1), 31971 (2), 31972 (1), 32031 (1), 32599 (1), 33476A (2), 33481 (4), 33484 (3), 33487 (1), 33509 (1), 33515A (1), 34225A (1), 34302A (1), 34410 (1), 34641A (1), 35471 (1)
401	35075A	1	* "O" Ring Set (Also Incl. in 400) 30102 (2), 31958A (1), 33481(4), 33484 (3), 33487 (1), 33509 (1), 34410 (1)
409	31992	3	Spacer
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)
480	31971	2	* Shim Gasket (.004/.005) (See Repair Manual)
481	31972	1	* Shim Gasket (.005/.007) (See Repair Manual)
482	32031	1	* Steel Spacer (.010) (See Repair Manual)

(Page 2 of 2)

IMAGE FILE: ENOH140.2

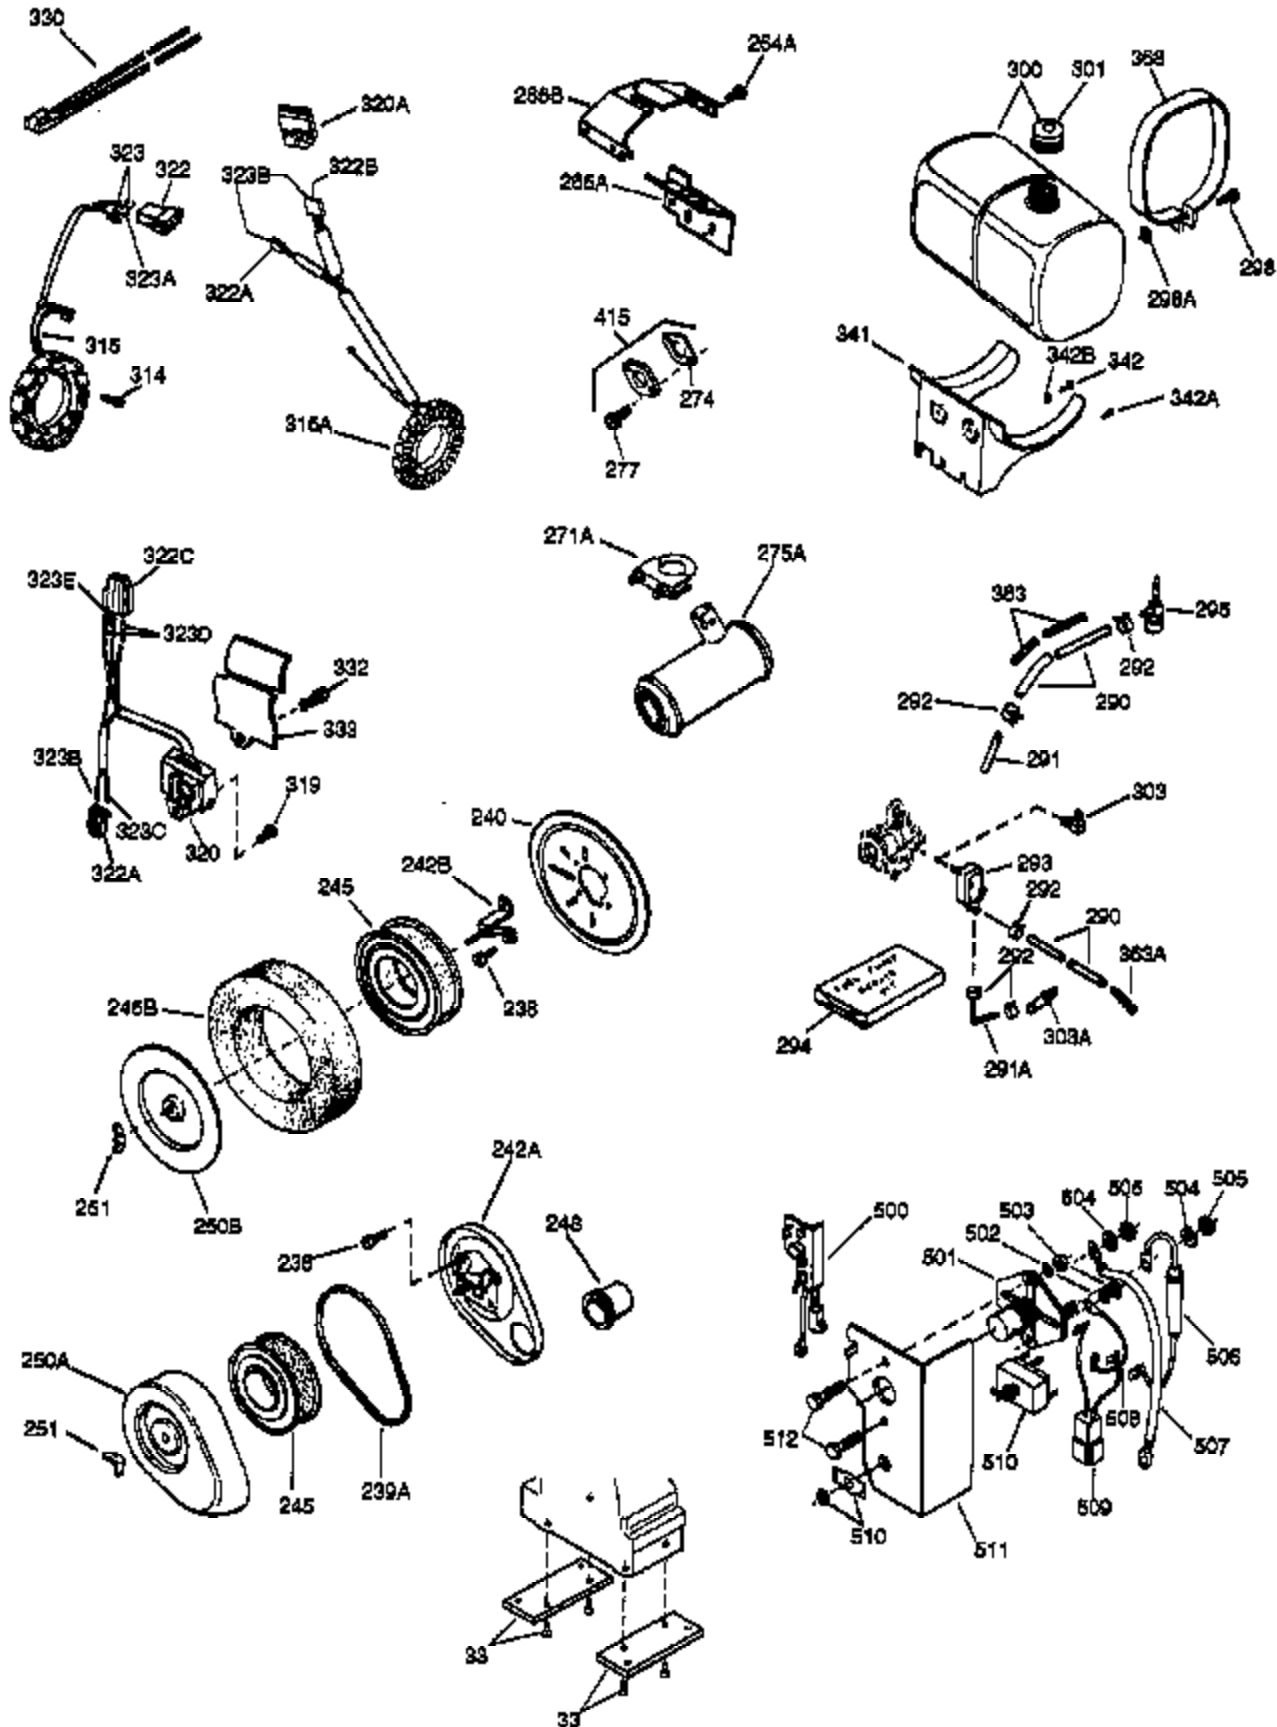

Ref #	Part Number	Qty	Description
	3 650797	1	Screw, 5/16-18 x 1/2"
	131 650752	1	Screw, 1/4-20 x 7/16"
	238 650399	4	Screw, 10-32 x 5/8"
	245 32008	1	Air Cleaner Filter
	248 34194A	1	Air Cleaner Tube
	251 650513	1	Wing Nut, 1/4-20
	261A 650751	1	Screw, 1/4-20 x 7/16"
	269 33515A	1	* Exhaust Gasket
	290 29774	1	Fuel Line
	291 30962	1	Fuel Line
	292 26460	4	Fuel Line Clamp
	293 35807	1	Pulse Pump
	294 35791	1	Pulse Pump Repair Kit
	295 29683	1	Fuel Shut-Off Valve
	298A 650488	2	Screw, 1/4-20 x 1-1/4"
	298B 650456	2	Lock Nut
	300 33979	1	Fuel Tank (Incl. 301)
	301 33032	1	Fuel Cap
	303 29634	2	Fuel Fitting
	314 650521	2	Screw, 10-32 x 1-1/8"
	315 610902	1	Alternator Coil (20 Amp) (Incl. 323)
	319 650595	1	Screw, 5/16-24 x 3/8"
	319 30063	1	Screw, Torx T-30, 1/4-20 x 1/2"
	320 610996	1	Regulator
	323 611201	1	Connector Body
	339 650787	2	Washer
	340 33978	1	Fuel Tank Bracket
	342 650786	2	Screw, 1/4-20 x 5/8"
	342A 650785	2	Screw, 5/16-18 x 5/8"
	355 590701	1	Starter Handle
	368 33980	2	Fuel Tank Strap
	509 34393	1	Alternator Adapter Cord