


	Part Number	Qty	
2 2 2 2 2 2 4	33707A 31927 28483 9556 28534 27652 33390B		Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re) Pipe Plug, 3/8-18 sq. head (Use as re quired) Pipe Plug (3/8-18 hex countersunk) (A s req.) Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local) Pipe Plug (1/8-27 sq. hd.) (Use as re quired) Pipe Plug(1/8-27 hex c/sunk headless) (As req) Pin, Dowel Crankshaft (Incl. 6 thru 9) NOTE: When using this crankshaft to repair older units equippedwith straight cut cam and governor gears, it will be necessary to order 34751 helical governor gear assembly and 34752 helical camshaft in order to the complete the repair.
7 8 9 11 11 11 11 11 11 11 11 11 11 11 11 1	29783 34692 31932 31928 34511 34512 34513 32238B 32239B 32240B 31919 32241 32242 32243 33093A 34383 34384 32077 26073 28264 34752 33472 33471 33505 33645 33506 33645 33506 33646 33507 33508 33509 34410 33510 34751 650745 35479 30590A 31948		
31 32 33 34 35 36 37	31956B 32580A 31950 650451 650588 32425 32426 29193		* Gasket, Cylinder cover Cylinder Cover Assy.(Incl.2,33,36,37 & 38) * Seal, Oil Screw, 1/4-20 x 1" Screw, 1/4-20 x 2" Rod Assy., Governor Spacer, Governor rod Ring, Retaining

Ref #	Part Number	Qty	Description
39	650736		Screw, 10-16 x 3/8"
40	33495		Cover, Cylinder head
41	34225A		* Gasket, Cylinder head
42	34753		Head, Cylinder
45	33657		Spark Plug (L-82C)
46A	650691		Washer, Flat
46	650690		Washer, Belleville
47A	650746		Screw, 5/16-18 x 1-3/8"
	650692		Screw, 5/16-18 x 1-3/4"
	730218		Valve Guide Kit (Incl. 49)
	792035		Ring, Retaining
	33515A		* Gasket, Intake pipe
	33475		Pipe, Intake
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028		Screw, 5/16-18 x 7/8"
	33476A		* Gasket, Carburetor
	33477A		Baffle, Air cleaner
	792075		Nut, Lock 5/16-24 (Used in early prod uction)
	33478		Link, Governor lever-to-throttle leve r
	31963		Lever, Governor
	31964		Clamp, Governor lever
	650518		Lockwasher, No. 10 E.T.
	30312		Screw, 10-32 x 1/2"
	650544		
	7975		Screw, Torx T-25, 10-24 x 7/8"
			Nut, 10-24 Plate Covernor spring
	31965		Plate, Governor spring
	31984A		Lever Assy., Control
	28558		Washer, Wave
	31966		Bushing, Governor lever
	650597		Screw, 10-24 x 5/8"
	31967		Spring, Governor
	650591		Screw, 10-24 x 2"
	33099		Spring
	32599		"O" Ring (Incl. in 251)
	650666		Washer, Lock
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	650592		Key, Flywheel
	730201		Trigger Pin Kit (Use as required)
	610967		Flywheel (w/ring gear)
	650594		Nut, Flywheel
	610906		Solid State Magneto (Incl. 158 thru 1 61)
	650661		Screw, 1/4-20 x 3/4"
	33479		Extension, Blower housing
	30063		Screw, 1/4-20 x 1/2"
	650751		Screw, 1/4-20 x 7/16"
84	33775A		Blower Hsg.(Incl.218A,219)(For elec.s tarter)
85	8274		Washer, Lock
86A	650624		Screw, 5/16-24 x 9/16"
86	650595		Screw, 5/16-24 x 3/8"
87	650752		Screw, 1/4-20 x 7/16"
88	35475		Tube, Push rod
	33481		* "O" Ring (Also Incl. in 251)
	34754		Housing, Rocker arm
	33013		Cover, Starter bubble
	650701		Screw, 8-18 x 7/16"
	33484		* "O" Ring (Also Incl. in 251)
	650168		Washer, Flat

Ref #	Part Number Qty	/ Description
96	32610A	Screw, 1/4-20 x 29/32"
97	33485	Arm, Rocker
98	33486	Ring, Retaining
	650755	Screw, 1/4-20 x 3/4"
	650864	Nut, Hex, 1/4-20
	650756	Stud, Rocker arm
	33487	
		* "O" Ring (Also Incl. in 251)
	33488	Cover, Rocker arm
	31958A	* Gasket, Breather (Also Incl. in 251)
	33489	Body Assy., Breather
	33490	Tube, Breather
107	30102	* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
108	650738	Screw, 1/4-20 x 5/8"
111	35471	* Gasket, Air cleaner
	35472	Bracket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	32008	Element, Air cleaner
	32810	Cover, Air cleaner
	650513	Nut, Wing
	31992	Spacer, Screen
	33776	Screen, Pulley
	650680	Screw, 1/4-20 x 1-1/2"
123	27070	Washer, Lock
125	650590	Nut, Conduit
126	32043B	Muffler
	32143	Nipple, Exhaust
	32577	Cover, Cylinder NOTE: Determine the gap between the cover
		and the machined surface on the cylinder, which can be from .001" up to .007", in which case no shim gaskets will be required. Use of gaskets must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eli
147	792028	Screw, 5/16-18 x 7/8"
	650399	Screw, 10-32 x 5/8"
	610965	Stator Plate Assy.
	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
155	515/1	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
156	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
150	31312	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
157	32031	* Spacer Steel (010 thick) NOTE: Determine the gen
157	32031	* Spacer, Steel (.010 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used as re
1=0	040440	·
	610118	Cover, Spark plug
	610750	Grommet, Lead wire
	610408	Nut, 8-32
161	610908	Terminal, Female

Ref #	Part Number Qty	Description
164	33356	Terminal
165	650760	Screw, 8-32 x 3/8"
166	28545	Grommet, Plastic
167	650890	Washer, Lock
167A	26073	Washer, Flat
168	32039	Switch, Stop
169A	27793	Clip, Conduit
170	28942	Screw, 10-32 x 3/8"
171	29634	Fitting, Fuel line
189	33069	Dipstick (Incl. 190)
190	29673	* Gasket, Oil filler
193	29443	Clip, Wire
244A	34768	Decal, Name
244B	31752	Decal, Air cleaner
244	34346	Decal, Instruction
246	631687	Valve, Seat & Spring Assy.
247	632197	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A, page 160 for breakdown) (Refer to Division 5, Section D for breakdown)
250	33516G	* Gasket Set (Incl. items marked *)
251	35075	"O" Ring Kit (Incl. Nos. items marked +)

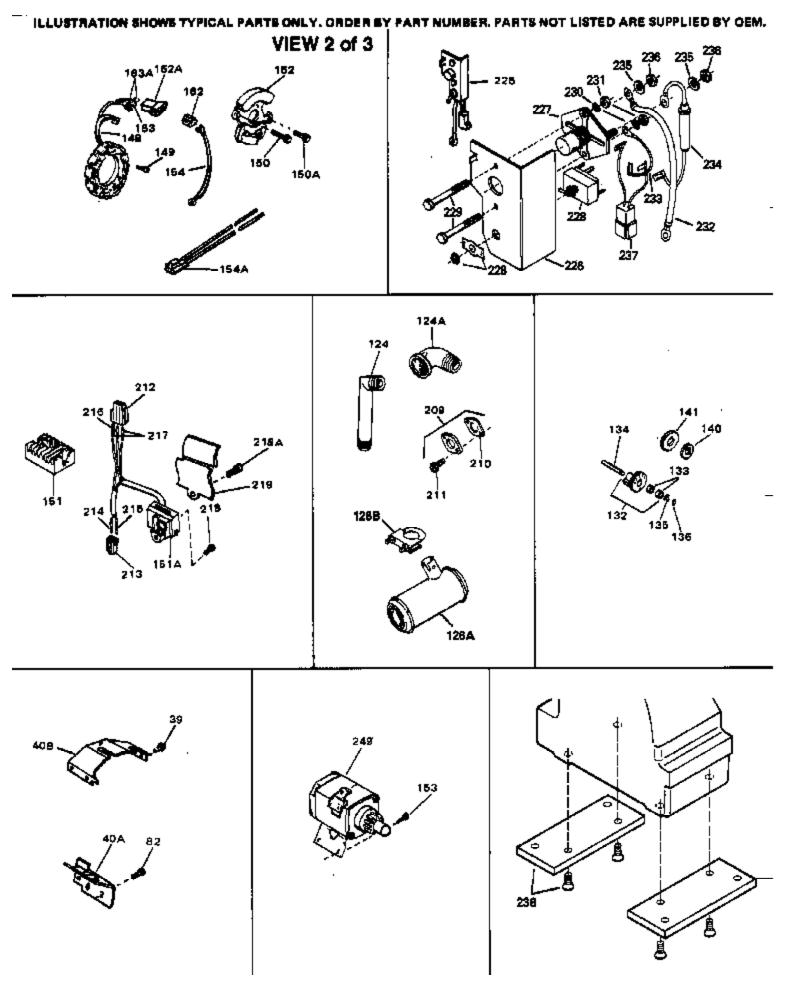


Ref #	Part Number	Qty Description
39	650736	Screw, 10-16 x 3/8"
82	30063	Screw, 1/4-20 x 1/2"
126A	35731	Muffler (Incl. 126B)
141		Gear, Counterbalance weight (Straight teeth) (For replacement see Ref. 132. Order correct kit for your enginemodel number.)
153	792028	Screw, 5/16-18 x 7/8"(Use w/32817 str .motor)
153	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
209	730178	Ech.Adapter Kit (Incl.210 & 211)(As r equired)
210	34102B	Gasket, Exhaust (Use as required)
211	30196	Screw, 5/16-18 x 3/4" (Use as require d)
238	730212	Adapter Plate Kit (Optional) NOTE: If you are having mounting problems in using a HH100 thru0H180 inplace of a large frame competitivebrand, we would like to call your attention to 730212 adapter plate kit. The kit converts the bottom mounting system found on HH100 thru 0H180 to a top mounting sys

145

143

1710 196

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

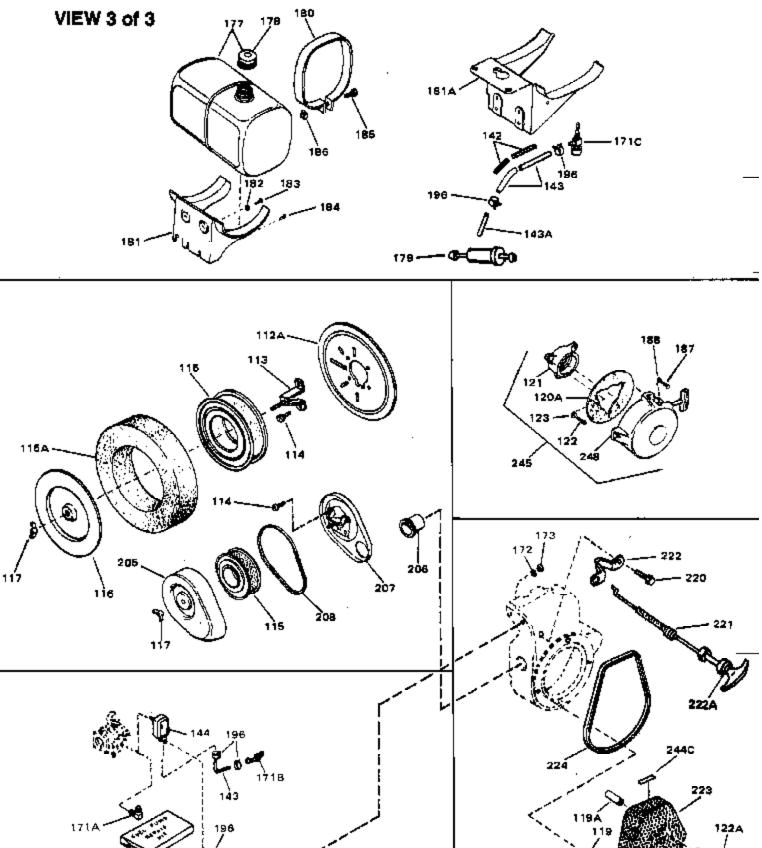

122

Ref #	Part Number Qty	Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
119	31992	Spacer, Screen
122	650680	Screw, 1/4-20 x 1-1/2"
123	27070	Washer, Lock
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
178	410144B	Fuel Cap (White Plastic)(Std)(As required)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
196	26460	Clamp, Fuel line (Use as required)
245	730134	Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)