


	B	<u> </u>	
	Part Number	Qty	Description
	33707A		Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re)
2	31927		Pipe Plug, 3/8-18 sq. head (Use as re quired)
2	28483		Pipe Plug (3/8-18 hex countersunk) (A s req.)
2			Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local)
	9556		
			Pipe Plug (1/8-27 sq. hd.) (Use as re quired)
	28534		Pipe Plug(1/8-27 hex c/sunk headless) (As req)
	27652		Pin, Dowel
5	34019A		Crankshaft (Incl. 6 thru 9, 140 & 141) NOTE: When
			using this crankshaft to repair older units equippedwith
			straight cut cam and governor gears, it will be necessary to
			order 34751 helical governor gear assembly and 34752
			helical camshaft in order to the complete the repair.
6	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft (Straight)
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
11	34512		Piston, Pin & Ring Set (.010" OS)
11	34513		Piston, Pin & Ring Set (.020" OS)
11A	32238B		Piston & Pin Ass'y. (Std.)(3-1/2")(In cl.12)
	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 12)
	32240B		Piston & Pin Ass'y. (.020 " OS) (Incl . 12)
	31919		
			Ring, Piston pin retaining
	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (.010" OS)
	32243		Ring Set (.020" OS)
14	33093A		Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17)
14	34383		Connecting Rod Assy.(.010" US)(Incl.1 5,16,17)
	34384		Connecting Rod Assy. (.020" US) (Incl.1 5,16.17)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
	28264		•
			Nut Assy.
	33470		Camshaft (MCR) (Straight)
	33472		Lifter, Valve
	33471		Rod, Push
	33505		Intake Valve (Std.)
21	33645		Intake Valve (1/32" OS)
22	33506		Exhaust Valve (Std.)
22	33646		Exhaust Valve (1/32" OS)
	33507		Spring, Valve
	33508		Retainer & Cap Set, Keeper valve
	34410		* "O" Ring (Exhaust only) (Also Incl. i n 251)
	33509		* "O" Ring (Intake only) (Also Incl. in 251)
	33510		
			Cap, Valve
	33473		Governor Gear & Shaft Ass'y. (Straigh t)
	650745		Washer, Flat
	35479		Washer, Flat (Use with 35322 spool)
29	30590A		Washer, Flat
30	31948		Spool, Governor
	31956B		* Gasket, Cylinder cover
	34002A		Cylinder Cover Ass'y. (Incl. 2, 33 & 134)
	31950		* Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650492		Screw, 1/4-20 x 2-1/4"
	32425		Rod Assy., Governor
	32426		Spacer, Governor rod
38	29193		Ring, Retaining

	Part Number Qty	
	650687	Screw, 10-32 x 5/16"
40	33495	Cover, Cylinder head
41	34225A	* Gasket, Cylinder head
42	33465	Head, Cylinder
	31980	Pulley, Starter
	32046	Rope Assy., Starter
	33657	Spark Plug (L-82C)
	650691	
		Washer, Flat
	650690	Washer, Belleville
	650746	Screw, 5/16-18 x 1-3/8"
	650692	Screw, 5/16-18 x 1-3/4"
	730218	Valve Guide Kit (Incl. 49)
49	792035	Ring, Retaining
50	33515A	* Gasket, Intake pipe
51	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
	33477A	Baffle, Air cleaner
	792075	Nut, Lock 5/16-24 (Used in early prod uction)
	33478	Link, Governor lever-to-throttle leve r
	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
61	30312	Screw, 10-32 x 1/2"
62	650544	Screw, Torx T-25, 10-24 x 7/8"
63	7975	Nut, 10-24
	31965	Plate, Governor spring
	31984A	Lever Assy., Control
	28558	Washer, Wave
	31966	Bushing, Governor lever
	650597	
		Screw, 10-24 x 5/8"
	31967	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	Spring
	32599	"O" Ring (Incl. in 251)
73	650666	Washer, Lock
74	32579	Baffle, Blower housing
75	650561	Screw, 1/4-20 x 5/8"
76	650592	Key, Flywheel
	730201	Trigger Pin Kit (Use as required)
	610909	Flywheel
	650594	Nut, Flywheel
	610906	-
		Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	30063	Screw, 1/4-20 x 1/2"
	650751	Screw, 1/4-20 x 7/16"
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
85A	8274	Washer, Lock
85	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	650595	Screw, 5/16-24 x 3/8"
	650752	Screw, 1/4-20 x 7/16"
	35475	Tube, Push rod
	33481	
69		* "O" Ring (Also Incl. in 251)
00		
	34754 33484	Housing, Rocker arm * "O" Ring (Also Incl. in 251)

Ref #	Part Number Qty	Description
95	650168	Washer, Flat
96	32610A	Screw, 1/4-20 x 29/32"
97	33485	Arm, Rocker
98	33486	Ring, Retaining
99	650755	Screw, 1/4-20 x 3/4"
	650864	Nut, Hex, 1/4-20
	650756	Stud, Rocker arm
	33487	* "O" Ring (Also Incl. in 251)
	33488	Cover, Rocker arm
	31958A	* Gasket, Breather (Also Incl. in 251)
	33489	Body Assy., Breather
	33490	Tube, Breather
	30102	* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
	650738	Screw, 1/4-20 x 5/8"
	35471	* Gasket, Air cleaner
	35472	Bracket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	32008	Element, Air cleaner
116A	32810	Cover, Air cleaner
117	650513	Nut, Wing
119	31992	Spacer, Screen
120	33776	Screen, Pulley
122	650680	Screw, 1/4-20 x 1-1/2"
	27070	Washer, Lock
	650744	Screw, 10-24 x 7/8"
	33467	Tube extension, Oil fill
	32577	Cover, Cylinder NOTE: Determine the gap between the cover
	02011	and the machined surface on the cylinder, which can be
		•
		from .001" up to .007", in which case no shim gaskets will be
		required. Use of gaskets must be limited to a combined total
		of .010" thick. Steel spacersmust be used as required to eli
147	792028	Screw, 5/16-18 x 7/8"
	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
156	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
157	32031	* Spacer, Steel (.010 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used as re
158	610118	Cover, Spark plug
	610750	Grommet, Lead wire
	610408	Nut, 8-32
	610908	Terminal, Female
	27793	Clip, Conduit
	28942	•
170	2UJH2	Screw, 10-32 x 3/8"

Ref #	Part Number Qtv	Description
	33069	Dipstick (Incl. 190)
190	29673	* Gasket, Oil filler
244A	550223	Decal, Name
244A	32676	Decal, Solid state
244	34346	Decal, Instruction
244B	31752	Decal, Air cleaner
246	631687	Valve, Seat & Spring Assy.
247	631754	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A, page 124 for breakdown)
	33516G 35075	* Gasket Set (Incl. items marked *) "O" Ring Kit (Incl. Nos. items marked +)

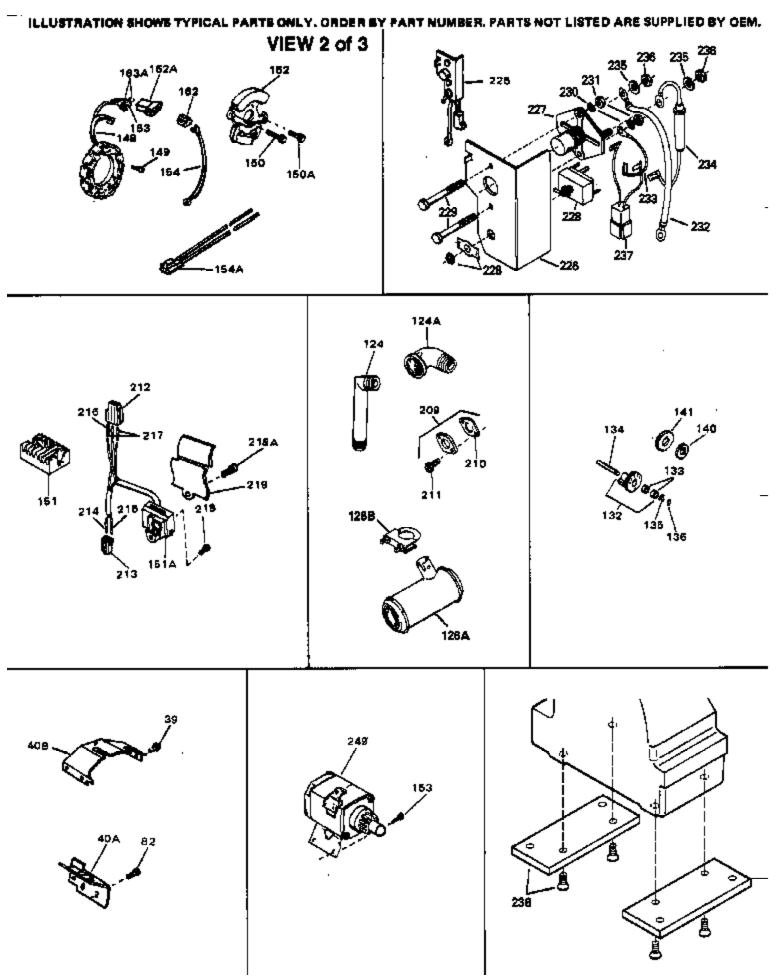

		Description
	650687	Screw, 10-32 x 5/16"
	30063	Screw, 1/4-20 x 1/2"
126A	35731	Muffler (Incl. 126B)
132	33965	Counterbalance Weight Ass'y. (Helical teeth) (Incl. 2 of 133)
133	33501	Bearing, Needle
	33502	Shaft, Counterbalance
135	33503	Washer, Thrust
	792017	Ring, Retaining
140	33499	Spacer
141	33963	Gear, Counterbalance weight (Helical teeth)
141		Gear, Counterbalance weight (Straight teeth) (For
		replacement see Ref. 132. Order correct kit for your
		enginemodel number.)
148	610902	Alt.Coil Ass'y. (Incl.162,163,163A) (20 amp)
	650521	Screw, 10-32 x 1-1/8"
	610907A	Regulator (20 Amp)(Incl.151A, 154A & 218)
	792028	Screw, 5/16-18 x 7/8"(Use w/32817 str .motor)
	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
	610903	Connector, Flat
	610904	Terminal
	610905	Terminal
	730178	Ech.Adapter Kit (Incl.210 & 211)(As r equired)
	34102B	Gasket, Exhaust (Use as required)
211	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	730212	Adapter Plate Kit (Optional) NOTE: If you are having
		mounting problems in using a HH100 thru0H180 inplace of a
		large frame competitivebrand, we would like to call your
		attention to 730212 adapter plate kit. The kit converts the
		bottom mounting system found on HH100 thru 0H180 to a
		top mounting sys
040	22025	
249	33835	Electric Starter Motor (12-Volt) (Refer to Division 5, Section
		D for breakdown)

117

1714

145

44


143

196

171B

710 196

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

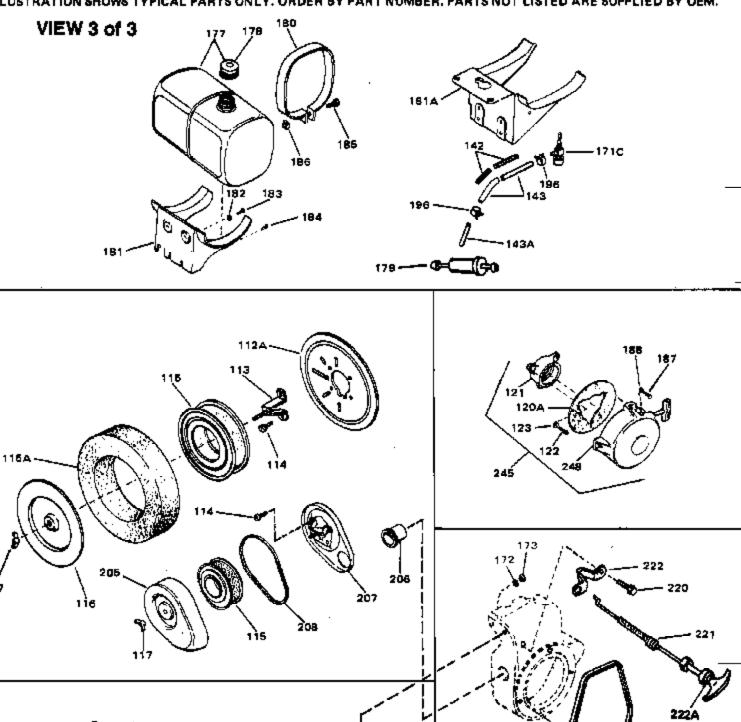

244C

223

122A

22Á

119Á

122

Page 8 of 9

Ref #	Part Number Qty	Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
119	31992	Spacer, Screen
122	650680	Screw, 1/4-20 x 1-1/2"
123	27070	Washer, Lock
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
144	32959	Pump, Impulse fuel
145	33010	Repair Kit, Impulse fuel pump
171B	32958	Fitting, Fuel pump
178	410144B	Fuel Cap (White Plastic)(Std)(As required)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
	26460 730134	Clamp, Fuel line (Use as required) Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)

Page 9 of 9