


		~	
Ref #	Part Number	Qty	Description
1	33707A		Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re)
2	31927		Pipe Plug, 3/8-18 sq. head (Use as re quired)
	28483		
			Pipe Plug (3/8-18 hex countersunk) (A s req.)
2			Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local)
2	9556		Pipe Plug (1/8-27 sq. hd.) (Use as re quired)
	28534		Pipe Plug(1/8-27 hex c/sunk headless) (As req)
	27652		Pin, Dowel
5	33393A		Crankshaft (Incl. 6 thru 9) NOTE: When using this
			crankshaft to repair older units equipped with straight cut cam
			and governor gears, it will be necessary to order 34751 helical
			governor gear assembly and 34752 helical camshaft in order
			to the complete the repair.
C	20702		Din Crankahaft agar
	29783		Pin, Crankshaft gear
7	31931		Gear, Crankshaft (Straight)
8	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32238B		Piston & Pin Ass'y. (Std.)(3-1/2")(In cl.12)
	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 12)
11A	32240B		Piston & Pin Ass'y. (.020 " OS) (Incl . 12)
	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512		Piston, Pin & Ring Set (.010" OS)
	34513		Piston, Pin & Ring Set (.020" OS)
12	31919		Ring, Piston pin retaining
13	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (.010" OS)
	32243		Ring Set (.020" OS)
	33093A		Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17)
14	34383		Connecting Rod Assy.(.010" US)(Incl.1 5,16,17)
14	34384		Connecting Rod Assy. (.020" US) (Incl.1 5,16.17)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
	28264		Nut Assy.
18	33470		Camshaft (MCR) (Straight)
19	33472		Lifter, Valve
	33471		Rod, Push
	33505		Intake Valve (Std.)
21	33645		Intake Valve (1/32" OS)
22	33506		Exhaust Valve (Std.)
	33646		Exhaust Valve (1/32" OS)
	33507		Spring, Valve
	33508		Retainer & Cap Set, Keeper valve
	34410		* "O" Ring (Exhaust only) (Also Incl. i n 251)
25	33509		* "O" Ring (Intake only) (Also Incl. in 251)
	33510		Cap, Valve
	33473		•
			Governor Gear & Shaft Ass'y. (Straigh t)
	650745		Washer, Flat
29	35479		Washer, Flat (Use with 35322 spool)
	30590A		Washer, Flat
	31948		Spool, Governor
			•
	31956B		* Gasket, Cylinder cover
32	32580A		Cylinder Cover Assy.(Incl.2,33,36,37 & 38)
33	31950		* Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650588		Screw, 1/4-20 x 2"
	32425		Rod Assy., Governor
37	32426		Spacer, Governor rod
38	29193		Ring, Retaining
			<u>.</u>

	Part Number Qty	
	650736	Screw, 10-16 x 3/8"
	33495	Cover, Cylinder head
	34225A	* Gasket, Cylinder head
	33465	Head, Cylinder
	33657	Spark Plug (L-82C)
	650690	Washer, Belleville
46A	650691	Washer, Flat
47	650692	Screw, 5/16-18 x 1-3/4"
47A	650746	Screw, 5/16-18 x 1-3/8"
48	730218	Valve Guide Kit (Incl. 49)
49	792035	Ring, Retaining
50	33515A	* Gasket, Intake pipe
51	33475	Pipe, Intake
52	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
53	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
	33477A	Baffle, Air cleaner
	792075	Nut, Lock 5/16-24 (Used in early prod uction)
	33478	Link, Governor lever-to-throttle leve r
	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
	650544	Screw, Torx T-25, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
	31984A	Lever Assy., Control
	28558	Washer, Wave
	31966	Bushing, Governor lever
	650597	Screw, 10-24 x 5/8"
	31967	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	
	32599	Spring
	650666	"O" Ring (Incl. in 251) Washer, Lock
	32579	Washer, Lock
		Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	650592	Key, Flywheel Trigger Dia Kit (Llos es reguired)
	730201	Trigger Pin Kit (Use as required)
	610909	Flywheel
	650594	Nut, Flywheel
	610906	Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	30063	Screw, 1/4-20 x 1/2"
	650751	Screw, 1/4-20 x 7/16"
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
	8274	Washer, Lock
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	650595	Screw, 5/16-24 x 3/8"
	650752	Screw, 1/4-20 x 7/16"
	35475	Tube, Push rod
	33481	* "O" Ring (Also Incl. in 251)
	34754	Housing, Rocker arm
94	33484	* "O" Ring (Also Incl. in 251)
95	650168	Washer, Flat
96	32610A	Screw, 1/4-20 x 29/32"


	Part Number	Qty	Description
	33485		Arm, Rocker
	33486		Ring, Retaining
99	650755		Screw, 1/4-20 x 3/4"
100	650864		Nut, Hex, 1/4-20
101	650756		Stud, Rocker arm
102	33487		* "O" Ring (Also Incl. in 251)
103	33488		Cover, Rocker arm
	31958A		* Gasket, Breather (Also Incl. in 251)
	33489		Body Assy., Breather
	33490		Tube, Breather
	30102		* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
	650738		Screw, 1/4-20 x 5/8"
	35471		* Gasket, Air cleaner
	35472		Bracket, Air cleaner
	650399		Screw, 10-32 x 5/8"
	32008		Element, Air cleaner
	32810		Cover, Air cleaner
	650513		Nut, Wing
118	650675		Washer, Flat
122	650516		Screw, 1/4-20 x 1-1/8"
146	32577		Cover, Cylinder NOTE: Determine the gap between the cover
			and the machined surface on the cylinder, which can be
			from .001" up to .007", in which case no shim gaskets will be
			required. Use of gaskets must be limited to a combined total
			of .010" thick. Steel spacersmust be used as required to eli
147	792028		Screw, 5/16-18 x 7/8"
155	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
(=0	0.4070		•
156	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
4	22024		
157	32031		* Spacer, Steel (.010 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used as re
450	610119		•
	610118		Cover, Spark plug
	610750		Grommet, Lead wire
	610408		Nut, 8-32
	610908		Terminal, Female
169A	27793		Clip, Conduit
170	28942		Screw, 10-32 x 3/8"
189	33984A		Dipstick (Incl. 190)
	33590		"O" Ring
	33893A		Tube, Oil filler
	31752		Decal, Air cleaner
	34346		Decal, Instruction
	550223		Decal, Name
2 44 A			Doual, Inditio

Ref #	Part Number	Qty	Description
	631687 631754		Valve, Seat & Spring Assy. Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A,
050	225420		page 124 for breakdown)
	33516G 35075		* Gasket Set (Incl. items marked *) "O" Ring Kit (Incl. Nos. items marked +)

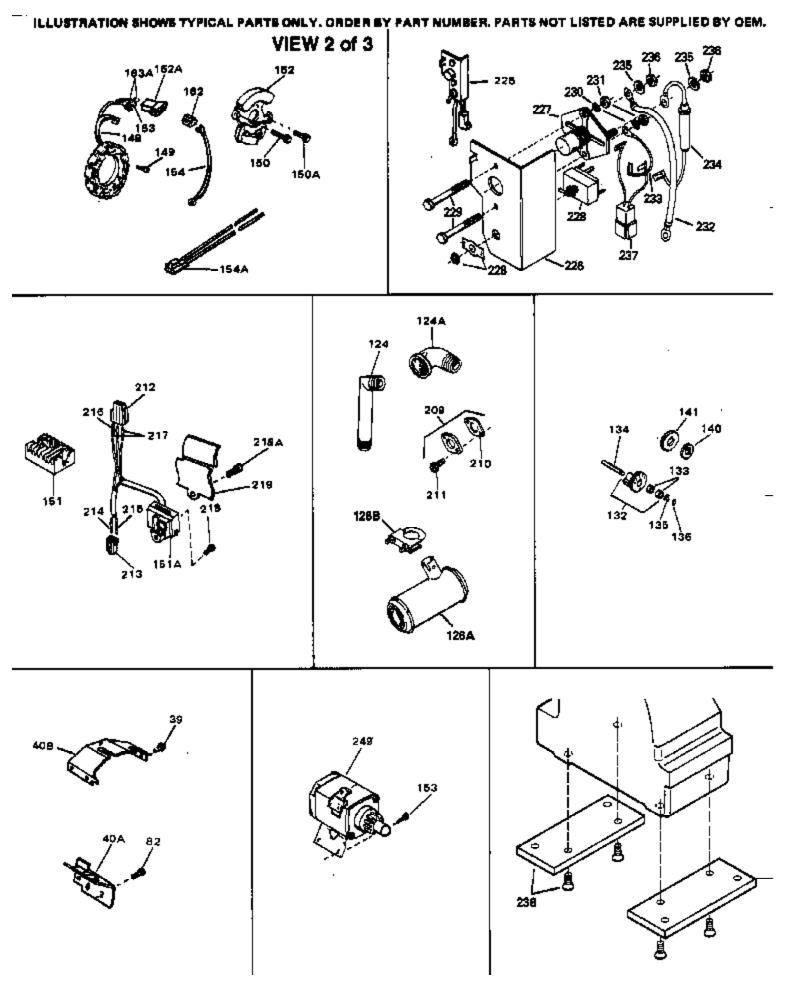

Ref #	Part Number Qty	Description
39	650736	Screw, 10-16 x 3/8"
82	30063	Screw, 1/4-20 x 1/2"
126A	35731	Muffler (Incl. 126B)
141		Gear, Counterbalance weight (Straight teeth) (For
		replacement see Ref. 132. Order correct kit for your
		enginemodel number.)
148	610902	Alt.Coil Ass'y. (Incl.162,163,163A) (20 amp)
149	650521	Screw, 10-32 x 1-1/8"
151A	610996	Regulator (20 Amp) (Incl. 212 thru 21 8)
153	792028	Screw, 5/16-18 x 7/8"(Use w/32817 str .motor)
153	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
162A	610903	Connector, Flat
163	610904	Terminal
163A	610905	Terminal
209	730178	Ech.Adapter Kit (Incl.210 & 211)(As r equired)
210	34102B	Gasket, Exhaust (Use as required)
211	30196	Screw, 5/16-18 x 3/4" (Use as require d)
212	610990	Connector, Male
213	610921	Connector
214	610922	Terminal
215	610989	Terminal
216	610992	Terminal, Female
	610991	Terminal, Female
	30063	Screw, 1/4-20 x 1/2"
238	730212	Adapter Plate Kit (Optional) NOTE: If you are having
		mounting problems in using a HH100 thru0H180 inplace of a
		large frame competitivebrand, we would like to call your
		attention to 730212 adapter plate kit. The kit converts the
		bottom mounting system found on HH100 thru 0H180 to a
		top mounting sys
249	33835	Electric Starter Motor (12-Volt) (Refer to Division 5, Section
		D for breakdown)
		,

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

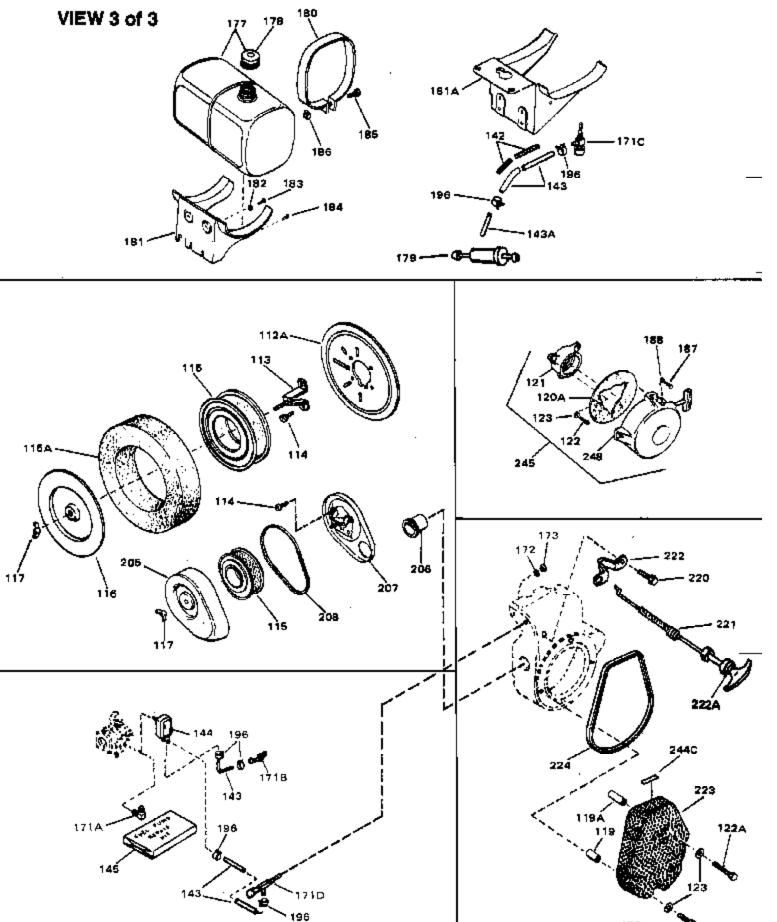

122

Ref #	Part Number Qty	Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
120A	32049	Screen, Starter hub
121	32048	Hub, Starter
122	650516	Screw, 1/4-20 x 1-1/8"
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
144	32959	Pump, Impulse fuel
145	33010	Repair Kit, Impulse fuel pump
171B	32958	Fitting, Fuel pump
178	410144B	Fuel Cap (White Plastic)(Std)(As required)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
407	050500	
	650598	Screw, 1/4-28 x 3/4"
	8345	Washer
	26460	Clamp, Fuel line (Use as required)
245	730134	Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)
248	590405A	Rewind Starter (Refer to Division 5, Section C, page 24 for breakdown)