


		ty Description
2 2 2 2 2 2 4	33707A 31927 28483 9556 28534 27652 33423B	Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re) Pipe Plug, 3/8-18 sq. head (Use as re quired) Pipe Plug (3/8-18 hex countersunk) (A s req.) Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local) Pipe Plug (1/8-27 sq. hd.) (Use as re quired) Pipe Plug(1/8-27 hex c/sunk headless) (As req) Pin, Dowel Crankshaft (Incl. 6 thru 9) NOTE: When using this crankshaft to repair older units equipped with straight cut cam and governor gears, it will be necessary to order 34751 helical governor gear assembly and 34752 helical camshaft in order to the complete the repair.
$\begin{array}{c} 7\\ 8\\ 9\\ 10\\ 10A\\ 11A\\ 11A\\ 11A\\ 11A\\ 11\\ 11\\ 12\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13\\ 13$	29783 31931 31932 31928 34222 34223 32238B 32239B 32240B 34511 34512 34513 31919 32241 32242 32243 33093A 34383 34384 32077 26073 28264 33470 33472 33471 33505 33645 33506 33645 33506 33645 33506 33645 33506 33645 33506 33645 33507 33508 34410 33509 33510 33510 33473 650745 35479 30590A 31948 31956B 34095	Pin, Crankshaft gear Gear, Crankshaft (Straight) Bearing, Tapered roller Cup, Bearing Bearing, Needle Bearing & Seal Assy., Needle Piston & Pin Ass'y. (Std.)(3-1/2")(In cl.12) Piston & Pin Ass'y. (J00" OS) (Incl. 12) Piston & Pin Ass'y. (J00" OS) (Incl. 12) Piston & Pin Ass'y. (J00" OS) Piston, Pin & Ring Set (Std.) (3-1/2" Bore) Piston, Pin & Ring Set (J00" OS) Piston, Pin & Ring Set (J00" OS) Piston, Pin & Ring Set (J00" OS) Ring, Piston pin retaining Ring Set (Std.) (3-1/2" Bore) Ring Set (J01" OS) Ring Set (J01" OS) Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17) Connecting Rod Assy.(J01" US)(Incl.1 5,16,17) Connecting Rod Assy.(J01" US)(Incl.1 5,16,17) Bolt, Connecting rod Nut Assy. Camshaft (MCR) (Straight) Lifter, Valve Rod, Push Intake Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (I/32" OS) Spring, Valve Retainer & Cap Set, Keeper valve * "O" Ring (Exhaust only) (Also Incl. in 251) * "O" Ring (Intake only) (Also Incl. in 251) Cap, Valve Governor Gear & Shaft Ass'y. (Straight 1) Washer, Flat Washer, Flat Washer, Flat Spool, Governor * Gasket, Cylinder cover Cylinder Cover Ass'y. (Incl. 2, 10, 10A, 33, 36, 37, 38, 93,
34	31950 650451 650588	194 & 195) * Seal, Oil Screw, 1/4-20 x 1" Screw, 1/4-20 x 2"

	Part Number Qty	
36	32425	Rod Assy., Governor
37	32426	Spacer, Governor rod
38	29193	Ring, Retaining
	650736	Screw, 10-16 x 3/8"
	33495	Cover, Cylinder head
	34225A	* Gasket, Cylinder head
	33465	Head, Cylinder
	31980	Pulley, Starter
		•
	32046	Rope Assy., Starter
	35552	Spark Plug (RL-82C)
	650690	Washer, Belleville
	650691	Washer, Flat
	650692	Screw, 5/16-18 x 1-3/4"
	650746	Screw, 5/16-18 x 1-3/8"
48	730218	Valve Guide Kit (Incl. 49)
49	792035	Ring, Retaining
50	33515A	* Gasket, Intake pipe
51	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
	33477A	Baffle, Air cleaner
	792075	
		Nut, Lock 5/16-24 (Used in early prod uction)
	33478	Link, Governor lever-to-throttle leve r
	33983	Link, Governor lever-to-throttle leve r
	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
62	650544	Screw, Torx T-25, 10-24 x 7/8"
63	7975	Nut, 10-24
64	31965	Plate, Governor spring
65	31984A	Lever Assy., Control
66	28558	Washer, Wave
	31966	Bushing, Governor lever
	650597	Screw, 10-24 x 5/8"
	33982	Spring, Governor
	33982	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	
		Spring
	32599	"O" Ring (Incl. in 251)
	650666	Washer, Lock
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	650592	Key, Flywheel
77	610967	Flywheel (w/ring gear)
77A	730201	Trigger Pin Kit (Use as required)
78	650594	Nut, Flywheel
	610906	Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	650751	Screw, 1/4-20 x 7/16"
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
	8274	
		Washer, Lock
	650595	Screw, 5/16-24 x 3/8" Screw, 5/16-24 x 0/16"
	650624	Screw, 5/16-24 x 9/16"
87	650752 35475	Screw, 1/4-20 x 7/16" Tube, Push rod


		Qty	
	33481		* "O" Ring (Also Incl. in 251)
	34754		Housing, Rocker arm
91	33013		Cover, Starter bubble
92	650701		Screw, 8-18 x 7/16"
93	8345		Washer, Flat
	33484		* "O" Ring (Also Incl. in 251)
	650168		Washer, Flat
	32610A		Screw, 1/4-20 x 29/32"
	33485		Arm, Rocker
	33486		Ring, Retaining
99	650755		Screw, 1/4-20 x 3/4"
100	650864		Nut, Hex, 1/4-20
101	650756		Stud, Rocker arm
	33487		* "O" Ring (Also Incl. in 251)
	33488		Cover, Rocker arm
			•
	31958A		* Gasket, Breather (Also Incl. in 251)
	33489		Body Assy., Breather
	33490		Tube, Breather
107	30102		* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
108	650738		Screw, 1/4-20 x 5/8"
	35471		* Gasket, Air cleaner
	35472		Bracket, Air cleaner
	650399		
			Screw, 10-32 x 5/8"
	32008		Element, Air cleaner
	32810		Cover, Air cleaner
117	650513		Nut, Wing
119	31992		Spacer, Screen
120	33776		Screen, Pulley
	650680		Screw, 1/4-20 x 1-1/2"
	27070		Washer, Lock
	32577		
140	32311		Cover, Cylinder NOTE: Determine the gap between the cover
			and the machined surface on the cylinder, which can be
			from .001" up to .007", in which case no shim gaskets will be
			required. Use of gaskets must be limited to a combined total
			of .010" thick. Steel spacersmust be used as required to eli
	792028		Screw, 5/16-18 x 7/8"
150B	650399		Screw, 10-32 x 5/8"
152A	610983		Stator Plate Assy. (w/exciter coil)
155	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
100			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			· · ·
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
450	0.1070		
156	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used a
157	32031		* Spacer, Steel (.010 thick) NOTE: Determine the gap
			between the cover and the machined surface on the
			cylinder, which can be from .001" up to .007", in which case
			no shim gaskets will be required. Use of gaskets must be
			limited to a combined total of .010" thick. Steel
			spacersmust be used as re

Ref #	Part Number Qty	Description
158	610118	Cover, Spark plug
159	610750	Grommet, Lead wire
160	610408	Nut, 8-32
161	610908	Terminal, Female
164	33356	Terminal
165	650760	Screw, 8-32 x 3/8"
166	28545	Grommet, Plastic
167A	26073	Washer, Flat
167	650890	Washer, Lock
168	32039	Switch, Stop
189	33993A	Dipstick (Incl. 190)
190	33590	"O" Ring
191	33992A	Tube, Oil filler
193	29443	Clip, Wire
	550223	Decal, Name
244B	31752	Decal, Air cleaner
244	34346	Decal, Instruction
246	631687	Valve, Seat & Spring Assy.
247	631680	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A,
		page 124 for breakdown) (Refer to Division 5, Section D for breakdown)
		,
	33516G	* Gasket Set (Incl. items marked *)
251	35075	"O" Ring Kit (Incl. Nos. items marked +)

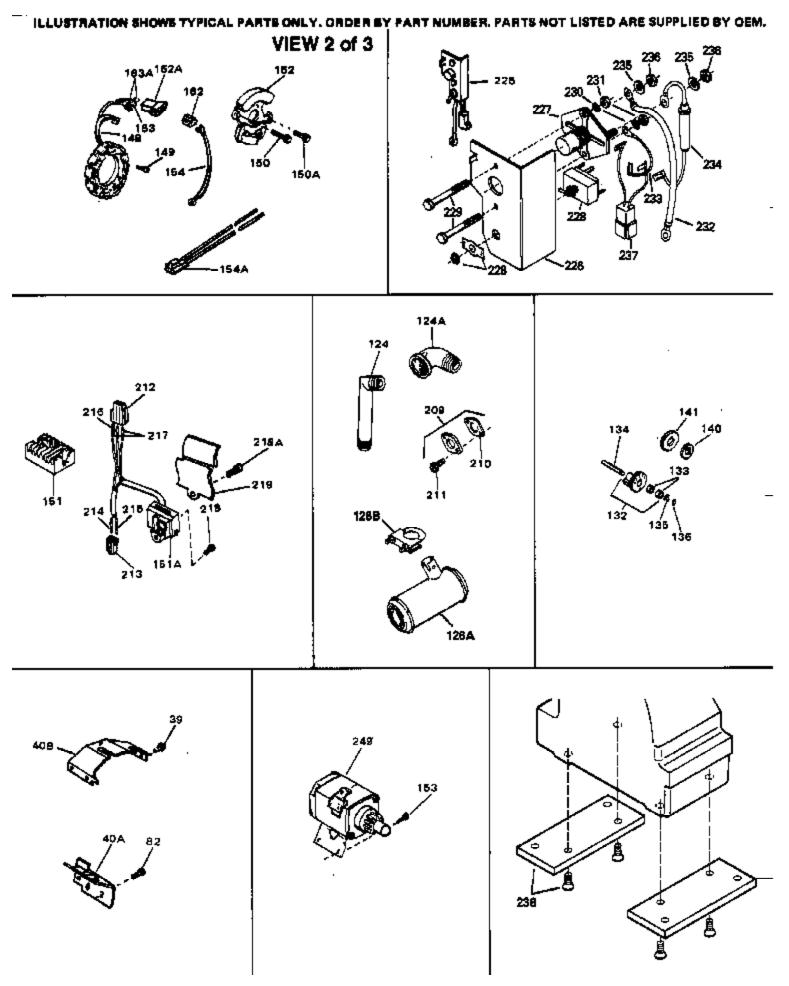

Ref #	Part Number C	ty Description
39	650736	Screw, 10-16 x 3/8"
126A	35731	Muffler (Incl. 126B)
141		Gear, Counterbalance weight (Straight teeth) (For replacement see Ref. 132. Order correct kit for your enginemodel number.)
153	792028	Screw, 5/16-18 x 7/8"(Use w/32817 str .motor)
153	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
209	730178	Ech.Adapter Kit (Incl.210 & 211)(As r equired)
210	34102B	Gasket, Exhaust (Use as required)
211	30196	Screw, 5/16-18 x 3/4" (Use as require d)
238	730212	Adapter Plate Kit (Optional) NOTE: If you are having mounting problems in using a HH100 thru0H180 inplace of a large frame competitivebrand, we would like to call your attention to 730212 adapter plate kit. The kit converts the bottom mounting system found on HH100 thru 0H180 to a top mounting sys

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

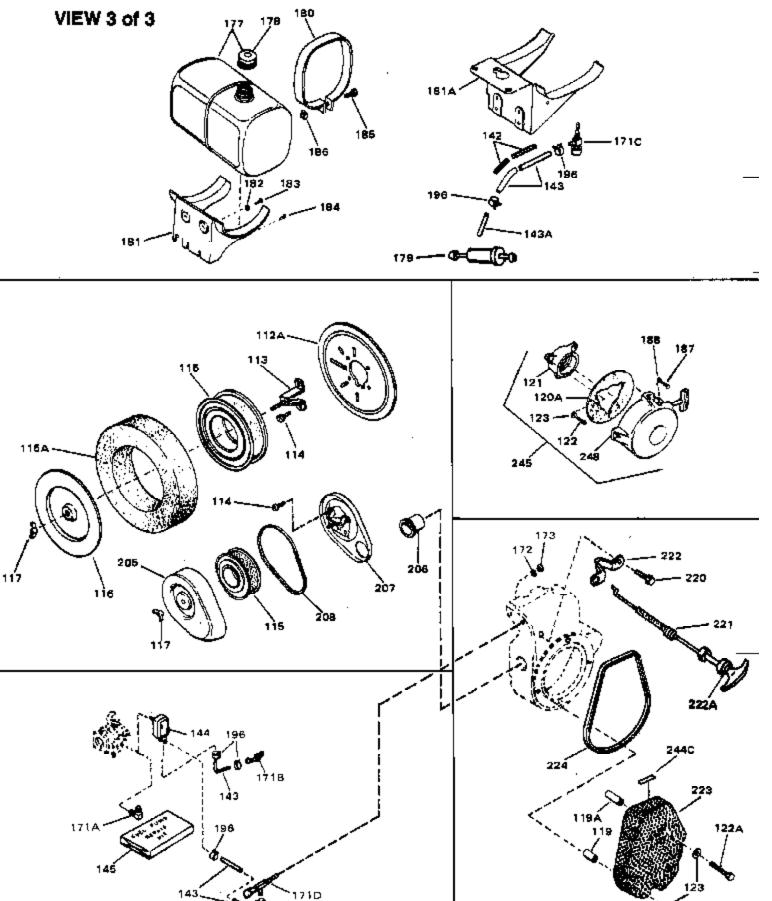

196

122

Ref #	Part Number Qty	Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
119	31992	Spacer, Screen
122	650680	Screw, 1/4-20 x 1-1/2"
123	27070	Washer, Lock
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
144	33981	Pump, Impulse fuel
145	33010	Repair Kit, Impulse fuel pump
171C	29683	Valve, Fuel strainer & shut-off
171B	32958	Fitting, Fuel pump
177	33979	Fuel Tank (Incl. 178)
178	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
180	33980	Strap, Fuel tank
181	33978	Bracket, Fuel tank
182	650787	Washer, Belleville
183	650786	Screw, 1/4-20 x 5/8"
184	650785	Screw, 5/16-18 x 5/8"
185	650488	Screw, 1/4-20 x 1-1/4"
186	650456	Nut, Lock
196	26460	Clamp, Fuel line (Use as required)
245	730134	Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)

Page 9 of 9