


Dof #	Part Number (Qty	Description
	33707A	чιy	Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re)
	31927		Pipe Plug, 3/8-18 sq. head (Use as re quired)
	28483		Pipe Plug (3/8-18 hex countersunk) (A s req.)
2			Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local)
	9556		Pipe Plug (1/8-27 sq. hd.) (Use as re quired)
2	28534		Pipe Plug(1/8-27 hex c/sunk headless) (As req)
4	27652		Pin, Dowel
5	34820		Crankshaft (Incl. 6 thru 9, 140 & 141)
6	29783		Pin, Crankshaft gear
	34692		Gear Crankshaft (Helical)
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32238B		Piston & Pin Ass'y. (Std.)(3-1/2")(In cl.12)
	32239B		Piston & Pin Ass'y. (.010" OS) (Incl. 12)
	32240B		Piston & Pin Ass'y. (.020 " OS) (Incl. 12)
	34511		Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512		Piston, Pin & Ring Set (.010" OS)
	34513		Piston, Pin & Ring Set (.020" OS)
	31919		Ring, Piston pin retaining
	32241		Ring Set (Std.) (3-1/2" Bore)
	32242		Ring Set (.010" OS)
13	32243		Ring Set (.020" OS)
14	33093A		Connecting Rod Assy.(Std.)(Incl.15, 1 6 & 17)
14	34383		Connecting Rod Assy.(.010" US)(Incl.1 5,16,17)
14	34384		Connecting Rod Assy.(.020" US)(Incl.1 5,16.17)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
	28264		Nut Assy.
	34752		Camshaft (MCR) (Helical)
	33472		Lifter, Valve
	33471		Rod, Push
	33505		Intake Valve (Std.)
	33645		Intake Valve (1/32" OS)
	33506		Exhaust Valve (Std.)
	33646		Exhaust Valve (1/32" OS)
	33507		Spring, Valve
	33508		Retainer & Cap Set, Keeper valve
	33509		* "O" Ring (Intake only) (Also Incl. in 251)
	34410		* "O" Ring (Exhaust only) (Also Incl. i n 251)
	33510		Cap, Valve
27	34751		Governor Gear Ass'y. (Helical)
28	650745		Washer, Flat
29	35479		Washer, Flat (Use with 35322 spool)
29	30590A		Washer, Flat
	31948		Spool, Governor
	31956B		* Gasket, Cylinder cover
	34649		Cover Assy., Cylinder (Incl. 2, 33 & 134)
	31950		* Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650492		
			Screw, 1/4-20 x 2-1/4"
	32425		Rod Assy., Governor
	32426		Spacer, Governor rod
	29193		Ring, Retaining
	650736		Screw, 10-16 x 3/8"
	33495		Cover, Cylinder head
	34225A		* Gasket, Cylinder head
	34753		Head, Cylinder
43	31980		Pulley, Starter


Ref #	Part Number Qty	Description
	32046	Rope Assy., Starter
	35552	Spark Plug (RL-82C)
	650690	Washer, Belleville
	650691	Washer, Flat
	650746	Screw, 5/16-18 x 1-3/8"
	650692	Screw, 5/16-18 x 1-3/4"
	730218	Valve Guide Kit (Incl. 49)
	792035	Ring, Retaining
	33515A	* Gasket, Intake pipe
	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
		·
	33477A 702075	Baffle, Air cleaner Nut. Lock 5/16-34 (Lock in early production)
	792075	Nut, Lock 5/16-24 (Used in early prod uction)
	33478	Link, Governor lever-to-throttle leve r
	31963	Lever, Governor
	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
	650544	Screw, Torx T-25, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
	31984A	Lever Assy., Control
66	28558	Washer, Wave
67	31966	Bushing, Governor lever
68	650597	Screw, 10-24 x 5/8"
69	34021	Spring, Governor
70	650591	Screw, 10-24 x 2"
71	33099	Spring
72	32599	"O" Ring (Incl. in 251)
73	650666	Washer, Lock
74	32579	Baffle, Blower housing
75	650561	Screw, 1/4-20 x 5/8"
	650592	Key, Flywheel
	610967	Flywheel (w/ring gear)
	730201	Trigger Pin Kit (Use as required)
	650594	Nut, Flywheel
	610906	Solid State Magneto (Incl. 158 thru 1 61)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	30063	Screw, 1/4-20 x 1/2"
	650751	Screw, 1/4-20 x 7/16"
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	650624	Screw, 5/16-24 x 9/16"
	650752	Screw, 1/4-20 x 7/16"
		·
	35475 23481	Tube, Push rod * "O" Ping (Also Incl. in 251)
	33481 34754	* "O" Ring (Also Incl. in 251)
	34754	Housing, Rocker arm * "O" Bing (Alea Incl. in 251)
	33484	* "O" Ring (Also Incl. in 251)
	650168	Washer, Flat
	32610A	Screw, 1/4-20 x 29/32"
	33485	Arm, Rocker
	33486	Ring, Retaining
	650755	Screw, 1/4-20 x 3/4"
100	650864	Nut, Hex, 1/4-20


Ref # P	Part Number Qty	Description
101 6		Stud, Rocker arm
102 3		* "O" Ring (Also Incl. in 251)
103 3		Cover, Rocker arm
	1958A	* Gasket, Breather (Also Incl. in 251)
105 3		Body Assy., Breather
106 3		Tube, Breather
107 3		* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
108 6		Screw, 1/4-20 x 5/8"
111 3		* Gasket, Air cleaner
112 3		Bracket, Air cleaner
114 6		Screw, 10-32 x 5/8"
115 3		Element, Air cleaner
116A 3		Cover, Air cleaner
117 6 119 3		Nut, Wing
120 3		Spacer, Screen Screen, Pulley
120 3		Screw, 1/4-20 x 1-1/2"
123 2		Washer, Lock
137 6		Screw, 10-24 x 7/8"
138 3		Tube extension, Oil fill
146 3		Cover, Cylinder NOTE: Determine the gap between the cover
1-10 0	2011	and the machined surface on the cylinder, which can be
		from .001" up to .007", in which case no shim gaskets will be
		required. Use of gaskets must be limited to a combined total
		of .010" thick. Steel spacersmust be used as required to eli
4 47 7	70000	·
147 79 450D C		Screw, 5/16-18 x 7/8"
150B 6		Screw, 10-32 x 5/8"
152A 6 155 3		Stator Plate Assy. * Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
100 0	01971	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
450.0	4070	•
156 3	1972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be limited to a combined total of .010" thick. Steel
		spacersmust be used a
		'
157 3	2031	* Spacer, Steel (.010 thick) NOTE: Determine the gap
		between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used as re
158 6	10118	Cover, Spark plug
159 6	10750	Grommet, Lead wire
160 6	10408	Nut, 8-32
161 6	10908	Terminal, Female
164 3	3356	Terminal
165 6		Screw, 8-32 x 3/8"
166 2		Grommet, Plastic
167 6		Washer, Lock
167A 2		Washer, Flat
168 3	2039	Switch, Stop


Ref #	Part Number 0	ty Description
169A	27793	Clip, Conduit
170	28942	Screw, 10-32 x 3/8"
189	33984A	Dipstick (Incl. 190)
190	33590	"O" Ring`
191	33893A	Tube, Oil filler
193	29443	Clip, Wire
244B	31752	Decal, Air cleaner
244	34346	Decal, Instruction
244A	34768	Decal, Name
246	631687	Valve, Seat & Spring Assy.
247	632197	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A,
		page 160 for breakdown)
250	33516G	* Gasket Set (Incl. items marked *)
251	35075	"O" Ring Kit (Incl. Nos. items marked +)


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY CEM.

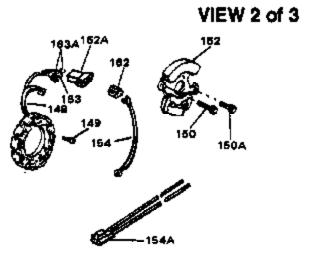


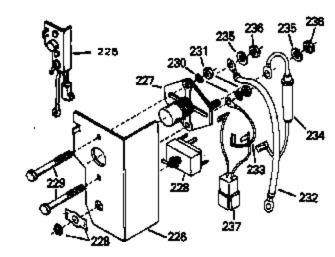


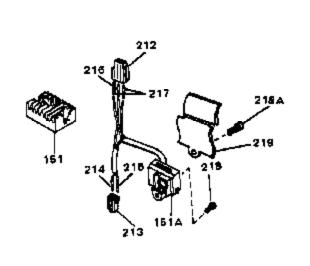


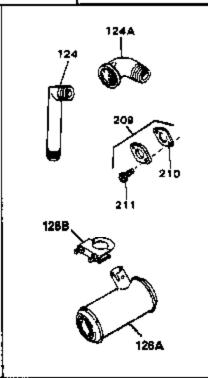

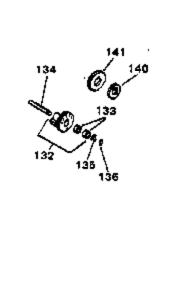

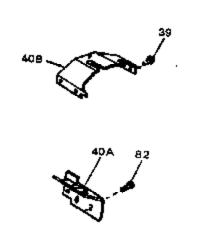


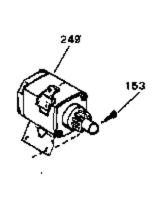

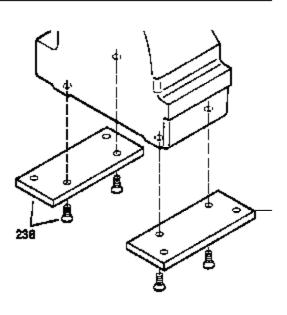

Ref #	Part Number	Qty	Description
39	650736		Screw, 10-16 x 3/8"
82	30063		Screw, 1/4-20 x 1/2"
126A	35731		Muffler (Incl. 126B)
132	34651		Weight Assy., Counterbalance
133	33501		Bearing, Needle
	33502		Shaft, Counterbalance
	33503		Washer, Thrust
	792017		Ring, Retaining
	33499		Spacer
	33963		Gear, Counterbalance weight (Helical teeth)
141			Gear, Counterbalance weight (Straight teeth) (For
			replacement see Ref. 132. Order correct kit for your
			enginemodel number.)
153	792028		Screw, 5/16-18 x 7/8"(Use w/32817 str .motor)
153	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
209	730178		Ech.Adapter Kit (Incl.210 & 211)(As r equired)
	34102B		Gasket, Exhaust (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
238	730212		Adapter Plate Kit (Optional) NOTE: If you are having
			mounting problems in using a HH100 thru0H180 inplace of a
			large frame competitivebrand, we would like to call your
			attention to 730212 adapter plate kit. The kit converts the
			bottom mounting system found on HH100 thru 0H180 to a
			top mounting sys
249	33835		Electric Starter Motor (12-Volt) (Refer to Division 5, Section
			D for breakdown)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

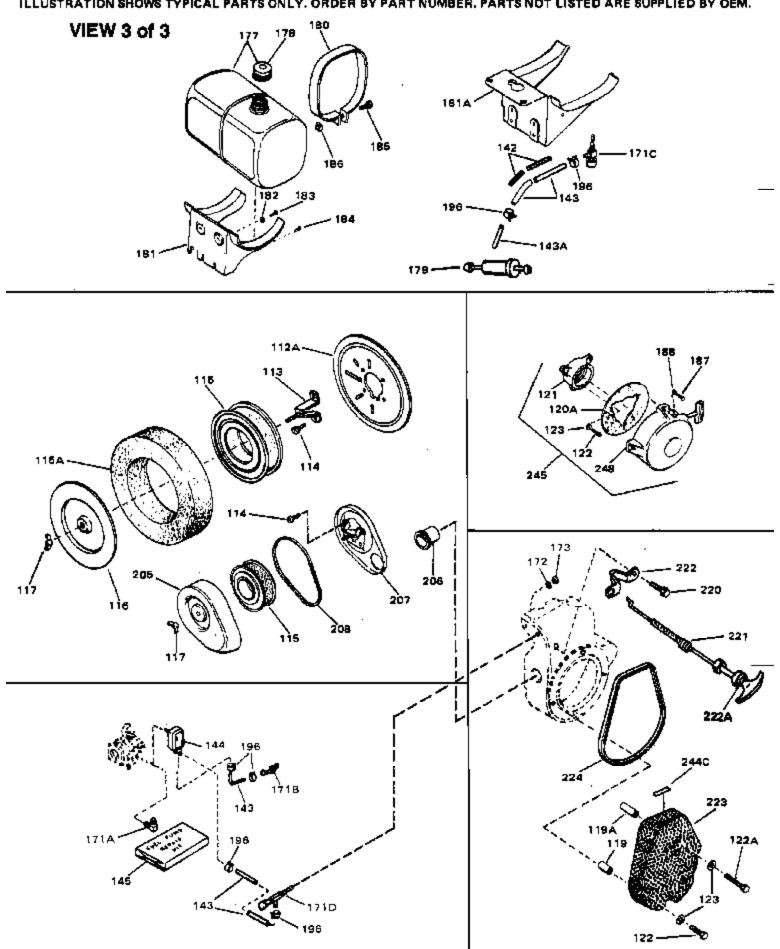

Pof #	Part Number (∩tı,	Description
	650399		Screw, 10-32 x 5/8"
115	32008		Element, Air cleaner
117	650513		Nut, Wing
119	31992	,	Spacer, Screen
122	650680		Screw, 1/4-20 x 1-1/2"
123	27070	,	Washer, Lock
143	29774		Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705		Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962		Fuel Line (Braided 32")(81 cm)(As req uired)
144	35018		Pump, Impulse fuel
145	33010		Repair Kit, Impulse fuel pump
171A	28566		Fitting, Fuel line
178	410144B		Fuel Cap (White Plastic)(Std)(As required)
178	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
196	26460	(Clamp, Fuel line (Use as required)
245	730134		Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248) (Use as required)