


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

MODEL and SERIAL  
 NUMBERS HERE


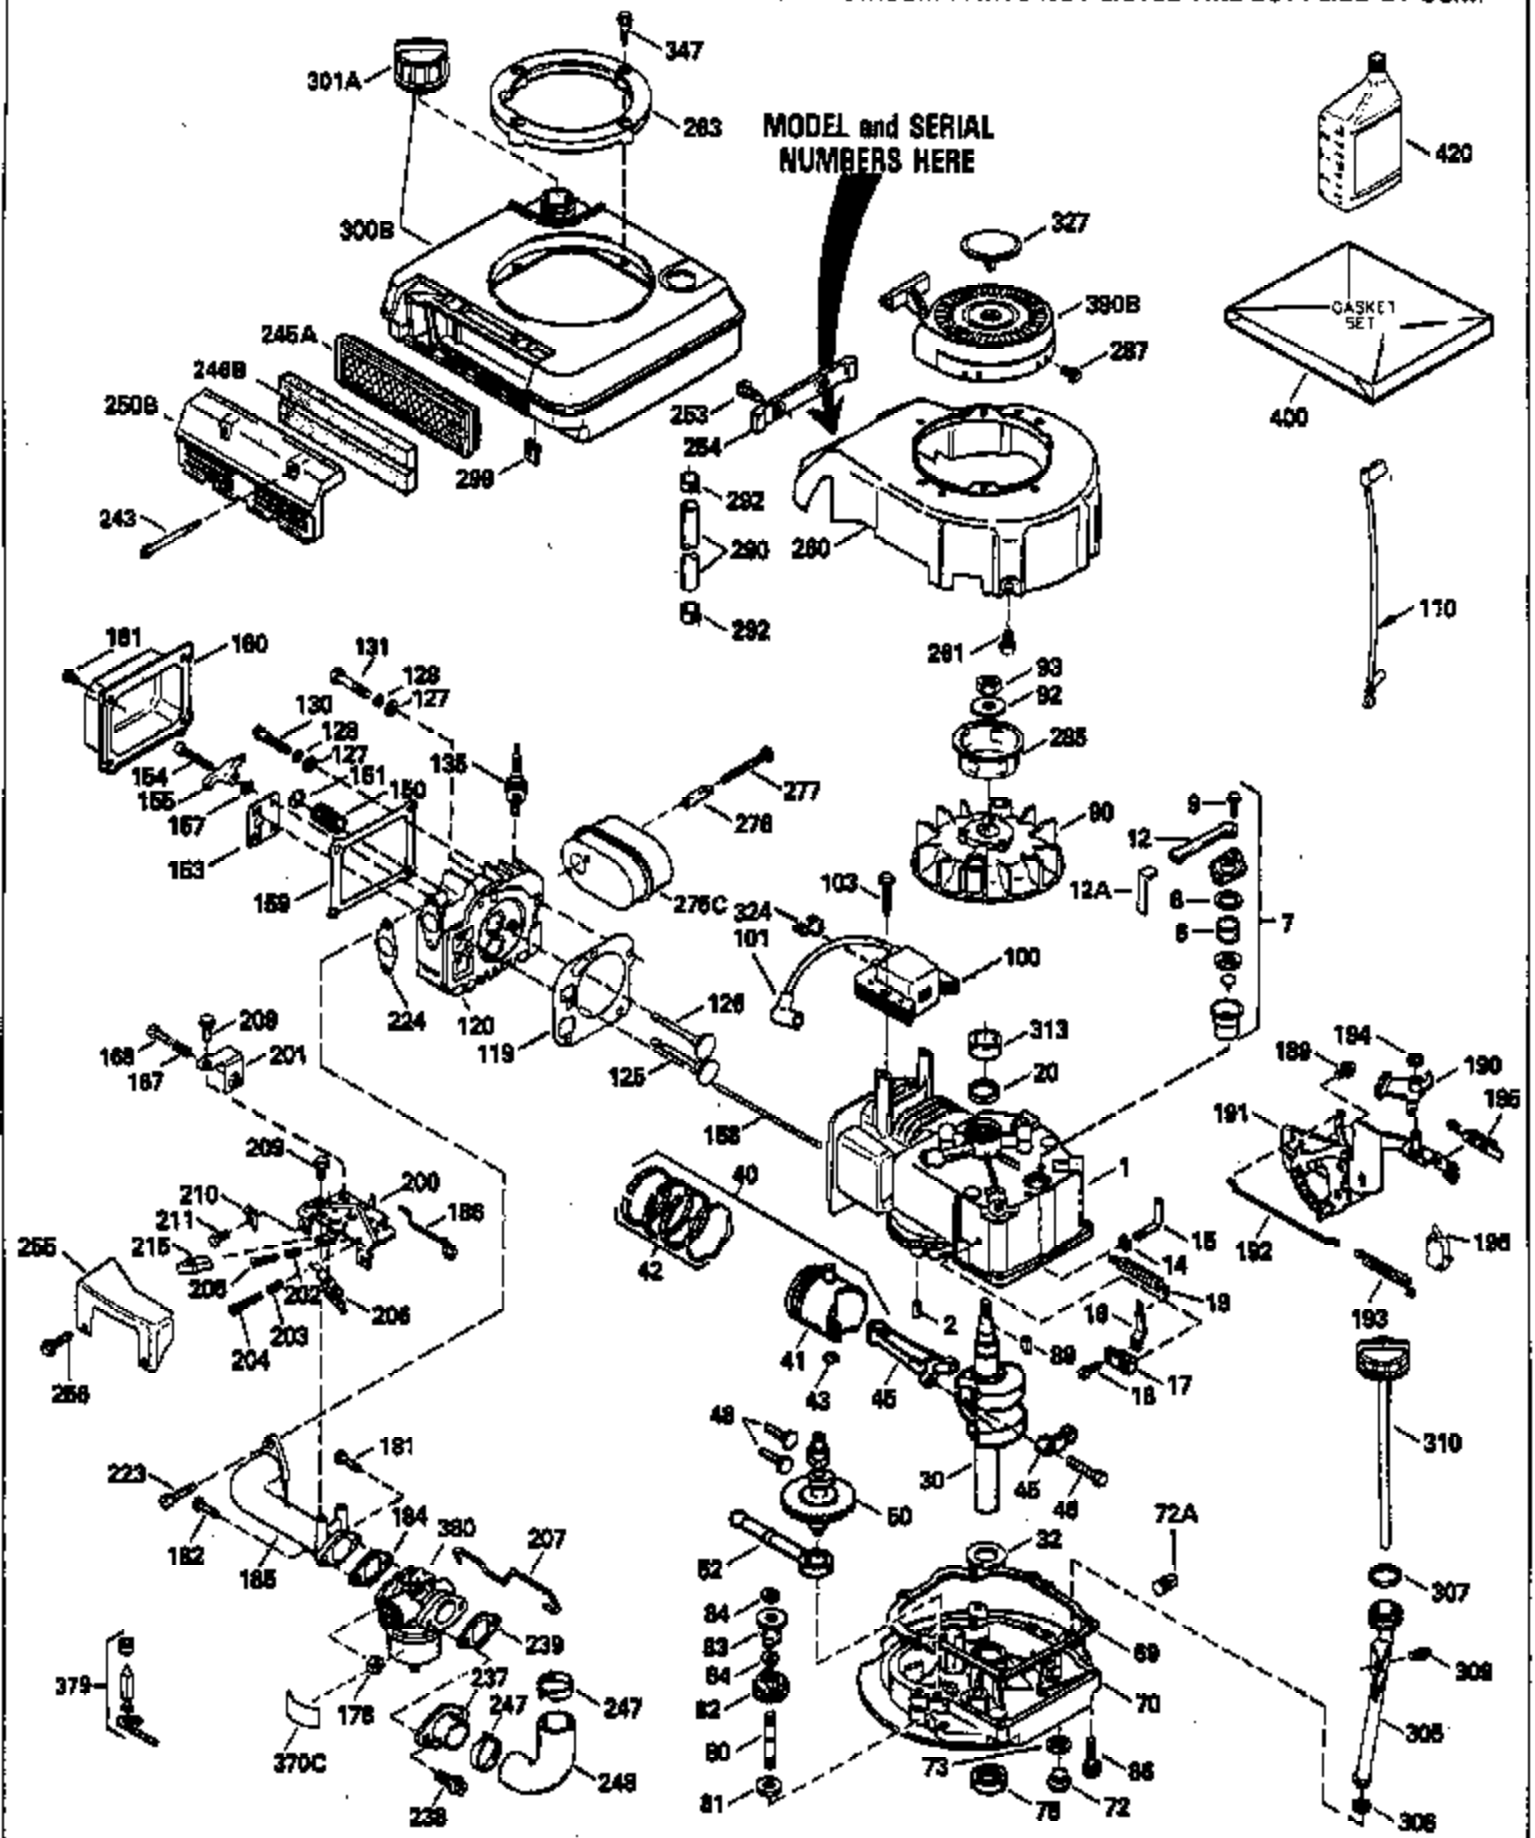


Ref #	Part Number	Qty	Description
1	35613		Cylinder (Incl. 2 & 20) (2-1/2" Bore)
2	26727		Pin, Dowel
6	33734		Element, Breather
7	34214A		Breather Assy. (Incl. 6, 8, 9, 12 & 12 A)
8	33735		* Gasket, Breather
9	30200		Screw, 10-24 x 9/16"
12	35496		Tube, Breather
14	28277		Washer, Flat
15	30589		Rod, Governor (Incl. 14)
16	31383A		Lever, Governor
17	31335		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
19	33578		Spring, Governor
20	32600		Seal, Oil
30	35644A		Crankshaft
40	34514		Piston, Pin & Ring Set (Std.) (2-1/2" Bore)
40	34515		Piston, Pin & Ring Set (.010" OS)
40	34516		Piston, Pin & Ring Set (.020" OS)
41	32538B		Piston & Pin Ass'y. (Std.) (Incl. 43) (2-1/2")
41	32548B		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	32549B		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	28986		Ring Set, Piston (Std.)
42	28987		Ring Set, Piston (.010" OS)
42	28988		Ring Set, Piston (.020" OS)
43	20381		Ring, Piston pin retaining
45	30963B		Rod Assy., Connecting (Incl. 46)
46	32610A		Bolt, Connecting rod
48	35616		Valve, Lifter
50	33553		Camshaft (MCR)
52	29914		Pump Assy., Oil
69	35261		* Gasket, Mounting flange
70	35179A		Mounting Flange (Incl. 72, 75 & 80)
72	30572		Plug, Oil drain (Incl. 73)
73	28833		* Drain Plug Gasket (Do not use w/plastic plug)
75	27897		Seal, Oil
80	30574		Shaft, Governor
81	30590A		Washer, Flat
82	30591		Gear Assy., Governor (Incl. 81)
83	30588A		Spool, Governor
84	29193		Ring, Retaining
86	650488		Screw, 1/4-20 x 1-1/4"
89	610961		Key, Flywheel
90	611123		Flywheel
92	650815		Washer, Belleville
93	650816		Nut, Flywheel
100	34443A		Solid State Assy.
101	610118		Cover, Spark Plug
103	650814		Screw, Torx T-15, 10-24 x 1"
110	34231		Ground Wire
119	35617		* Gasket, Cylinder head
120	35630		Head Cylinder
125	35621		Exhaust Valve (Std.) (Incl. 151)
125	35622		Exhaust Valve (1/32" OS) (Incl. 151)
126	35619		Intake Valve (Std.) (Incl. 151)
126	35620		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer, Flat
128	650690		Washer, Belleville
130	650912		Screw, 5/16-18 x 1-1/2"

Ref #	Part Number	Qty	Description
135	34645		Resistor Spark Plug (RN-4C)
150	31672		Spring, Valve
151	31673		Cap, Valve spring keeper
153	35623		Guide, Push rod
154	650913		Stud, Rocker arm
155	35624		Arm, Rocker
157	650914		Nut, Hex jam, 1/4-28
158	35625		Rod, Push
159	35626		* Gasket, Rocker arm cover
160	35718		Cover, Rocker arm
167	32924		Spring, Speed adj. screw
168	650688		Screw, Speed adjusting
178	29752		Nut & Lockwasher, 1/4-28
181	6201		Screw, 1/4-28 x 7/8"
184	26756		* Gasket, Carburetor
185	35628		Pipe, Intake
186	34358		Link, Governor spring
200	33155A		Control Bracket
201	33150		Bracket, Over-ride
207	34336		Link, Throttle
209	30200		Screw, 10-24 x 9/16"
210	27793		Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
223	650451		Screw, 1/4-20 x 1"
224	35629A		* Gasket, Intake pipe
237	32971		Adapter, Air cleaner
238	650709		Screw, 10-32 x 7/16"
239	35815		* Gasket, Air cleaner
243	650899		Screw, 10-32 x 2-3/32"
245A	35500		Air Cleaner Filter
246B	35705		Filter, Pre-air
247	35505		Clamp, Air cleaner
248	35504		Tube, Air cleaner
250B	35503		Cover, Air cleaner
253	650821		Screw, 10-32 x 1/2"
254	35721		Cover, Blower housing
260	35719		Housing, Blower
261	650831		Screw, 1/4-20 x 15/32"
263	35502		Ring, Shroud
277	650915		Screw, 1/4-20 x 3-5/32"
285	35000		Hub, Starter
287	650884		Screw, 8-32 x 1/2"
290	30705		Line, Fuel (Braided 16")(40 cm)
292	26460		Clamp, Fuel line
299	650900		Clip, "U" Type nut, 10-32
300B	35501A		Shroud & Tank Assy. (Incl. 299 & 301)
301A	35355		Cap, Fuel
305	35498		Tube, Oil fill
306	34265		* Gasket, Fill tube
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	35507		Dipstick, Oil fill
313	34080		Spacer, Flywheel
327	35392		Plug, Starter
347	650898		Screw, 10-32 x 27/32"
379	631021		Inlet, Needle, Seat & Clip Assy.








Ref #	Part Number	Qty	Description
380	632528		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-14 or Fiche 11, Grid F-1 for breakdown)
390B	590621		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 11, Grid G-3 for breakdown)
400	35633A		Gasket Set (Incl. items marked*)
420	730225		SAE 30, 4-Cycle Engine Oil (Quart)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

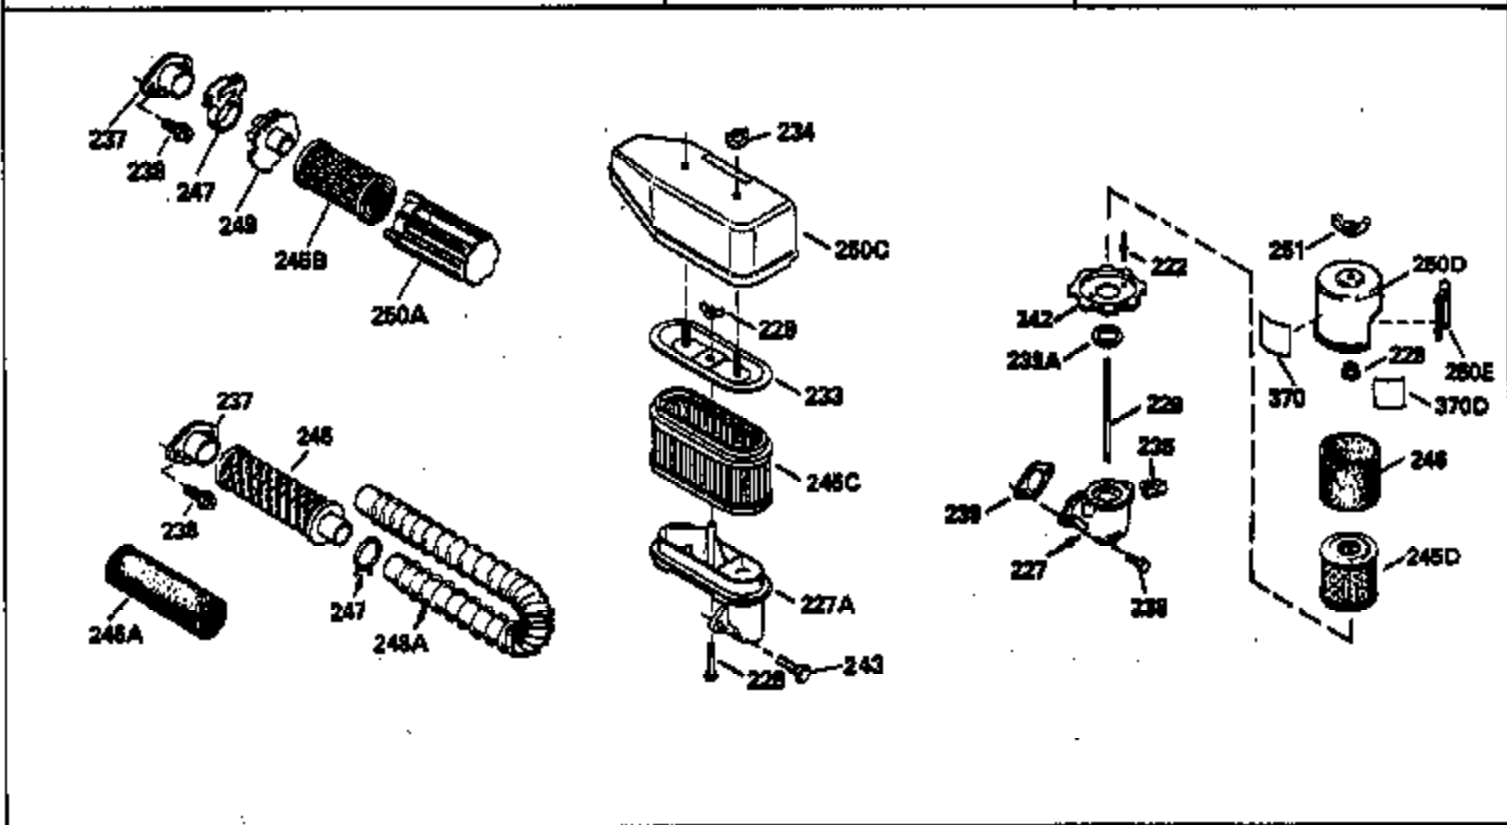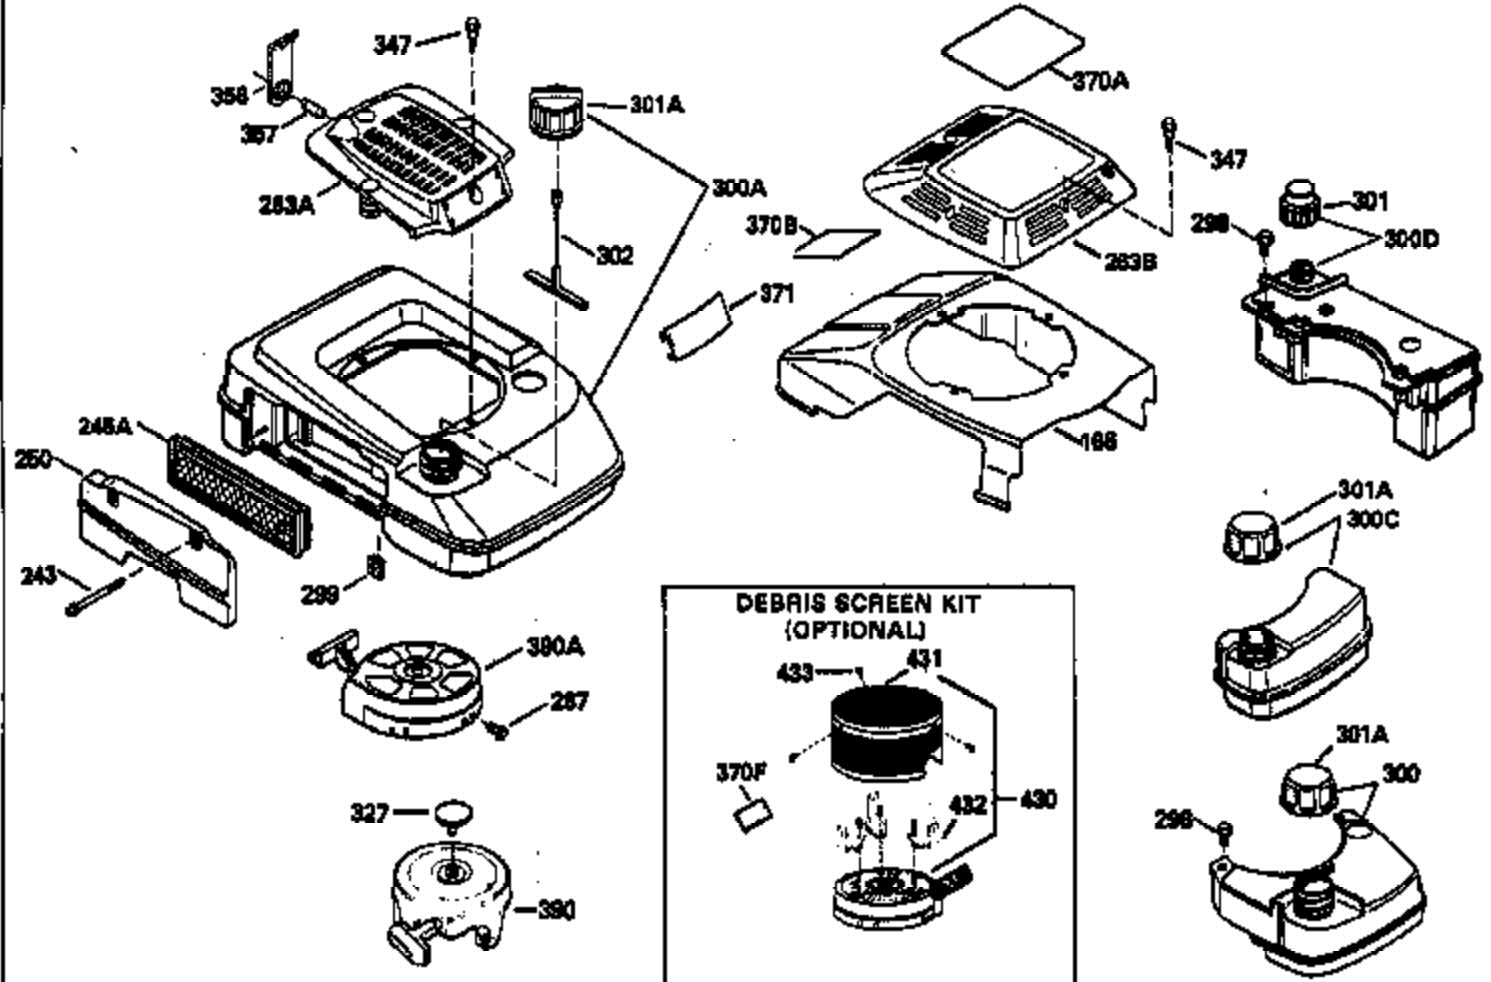

Ref #	Part Number	Qty	Description
	153 35623		Guide, Push rod
	237 32971		Adapter, Air cleaner
	238 650709		Screw, 10-32 x 7/16"
	239 35815		* Gasket, Air cleaner
	243 650899		Screw, 10-32 x 2-3/32"
	245A 35500		Air Cleaner Filter
	247 35505		Clamp, Air cleaner
	287 650884		Screw, 8-32 x 1/2"
	299 650900		Clip, "U" Type nut, 10-32
	301A 35355		Cap, Fuel
	327 35392		Plug, Starter
	347 650898		Screw, 10-32 x 27/32"
	357 34985		Retainer, Starter rope
	370F 34387		Decal, Instruction (optional)
	430 730574		Optional Screen Kit (Incl.370F,431,43 2,433)
	431 35596		Debris Screen (Optional)
	432 35597		Debris Screen Bracket (Optional)
	433 650910		Screw, 8-32 x 1/4" (Optional)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

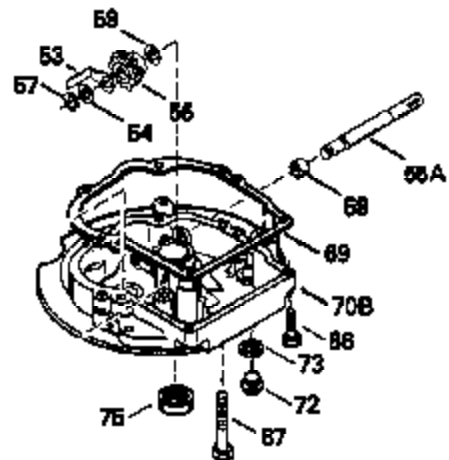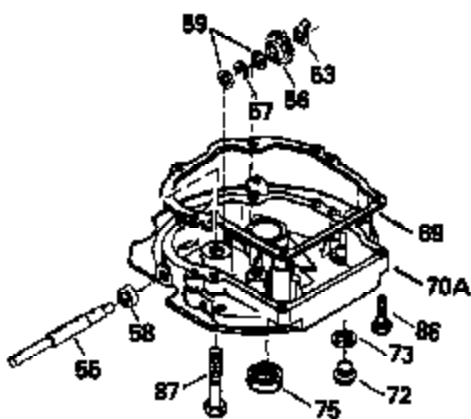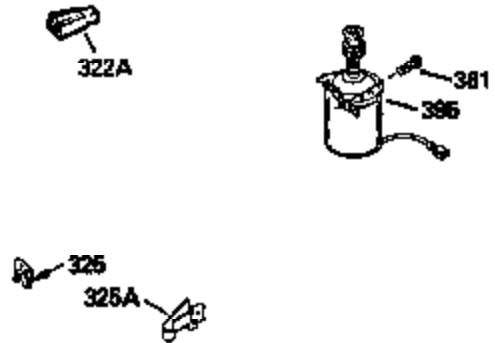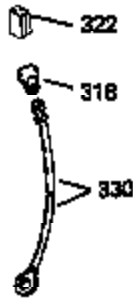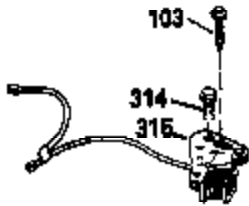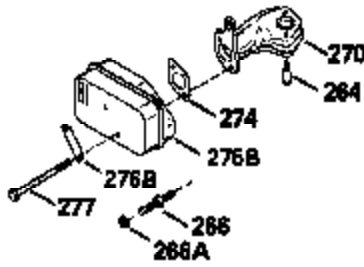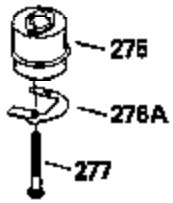

Ref #	Part Number	Qty	Description
69	35261		* Gasket, Mounting flange
72	30572		Plug, Oil drain (Incl. 73)
73	28833		* Drain Plug Gasket (Do not use w/plastic plug)
75	27897		Seal, Oil
86	650488		Screw, 1/4-20 x 1-1/4"
103	650814		Screw, Torx T-15, 10-24 x 1"
153	35623		Guide, Push rod
275	35637		Muffler
276A	35638		Plate, Lock
277	650915		Screw, 1/4-20 x 3-5/32"
325	29443		Clip, Fuel line