



ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.



Ref #	Part Number	Qty	Description
	1 35010		Cylinder (Incl. 2, 4 & 56)
	2 26727		Dowel Pin
	4 32600		Oil Seal
	5 30589		Governor Rod (Incl. 6)
	6 28277		Washer
	7 32651		Governor Lever
	8 31335		Governor Lever Clamp
	9 650548		Screw, 8-32 x 5/16"
	10 34821		Crankshaft
	13A 35541		Piston & Pin Ass'y. (Std.) (Incl. 14)
	13A 35542		Piston & Pin Ass'y. (.010 OS) (Incl.1 4)
	13A 35543		Piston & Pin Ass'y. (.020 OS) (Incl.1 4)
	13 35544		Piston, Pin & Ring Ass'y. (Std.)
	13 35545		Piston, Pin & Ring Ass'y. (.010 OS)
	13 35546		Piston, Pin & Ring Ass'y. (.020 OS)
	14 20381		Piston Pin Retaining Ring
	15 35547		Ring Set (Std.)
	15 35548		Ring Set (.010 OS)
	15 35549		Ring Set (.020 OS)
	16 30963B		Connecting Rod (Incl. 17)
	17 32610A		Connecting Rod Bolt
	20 27241		Lifter Valve
	21 33553		Camshaft (Mech. Compression Release)
	22 29914		Oil Pump
	24 35261		* Mounting Flange Gasket
	25 35651B		Mounting Flange (Incl. 27 thru 30)
	27 30572		Oil Drain Plug
	28 26208		Oil Seal
	29 9556		Pipe Plug
	30 30574		Governor Shaft
	31 30590A		Washer
	32 30591		Governor Gear (Incl. 31)
	33 30588A		Governor Spool
	34 29193		Retaining Ring
	35 650488		Screw, 1/4-20 x 1-1/4"
	36 29314B		Intake Valve (Std.) (Incl. 40)
	36 29315C		Intake Valve (1/32" OS) (Incl. 40)
	37 29313C		Exhaust Valve (Std.) (incl. 40)
	37 29315C		Exhaust Valve (1/32" OS) (Incl. 40)
	38A 35390		Intake Valve Seal
	39 31672		Valve Spring
	40 31673		Lower Valve Spring Cap
	42 610118		Spark Plug Cover
	45 611004		Flywheel Key
	46 34214A		Breather Ass'y. (Incl. 47 thru 51)
	47 33735		* Breather Gasket
	48 33734		Breather Element
	49 30200		Screw, 10-24 x 9/16"
	50 33886		Breather Tube
	51 33887		Breather Clip
	52 34231		Ground Wire
	53 30200		Screw, 10-24 x 9/16"
	54 650561		Screw, 1/4-20 x 5/8"
	55 33907A		Blower Housing
	57 33015A		* Cylinder Head Gasket
	58 34342		Cylinder Head
	60 6021A		Screw, 5/16-18 x 1-1/2"
	64 35395		Resistor Spark Plug (RJ19LM)

Ref #	Part Number	Qty	Description
65	27234A		* Valve Spring Box Gasket
66	32755		Valve Spring Box Cover
67	650128		Screw, 10-24 x 1/2"
68	34690A		* Intake Pipe Gasket
69	33004A		Intake Pipe (Incl. 68)
70	650451		Screw, 1/4-20 x 1"
71	31688A		* Carburetor Gasket
72	6201		Screw, 1/4-28 x 7/8"
73	29752		Lock Nut, 1/4-28
74	610973		Terminal
75	610885		Body Connector
76	34310		R.P.M. Adjusting Lever
77	33889A		Control Bracket (Incl. 74, 76 & 79)
79	650804		Screw, 10-24 x 9/16"
80	27793		Conduit Clip
80A	28942		Screw, 10-32 x 3/8"
81	34336		Throttle Link
82	33151		Governor Link
83	33890		Extension Spring
87	34265		Fill Tube Gasket
88	650562		Screw, 10-32 x 1/2"
89	35581		Oil Fill Tube
90	35582		Dipstick
91	35499		"O" Ring
92	33895		Air Cleaner Body
93	33896		Air Cleaner Filter
94	33897		Air Cleaner Cover
95	650762		Screw, 10-32 x 1-29/32"
96	650804		Screw, 10-24 x 9/16"
97	33051		* Air Cleaner Gasket
100	30705		Fuel Line
101	26460		Fuel Line Clamp
103	33904B		Fuel Tank (Incl. 101)
104	28763		Screw, 10-32 x 19/32"
105	34443A		Solid State Ignition
106	650814		Screw, 10-24 x 1"
106A	34080		Flywheel Key Spacer
107	611050		Flywheel
123	650815		Belleville Washer
124	650816		Flywheel Nut
128	34461		Starter Pulley
129	650767		Screw, 8-36 x 5/8"
130	34990		Alternator Coil
140	632050A		Carburetor (Incl. 71)
144	33906B		Gasket Set (Incl. items marked *)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

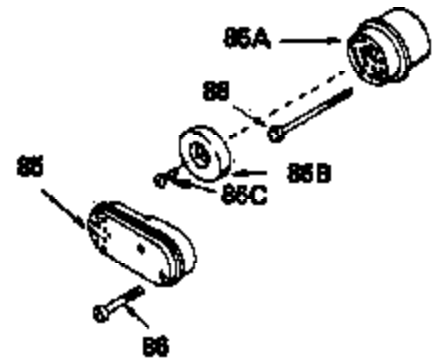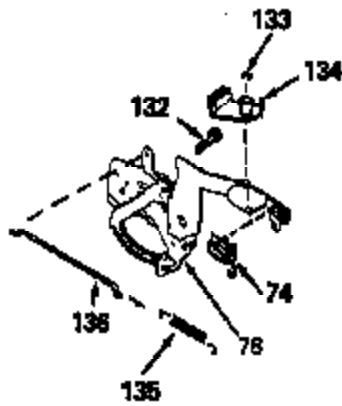

Ref #	Part Number	Qty	Description
17	32610A		Connecting Rod Bolt
54	650561		Screw, 1/4-20 x 5/8"
74	610973		Terminal
85A	35708		Muffler (Incl. 86)
86B	32431		Muffler Cover
86	650795		Screw, 1/4-20 x 2-1/4"
86C	650760		Screw, 8-32 x 3/8"
127	590343		Starter Rope Assy.