


		Description
	34913A	Cylinder (Incl. 8, 11, 94 & 94A) (2-5 /8" )
2	28277	Washer, Flat
3	30669	Rod, Governor
4	31357	Lever, Governor
	31335	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	31361	Spring, Governor
	32630	Seal, Oil
	29536	
		Baffle, Blower housing (Use as required)
	35256A	Blo.Hsg.Baffle (W/E.S.knock-out)(As r eq.)
	650561	Screw, 1/4-20 x 5/8"
	27652	Pin, Dowel
	34881	Crankshaft (Incl. 13 & 14)
	29783	Pin, Crankshaft gear
	27884	Gear, Crankshaft
15A	33312B	Piston & Pin Ass'y. (Incl.17)(2-5/8") (Std.)
15A	33313B	Piston & Pin Ass'y. (Incl. 17) (.010" OS)
15A	33314B	Piston & Pin Ass'y. (Incl. 17) (.020" OS)
15	34531	Piston, Pin & Ring Set (2-5/8") (Std.)
15	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
	34854	Ring Set (2-5/8") (Std.)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	31380C	Rod Assy., Connecting (Incl. 19)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	34006	Camshaft (MCR)
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	30688	Screw, 1/4-20 x 1/2"
	31356	Pump Assy., Oil
	30684	* Gasket, Cylinder cover
	31549	Flange Ass'y. (Incl. 29,30,31,33,94 & 94A)
	27642	Plug, Pipe (sq.hd, 1/4-28)
	27897	Seal, Oil
	28926	Seal, Oil
31	30668	Shaft, Mech. Governor
32	31707A	Governor Spacer Assy. (Incl. 33)
33	30590A	Washer, Flat (2 required)
34	30591	Gear Assy., Governor
	29193	Ring, Retaining
	30588A	Spool, Governor
	31355	Screen, Oil filter (Use as required)
	29117	Screw, 8-32 x 5/16" (Use as required)
	650488	Screw, 1/4-20 x 1-1/4"
	32783	Intake Valve (Std.) (Incl. 44)
	32784	Intake Valve (1/32" OS) (Incl. 44)
	27878A	
		Exhaust Valve (Std.) (Incl. 44)
	27880A	Exhaust Valve (1/32" OS) (Incl. 44)
	27882	Cap, Upper valve spring
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Washer, 1/2-20
50	28938B	* Gasket, Head

Dof #	Dort Number	05	Description
	Part Number 30938A	Qty	Description Head, Cylinder (Incl. 54)
	33636		Resistor Spark Plug (RJ-8)
	34251		Resistor Spark Plug (RJ-17LM)
	30939A		Cover Assy., Cylinder head
	650691		Washer, Flat (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	26073		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	27896		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
59	28425		Cover, Valve spring box
60	27627		Tube, Breather
61	650128		Screw, 10-24 x 1/2"
62	26756		* Gasket, Carburetor
	32632		Pipe, Intake
	27272		* Gasket, Air cleaner
	31691		Bracket, Air cleaner
	28820		Screw, 10-32 x 1/2"
	30727		Element, Air cleaner
	31715		Body, Air cleaner
	650152		Screw, 8-32 x 3/8"
	27915		* Gasket, Intake to cylinder
	650378		Screw, 5/16-18 x 1-1/8"
	31823		Link, Throttle
	32582		Link, Governor spring
	32181A 31342		Control Assy., Speed (Incl. 76, 77 & 78)
	650549		Spring, Compression Screw, 5-40 x 7/16"
	610973		Terminal Ass'y. (Use as required)
	30200		Screw, 10-24 x 9/16"
	32629B		Blower Housing (Incl. 121 & 122)(Elec . Str.)
	29747B		Screw, 5/16-24 x 21/32"
	27930		* Gasket, Exhaust
	28269		Muffler
	31588		Plate, Muffler locking
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	650696		Screw, 5/16-18 x 2-3/4" (Use as required)
89	32584		Fuel Tank (Incl. 90)
90	33032		Fuel Cap (Use as required)
90	34210		Fuel Cap (Use as required)
91	29774		Fuel Line (8-1/4") (Use as required)
	30962		Fuel Line (32") (Use as required)
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	29673		* Gasket, Oil fill
	34165		Dipstick (Incl. 95A)
	6201		Screw, 1/4-28 x 7/8" (Use as required )
	650372		Screw, 1/4-20 x 13/16" (Use as required)
	34235		Ground Wire
	33549		Clamp, Tank hold down
	33323		Screen, Muffler (Use as required)
	27276		Cover, Spark plug (Use as required)
	610118 730127		Cover, Spark plug (Use as required) A/C Assy. (Incl 65 66 67 68A 69 70 13 4)
	730127 550223		A/C Assy. (Incl.65,66,67,68A,69,70,13 4) Decal, Name
104/4			

 Ref # Pa	rt Number	Qty	Description
 154 343	346		Decal, Instruction
157 63 <sup>-</sup>	1021		Inlet Needle, Seat & Clip Assy.
158 632	2233		Carburetor (Incl. 62) (Refer to Division 5, Section A, page 182 for breakdown)
164 332	234A		* Gasket Set (Incl. items marked *)

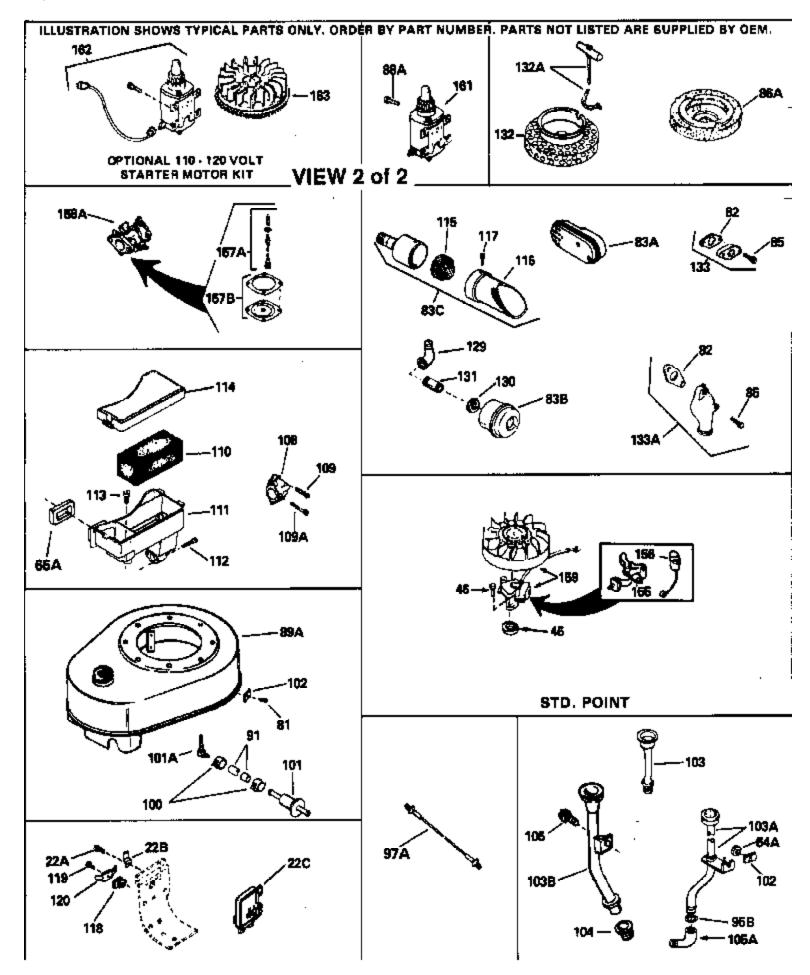

		ty Description
46 54A 54A 81 82	33876 650489 26073 650690 29747B 27930 391026	Gasket, Stator Screw, 1/4-20 x 5/8" Washer, Flat (Use as required) Washer, Belleville (Use as required) Screw, 5/16-24 x 21/32" * Gasket, Exhaust Muffler (Incl. 115, 116 & 117) (This spark arrestor mufflercan be used on any model)
85 85 91 91 100 115 116 117 132A 132 133A 133 155 156	650697A 30196 650696 29774 30962 26460 33323 33700 650578 590343 28301 31288 730130 30547A 30548B 611038	Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 3/4" (Use as required) Screw, 5/16-18 x 2-3/4" (Use as required) Fuel Line (8-1/4") (Use as required) Fuel Line (32") (Use as required) Clamp, Fuel line (Use as required) Screen, Muffler (Use as required) Cover & tube, Muffler (Use as required) Cover & tube, Muffler (Use as required) Rope, Starter handle Pulley & Screen Assy. Muffler Adapter Kit (Incl.82 & 85)(As req.) Muffler Adapter Kit (Incl.82 & 85)(As r eq.) Contact Assy., Breaker Condenser Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
162	33329D	Starter Motor Kit (110-120 volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. For breakdown see Division 5, Section D, Page 16.)
163	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Use on Std. point ignitions)
163	611085	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Use on solid state ignitions)