

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 3








Ref #	Part Number	Qty	Description
1	36265	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	34214A	1	Breather Ass'y. (Incl. 6, 8, 9 & 12)
8	33735	1	* Breather Gasket
9	30200	1	Screw, 10-24 x 9/16"
12	33886	1	Breather Tube
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	31383A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	650548	1	Screw, 8-32 x 5/16"
19	33578	1	Extension Spring
20	32600	1	Oil Seal
30	36215A	1	Crankshaft
40	36073	1	Piston, Pin & Ring Set (Std.)
40	36074	1	Piston, Pin & Ring Set (.010" OS)
40	36075	1	Piston, Pin & Ring Set (.020" OS)
41	36070	1	Piston & Pin Ass'y. (Std.) (Incl. 43)
41	36071	1	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	36072	1	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	36076	1	Ring Set (Std.)
42	36077	1	Ring Set (.010" OS)
42	36078	1	Ring Set (.020" OS)
43	20381	2	Piston Pin Retaining Ring
45	30963B	1	Connecting Rod Ass'y. (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	35992	1	Camshaft (MCR)
52	29914	1	Oil Pump Ass'y.
69	35261	1	* Mounting Flange Gasket
70	34311D	1	Mounting Flange (Incl. 72 thru 83)
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear Ass'y.(Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw, 1/4-20 x 1-1/4"
89	611004	1	Flywheel Key
90	611044	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443A	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	650814	2	Screw, Torx T-15, 10-24 x 1"
110	35017	1	Ground Wire
119	33554A	1	* Cylinder Head Gasket
120	34342	1	Cylinder Head
125	29313C	1	Exhaust Valve (Std.) (Incl. 151)
125	29315C	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	29314B	1	Intake Valve (Std.) (Incl. 151)
126	29315C	1	Intake Valve (1/32" OS) (Inc. 151)
130	6021A	8	Screw, 5/16-18 x 1-1/2"
135	35395	1	Resistor Spark Plug (RJ19LM)
150	35991	2	Valve Spring
151	31673	2	Valve Spring Cap
169	27234A	1	* Valve Cover Gasket

Ref #	Part Number	Qty	Description
172	32755	1	Valve Cover
174	650128	2	Screw, 10-24 x 1/2"
178	29752	2	Nut & Lock Washer, 1/4-28
179	30593	1	Retainer Clip
182	6201	2	Screw, 1/4-28 x 7/8"
184	26756	1	* Carburetor To Intake Pipe Gasket
185	33004A	1	Intake Pipe (Incl. 224)
186	34358	1	Governor Link
189	650831	2	Screw, 1/4-20 x 1/2"
190	35831	1	Brake Lever
191	35015B	1	S.E. Brake Bracket (Incl. 195)
192	34966	1	Brake Control Link
193	34965	1	Brake Spring
194	32309	1	Retaining Ring
195	610973	1	Terminal
200	33131A	1	Control Bracket (Incl. 202 thru 206)
202	33802	1	Compression Spring
203	31342	1	Compression Spring
204	650549	1	Screw, 5-40 x 7/16"
205	650777	1	Screw, 6-32 x 21/32"
206	610973	1	Terminal
207	34336	1	Throttle Link
209	30200	2	Screw, 10-24 x 9/16"
210	27793	1	Conduit Clip
211	28942	1	Screw, 10-32 x 3/8"
214	650841	1	Washer
223	650451	2	Screw, 1/4-20 x 1"
224	34690A	1	* Intake Pipe Gasket
239A	35815	1	Air Cleaner Gasket
245	34782	1	Air Cleaner Filter
245A	34783	1	Air Cleaner Filter
250	35535	1	Air Cleaner Cover
260	35564	1	Blower Housing
261	30200	2	Screw, 10-24 x 9/16"
262	650831	2	Screw, 1/4-20 x 1/2"
275	391019	1	Muffler
276	33753	1	Locking Plate
277	650795	2	Screw, 1/4-20 x 2-1/4"
285	35000	1	Starter Cup
287	650926	2	Screw, 8-32 x 21/64"
290	30705	1	Fuel Line
292	26460	3	Fuel Line Clamp
300	34114D	1	Fuel Tank (Incl. 292 & 301)
301	33032	1	Fuel Cap
305	35577	1	Oil Fill Tube
306	34265	1	* Fill Tube Gasket
307	35499	1	"O" Ring
309	650562	1	Screw, 10-32 x 1/2"
310	35578	1	Dipstick
313	34080	1	Spacer
327	35392	1	Starter Plug
330A	34970	1	Ground Wire
361	650837	1	Screw, 10-32 x 1/4"
370	36261	1	Instruction Decal
370B	34704	1	Instruction Decal
370A	36260	1	Primer Decal
380	632391	1	Carburetor (Incl. 184)
390	590688	1	Rewind Starter

Ref #	Part Number	Qty	Description
400	35997	1	* Gasket Set (Incl. items marked PK i n notes) Incl. part #'s: 26756 (1), 27234A (1), 33554A (1), 33735 (1), 34265 (1), 34338 (1), 34690A (1), 35261 (1)
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.




VIEW 2 OF 3

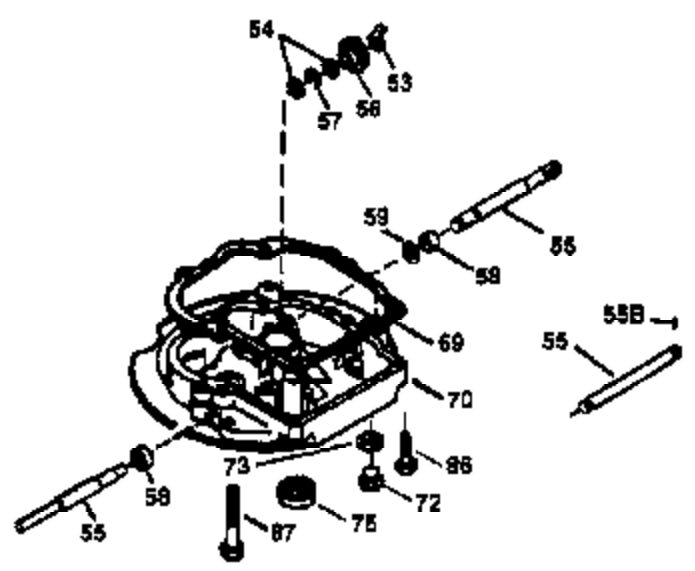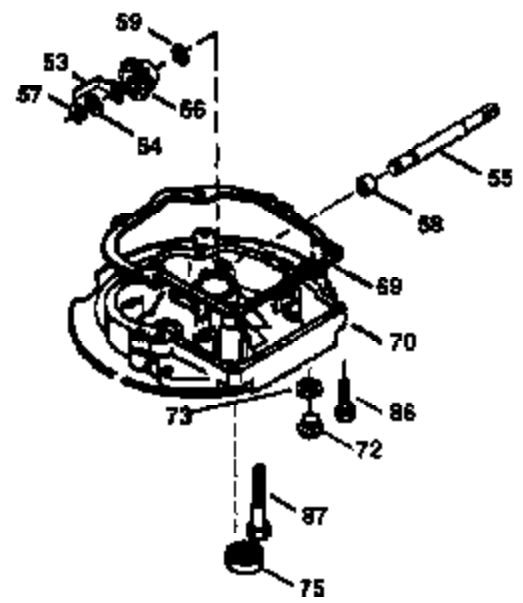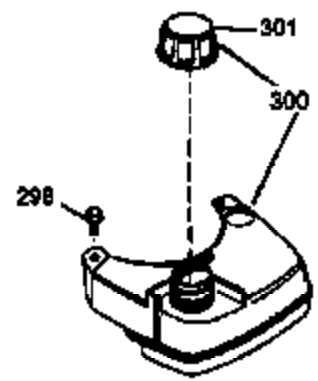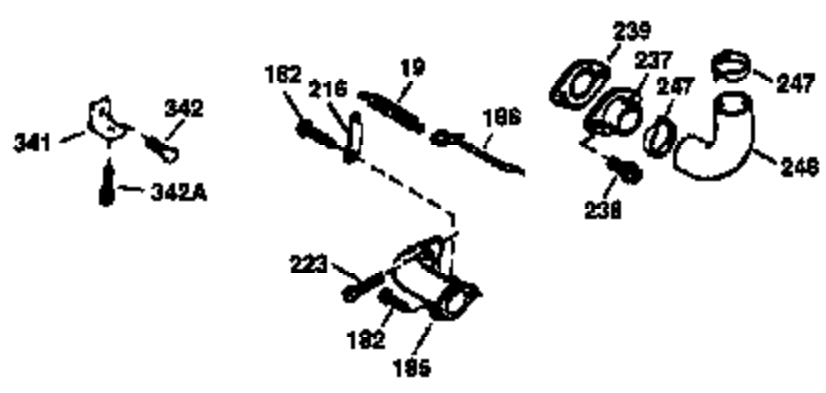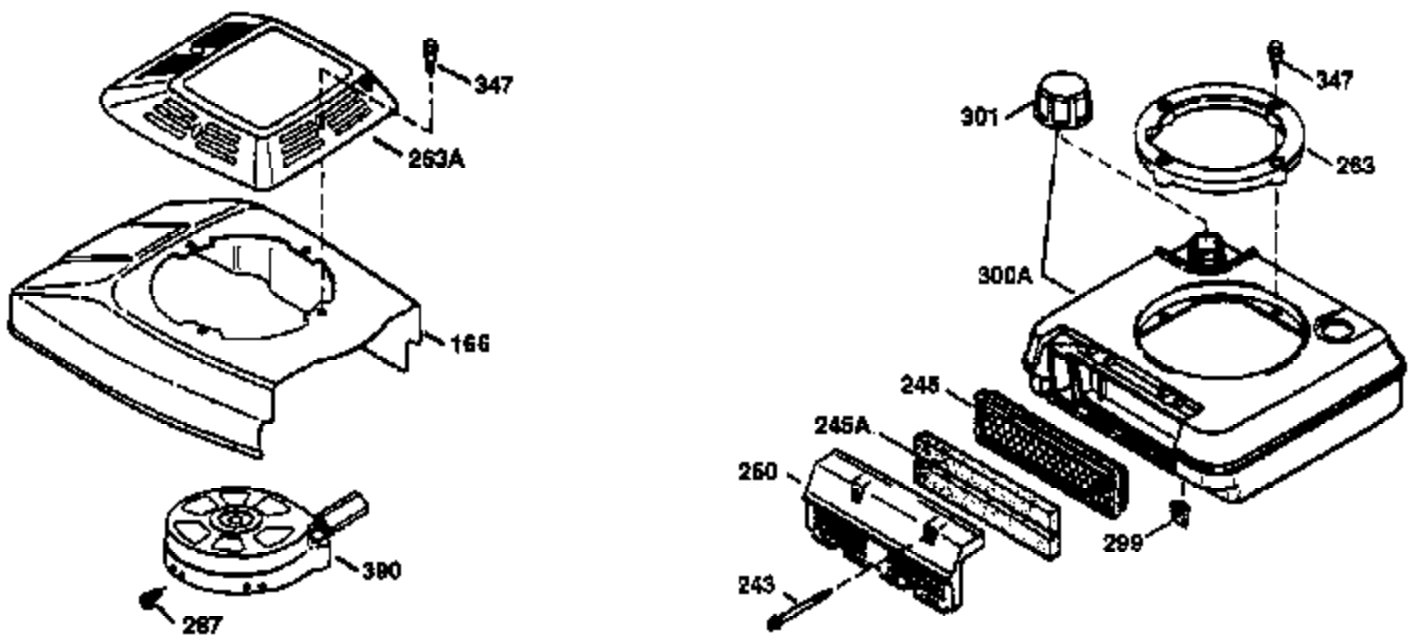

Ref #	Part Number	Qty	Description
	19 33578	1	Extension Spring
	69 35261	1	* Mounting Flange Gasket
	70 34311D	1	Mounting Flange (Incl. 72 thru 83)
	72 36083	1	Oil Drain Plug
	75 27897	1	Oil Seal
	86 650488	6	Screw, 1/4-20 x 1-1/4"
	182 6201	2	Screw, 1/4-28 x 7/8"
	185 33004A	1	Intake Pipe (Incl. 224)
	186 34358	1	Governor Link
	214 650841	1	Washer
	223 650451	2	Screw, 1/4-20 x 1"
	239 34698A	1	Air Cleaner Gasket
	239A 35815	1	Air Cleaner Gasket
	245 34782	1	Air Cleaner Filter
	245A 34783	1	Air Cleaner Filter
	250 35535	1	Air Cleaner Cover
	287 650926	2	Screw, 8-32 x 21/64"
	298 28763	3	Screw, 10-32 x 35/64"
	300 34114D	1	Fuel Tank (Incl. 292 & 301)
	301 33032	1	Fuel Cap
	330A 34970	1	Ground Wire
	361 650837	1	Screw, 10-32 x 1/4"
	390 590688	1	Rewind Starter

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 3 OF 3

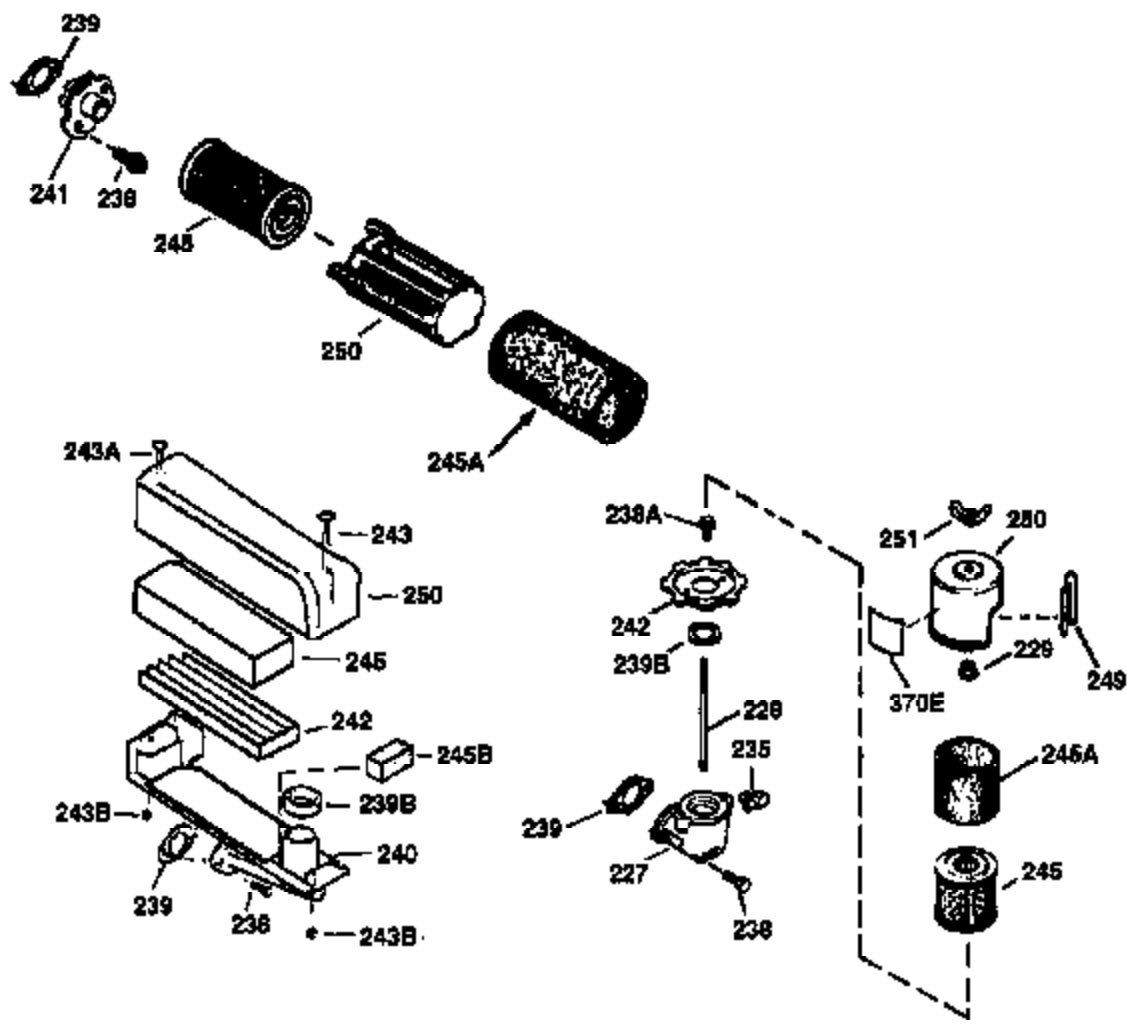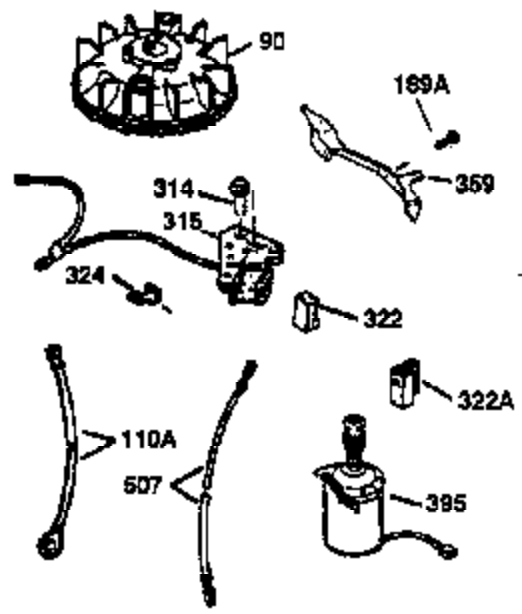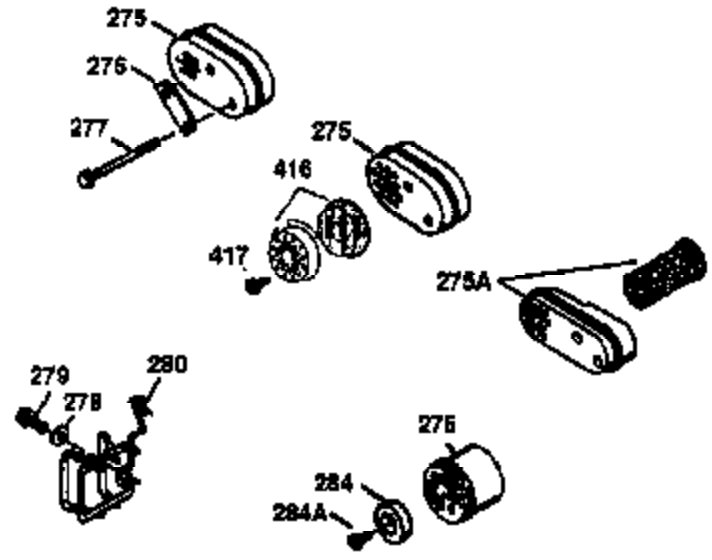

Ref #	Part Number	Qty	Description
90	611044	1	Flywheel
214	650841	1	Washer
227	35917	1	Air Cleaner Elbow Ass'y. (Incl. 238A)
228	650826	1	Stud, 1/4-20 x 6.20" Threaded Both En ds
229	650825	1	Nut & Lock Washer, 1/4-20
235	35533	1	Breather Tube Fitting
238A	650940	1	Screw, 10-32 x 3/4"
239A	35815	1	Air Cleaner Gasket
239	34698A	1	Air Cleaner Gasket
242	34699	1	Air Cleaner Bracket
245	34782	1	Air Cleaner Filter
245A	34783	1	Air Cleaner Filter
249	35536	1	Air Cleaner Cover Seal
250	35535	1	Air Cleaner Cover
251	650513	1	Wing Nut, 1/4-20
275	391019	1	Muffler
276	33753	1	Locking Plate
277	650795	2	Screw, 1/4-20 x 2-1/4"
314	650767	2	Screw, 8-32 x 27/64"
315	34990	1	Alternator Coil (Milli-Amp)
322	35013	1	Connector Body
330A	34970	1	Ground Wire
361	650837	1	Screw, 10-32 x 1/4"