


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL  
NUMBERS HERE







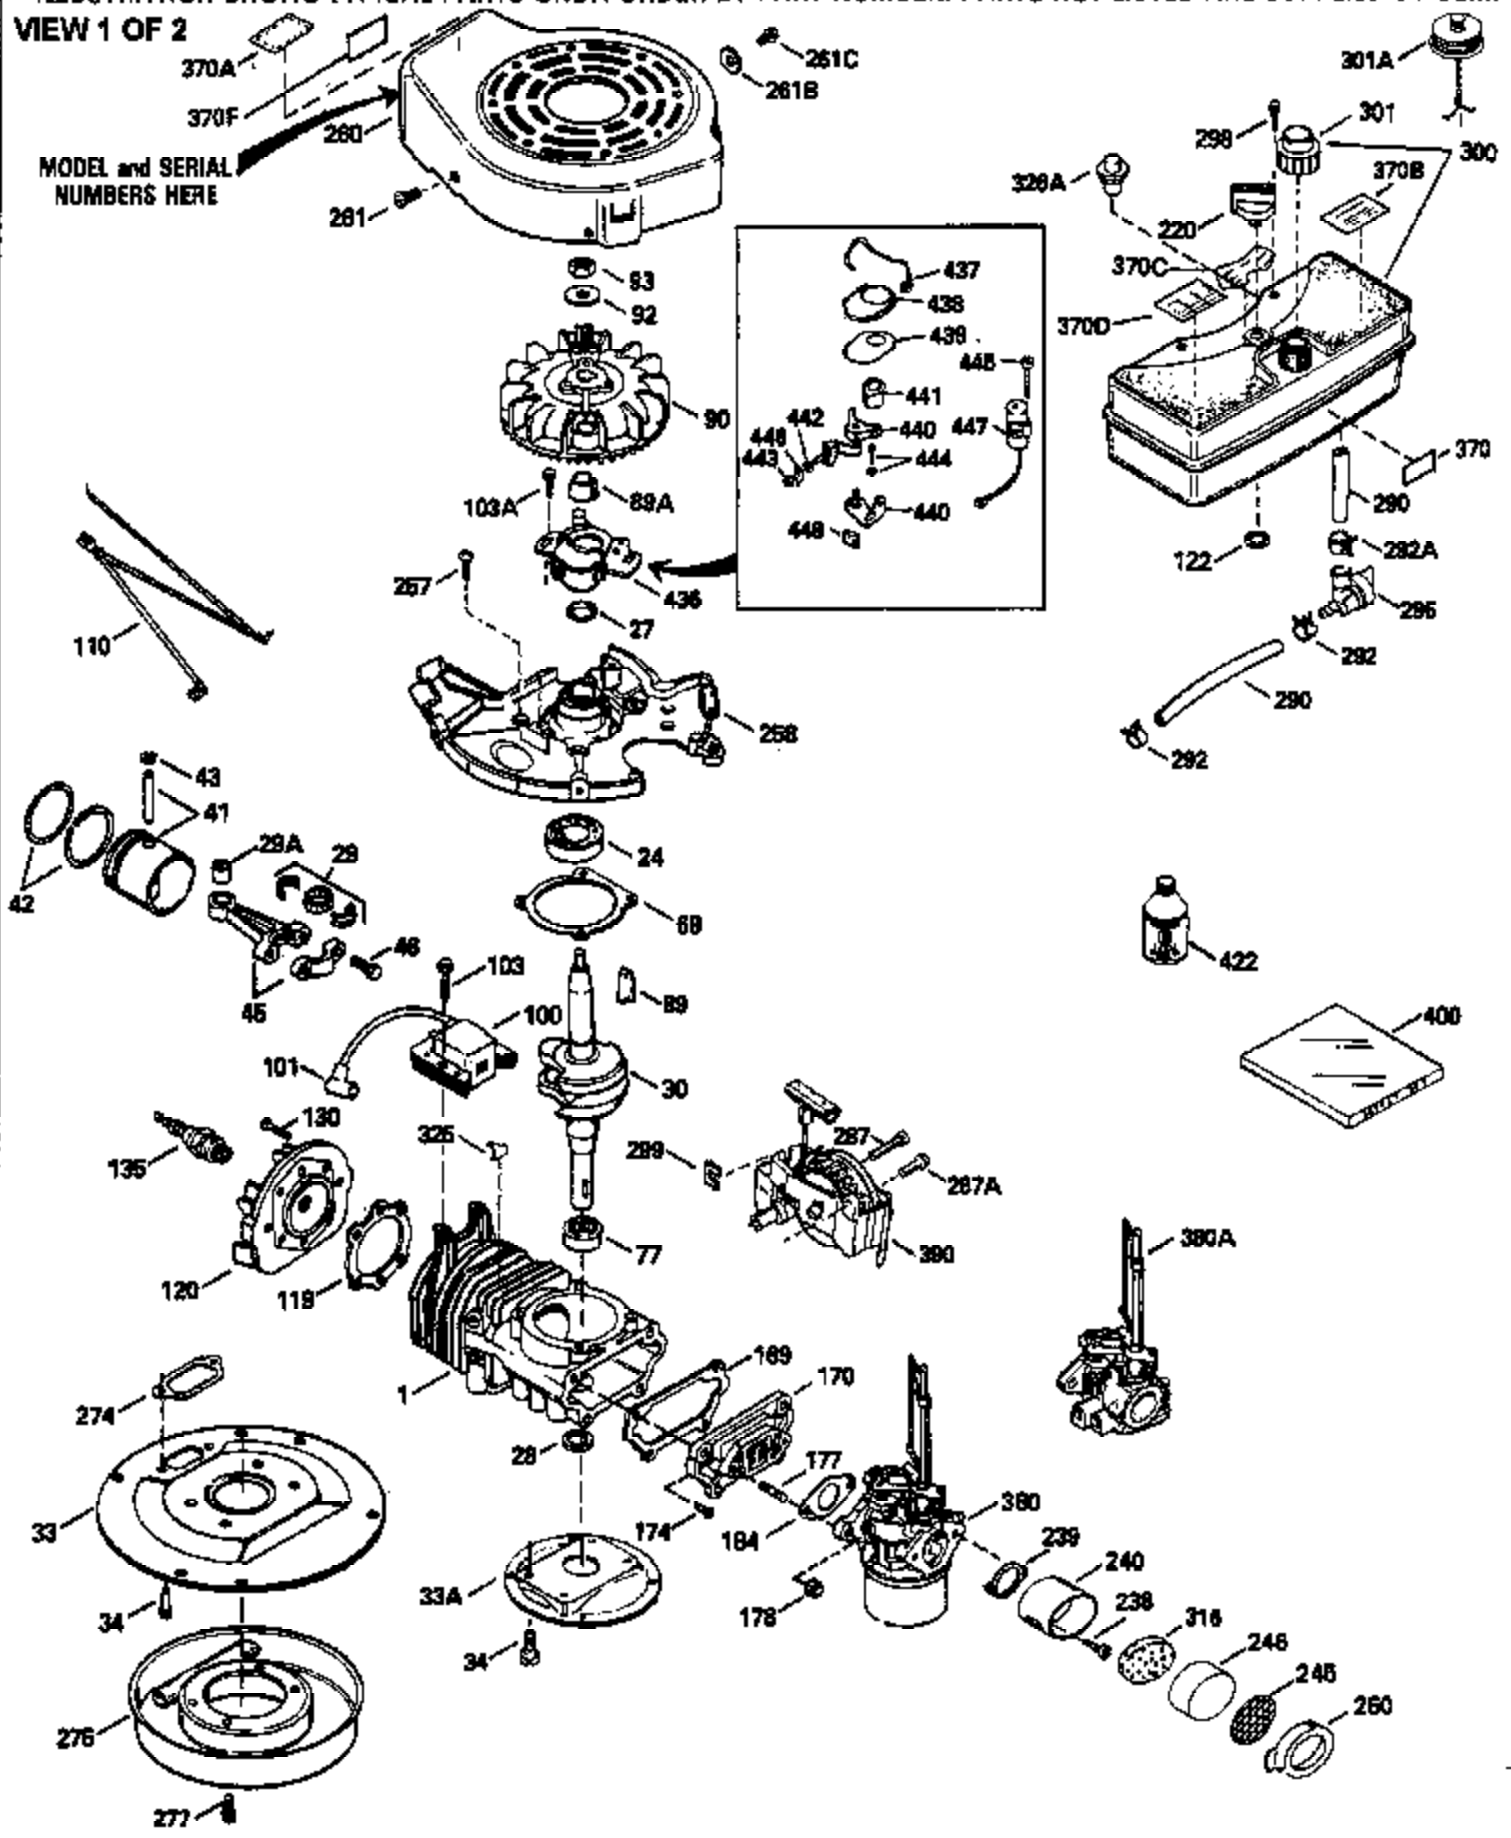


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
24	530110		Ball Bearing
27	510319		Oil Seal
28	28427		Oil Seal
29	530151		Needle Bearing & Liner Set (30 Needle s)
29A	530104A		Cartridge Bearing
30	290578		Crankshaft & Rod Ass'y. (Incl. 45)
33	330175		Adapter Plate (8" B.C.)
34	650797		Screw, 5/16-18 x 1/2"
41	310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
41	310272A		Piston & Pin Ass'y. (.010" OS)
42	310190		Ring Set (Std.)
42	310273		Ring Set (.010" OS)
43	310167		Piston Pin Retaining Ring
45	310263		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
46	650633		Connecting Rod Bolt
69	510292A		* Cylinder Cover Gasket
77	780097		Cartridge Bearing
89A	611014A		Adapter Sleeve
90	611046A		Flywheel
92	650815		Belleville Washer
93	650390		Flywheel Nut
100	34431		Lamination & Coil Ass'y. (This coil has been superseded to 730207 solid state conversion kit.)
100	730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
101	610118		Spark Plug Cover
103A	650747		Screw, 1/4-20 x 3/4"
110	611023		Ground Wire
119	510274A		* Cylinder Head Gasket
120	250240B		Cylinder Head
130	650477		Screw, Torx T-30, 1/4-20 x 3/4"
135	33636		Resistor Spark Plug
169	510323A		* Cover Plate Gasket
170	470153		Reed Cover Plate (Incl. 178)
174	650579		Screw, Torx T-25, 10-24 x 1/2"
177	650700		Carburetor Mounting Stud
178	29752		Nut & Lock Washer, 1/4-28
184	510110A		* Carburetor Gasket
239	27272A		Air Cleaner Gasket
257	650561		Screw, 1/4-20 x 5/8"
258	350406		Blower Housing Base (Incl. 27)
260	350407		Blower Housing
261	650958		Screw, 1/4-20 x 7/16"
261B	650854		Washer
274	510314		Exhaust Gasket
275	390297		Muffler
277	650911		Screw, Torx T-30, 1/4-20 x 5/8"
298	650803		Screw, 10-32 x 7/8"
370B	550213		Warning Decal
370D	550212		Fuel Mix Decal
380	632170		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-28 or Fiche 23B,Grid F-11 for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)

Ref #	Part Number	Qty	Description
436	611006		Stator Plate Ass'y. (Incl. 437 thru 4 48)
437	30551		Breaker Box Cover Spring
438	610947		Dust Cover
439	610948		Dust Cover Gasket
440	30547A		Breaker Contact
441	30552		Breaker Cam
442	610385		Washer
443	610408		Nut, 8 32
444	29181		Breaker Point Screw
445	610593		Screw, 8-32 x 13/16"
446	33356		Ground Terminal
447	30548B		Condenser
448	30549		Felt Cam Wiper

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

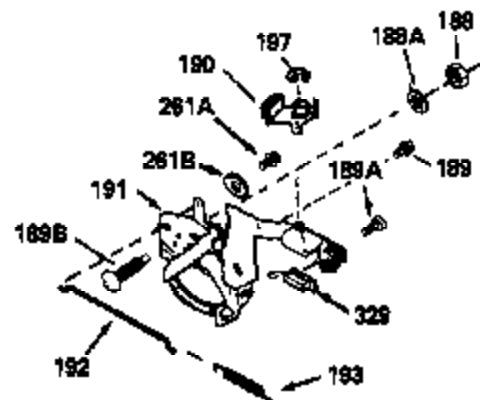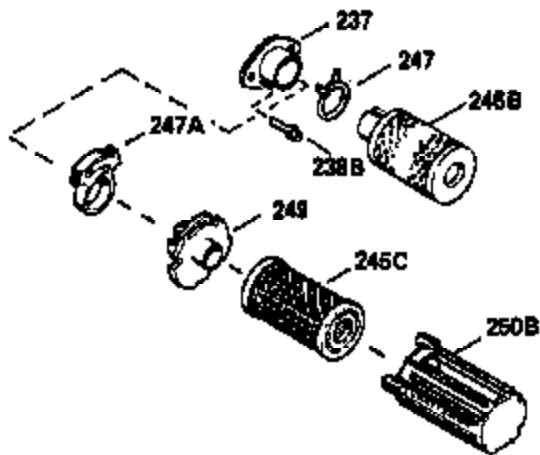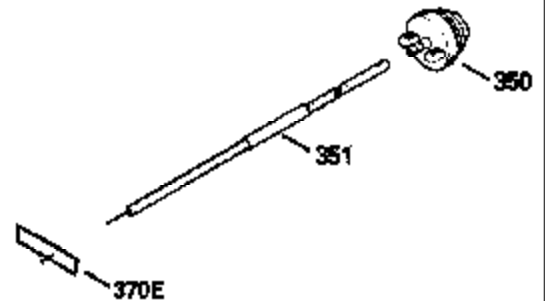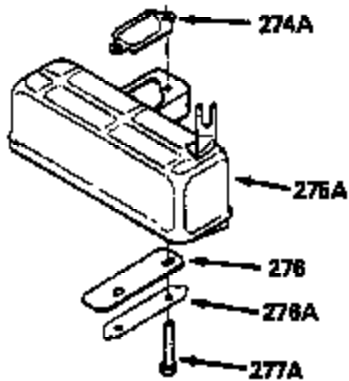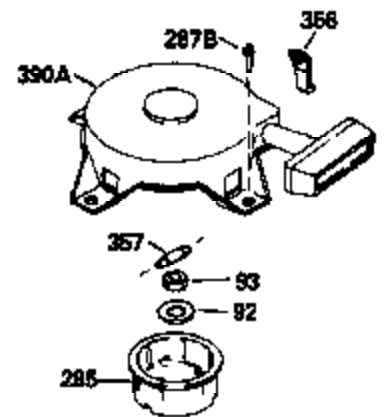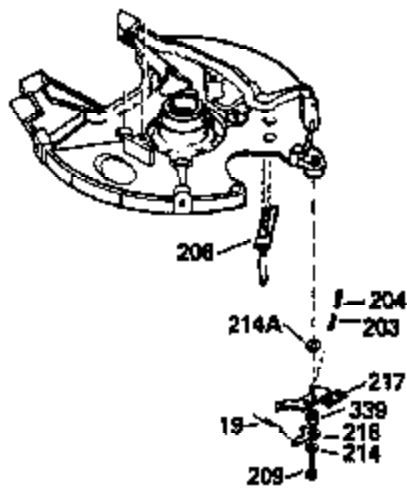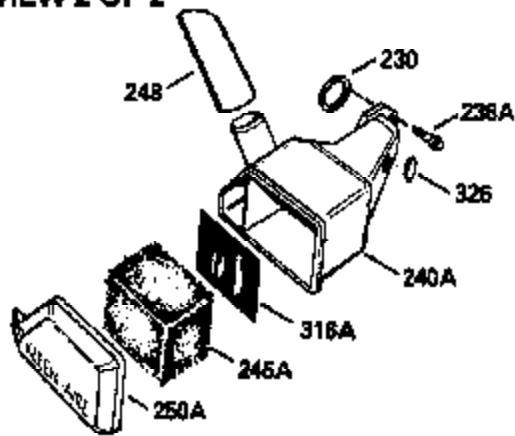

Ref #	Part Number	Qty	Description
	19 570417		Extension Spring
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	189A 650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
	200 570420		Boden Wire Bracket
	203 31342		Compression Spring
	204 650549		Screw, 5-40 x 7/16"
	206 610973		Terminal
	209 650544		Screw, Torx T-25, 10-24 x 7/8"
	210 27793		Conduit Clip
	211 28942		Screw, 10-32 x 3/8"
	214A 570422		Washer
	214 650583		Washer
	216 570415		R.P.M. Adjusting Lever
	217 570421		Control Lever
	230 34338		Air Cleaner Gasket
	238A 650806		Screw, 10-32 x 5/8"
	240A 450234		Air Cleaner Body
	245A 450236		Air Cleaner Element
	248 33008		Air Cleaner Tube
	250A 33007		Air Cleaner Cover
	261B 650854		Washer
	285 590551		Starter Cup
	287B		Rivet (Can be purchased locally)
	316A 450235		Mesh Screen
	326 450237		Button Plug
	339 570412		Spacer
	390A 590420		Rewind Starter (Refer to Division 5, Section C, page 25 or Fiche 23B, Grid G-11 for breakdown)