

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2






Ref #	Part Number	Qty	Description
	1 250288		Cylinder (Incl. 67A, 75, 105, 106 & 1 38)
	16 490306		Governor Lever
	16A 490304		Governor Lever
	19 490308		Extension Spring
	19A 490307		Throttle Link Spring
	20 510340		Oil Seal
	21 570673		Ball Bearing
	22 510338		Slide Ring
	23 530158		Ball Bearing
	24 530161		Ball Bearing
	27 530159		Bearing Retainer
	29 530160		Bearing Strip (31 needles) (.435" lon g)
	30 290574A		Crankshaft (Incl. 29)
	33 330179		Adapter Plate
	34 792067		Screw, 5/16-18 x 1"
	35 29826		Screw, 10-32 x 3/4"
	35A 650506		Screw, 4-40 x 3/16"
	37 29216		Lock Nut, 10-32
	39 310277B		Piston & Rod Ass'y. (Incl. 29 & 42)
	42 310278		Ring Set
	67A 430234		Fuel Filter (Screen) (Optional)
	67 430233		Fuel Filter (Screen w/brass collar)
	75A 510337		Oil Seal
	75 510339		Oil Seal (P.T.O. end)
	80 490305		Governor Shaft
	89 611107		Flywheel Key
	90 611109		Flywheel (Counterbalance)
	92 650815		Belleville Washer
	93 650816		Flywheel Nut
	100 34443A		Solid State Ignition
	101 610118		Spark Plug Cover
	103 650814		Screw, Torx T-15, 10-24 x 1"
	105 650892		Screw, 5/16-18 x 2-3/16"
	106 650891		Screw, 5/16-18 x 1-5/8"
	110 611106		Ground Wire
	135 611049		Spark Plug (RCJ8Y)
	138 570683		Port Cover
	164 510341		"O" Ring
	165 510342		"O" Ring
	182 792067		Screw, 5/16-18 x 1"
	184A 27110		Washer
	185 570674		Intake Pipe & Reed Ass'y. (Incl. 164 & 165)
	186 490309		Governor Link
	200 570681A		Control Bracket (Incl. 203, 205 & 206)
	202 32924		Compression Spring
	203 31342		Compression Spring
	204 650549		Screw, 5-40 x 7/16"
	205 650606		Screw, 10-32 x 1-1/8"
	206 610973		Terminal
	209 590568		Screw, 10-24 x 3/4"
	215 32410		Control Knob
	226 730575A		Air Cleaner Kit (Incl. 227, 229, 238, 239, 245, 245A, 250, 251 & 370B)
	227 450249A		Air Cleaner Elbow Ass'y. (Incl. 228, 232, 238, 239A, 241, 344 & 344A)
	238 650834		Screw, 10-32 x 1-17/32"
	245A 450243		Air Cleaner Filter

Ref #	Part Number	Qty	Description
245A	34783		Air Cleaner Filter
245	450244		Air Cleaner Filter
250	34781		Air Cleaner Cover
260	350429		Blower Housing
261	650894		Screw, 5/16-18 x 5/8"
274	510343A		Exhaust Gasket
277	650893		Screw, 5/16-18 x 3-13/64"
278	28537		Washer
279	650837		Screw, 10-32 x 1/4"
280	390307A		Heat Shield
283	390315		E.G.R. Tube
285	34449		Starter Cup
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
298	650895		Screw, 10-32 x 5/8"
300	410258		Fuel Tank
301	410259A		Fuel Cap
327	35392		Starter Plug
370C	550234		Bowl Nut Decal
370D	34144		Primer Decal
370E	550235		Control Decal
370A	34686		Name Decal
370B	550231		Instruction Decal
370	550230A		Fuel Mix Decal
380	632434		Carburetor (Incl. 164) (Refer to Division 5, Section A, page A6-2 or Fiche 25, Grid F-1for breakdown)
390	590635		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
399	510334		Gasket Eliminator (Loctite 515)
420	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

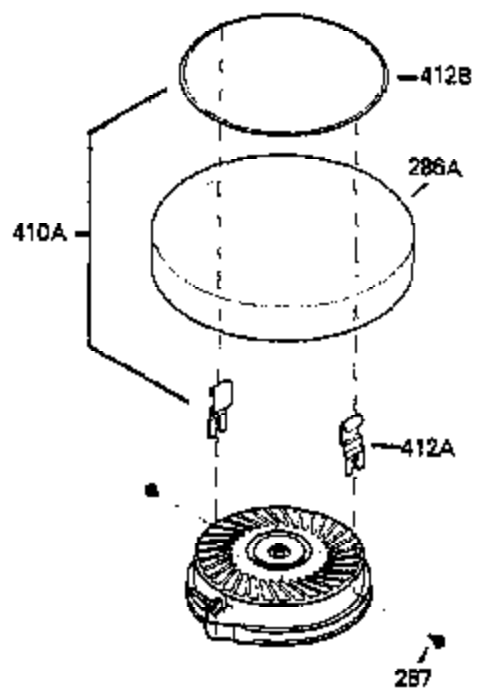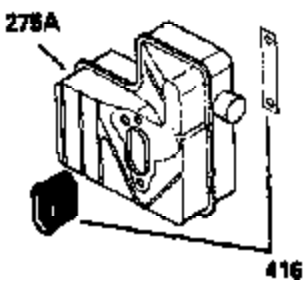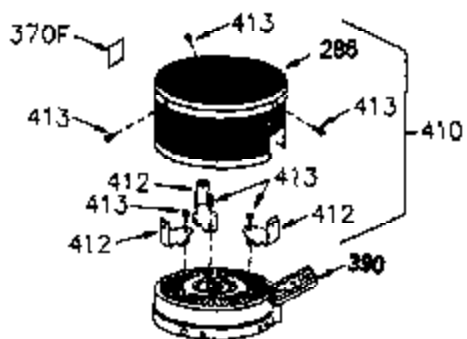

Ref #	Part Number	Qty	Description
67A	430234		Fuel Filter (Screen) (Optional)
200	570681A		Control Bracket (Incl. 203, 205 & 206)
202	32924		Compression Spring
205	650606		Screw, 10-32 x 1-1/8"
209	590568		Screw, 10-24 x 3/4"
230	510344		"O" Ring
231	450245		Measuring Cup
240	450242		Air Cleaner Body
245A	450243		Air Cleaner Filter
245A	34783		Air Cleaner Filter
245C	450247		Air Cleaner Filter
245	450244		Air Cleaner Filter
250A	450246		Air Cleaner Cover
275A	390316		Muffler (Discharge toward spark plugend) (w/glass fiber packing)
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
296	34279B		Fuel Filter
370E	550235		Control Decal
390	590635		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
416	390309		Spark Arrestor Kit (Can be used on an y model)