

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2





Ref #	Part Number	Qty	Description
	1		250288 Cylinder (Incl. 67A, 75, 105, 106 & 1 38)
	16		490306 Governor Lever
	16A		490304 Governor Lever
	19		490308 Extension Spring
	19A		490307 Throttle Link Spring
	20		510340 Oil Seal
	21		570673 Ball Bearing
	22		510338 Slide Ring
	23		530158 Ball Bearing
	24		530161 Ball Bearing
	27		530159 Bearing Retainer
	29		530164 Bearing Strip (31 needles) (.495" lon g)
	30		290567A Crankshaft (Incl. 29)
	33		330179 Adapter Plate
	34		792067 Screw, 5/16-18 x 1"
	35A		650506 Screw, 4-40 x 3/16"
	35		29826 Screw, 10-32 x 3/4"
	37		29216 Lock Nut, 10-32
	39		310277B Piston & Rod Ass'y. (Incl. 29 & 42)
	42		310278 Ring Set
	67		430233 Fuel Filter (Screen w/brass collar)
	67A		430234 Fuel Filter (Screen) (Optional)
	75		510339 Oil Seal (P.T.O. end)
	75A		510337 Oil Seal
	80		490305 Governor Shaft
	89		611107 Flywheel Key
	90		611109 Flywheel (Counterbalance)
	92		650815 Belleville Washer
	93		650816 Flywheel Nut
	100		34443A Solid State Ignition
	101		610118 Spark Plug Cover
	103		650814 Screw, Torx T-15, 10-24 x 1"
	105		650892 Screw, 5/16-18 x 2-3/16"
	106		650891 Screw, 5/16-18 x 1-5/8"
	110		611110 Ground Wire
	135		611049 Spark Plug (RCJ8Y)
	138		570683 Port Cover
	164		510341 "O" Ring
	165		510342 "O" Ring
	182		792067 Screw, 5/16-18 x 1"
	184A		27110 Washer
	185		570674 Intake Pipe & Reed Ass'y. (Incl. 164 & 165)
	186		490309 Governor Link
	190		570676 Brake Lever
	191		570677 S.E. Brake Bracket (w/cable clamp)
	191A		570678A Brake Control Lever
	192		490312 Brake Control Link
	193		490311 Brake Spring
	195		610973 Terminal
	197A		650897 Screw, 1/4-20 x 13/32"
	197		650896 Screw, 1/4-20 x 13/16"
	198		490310 Brake Control Lever Spring
	209		590568 Screw, 10-24 x 3/4"
	226		730575A Air Cleaner Kit (Incl. 227, 229, 238, 239, 245, 245A, 250, 251 & 370B)
	227		450249A Air Cleaner Elbow Ass'y. (Incl. 228, 232, 238, 239A, 241, 344 & 344A)

Ref #	Part Number	Qty	Description
238	650834		Screw, 10-32 x 1-17/32"
245A	450243		Air Cleaner Filter
245	450244		Air Cleaner Filter
260	350429		Blower Housing
261	650894		Screw, 5/16-18 x 5/8"
274	510343A		Exhaust Gasket
275	390306A		Muffler (Side discharge)
277	650893		Screw, 5/16-18 x 3-13/64"
278	28537		Washer
279	650837		Screw, 10-32 x 1/4"
280	390307A		Heat Shield
283	390315		E.G.R. Tube
285	34449		Starter Cup
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
298	650895		Screw, 10-32 x 5/8"
300	410258		Fuel Tank
301	410259A		Fuel Cap
325	29443		Wire Clip
327	35392		Starter Plug
370D	34144		Primer Decal
370A	34686		Name Decal
370B	550231		Instruction Decal
370C	550234		Bowl Nut Decal
370	550230A		Fuel Mix Decal
380	632434		Carburetor (Incl. 164) (Refer to Division 5, Section A, page A6-2 or Fiche 25, Grid F-1 for breakdown)
390	590621		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
399	510334		Gasket Eliminator (Loctite 515)
420	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

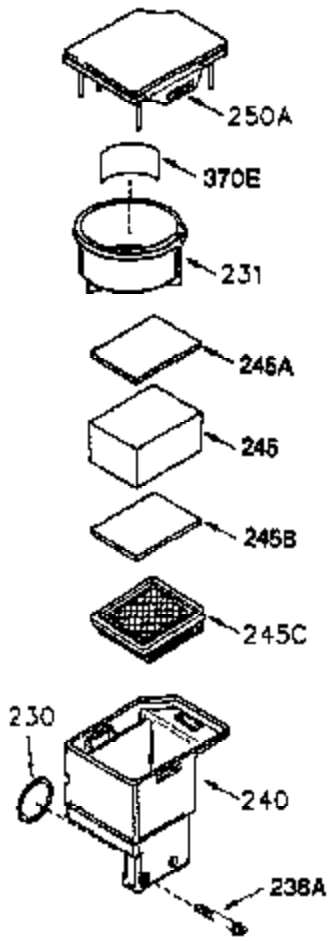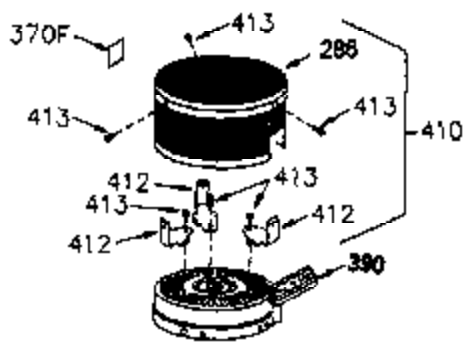

Ref #	Part Number	Qty	Description
67A	430234		Fuel Filter (Screen) (Optional)
208	570335		Adjustment Lever
209	590568		Screw, 10-24 x 3/4"
230	510344		"O" Ring
231	450245		Measuring Cup
240	450242		Air Cleaner Body
245C	450247		Air Cleaner Filter
245	450244		Air Cleaner Filter
245A	450243		Air Cleaner Filter
250A	450246		Air Cleaner Cover
287	650926		Screw, 8-32 x 21/64"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
296	34279B		Fuel Filter
390	590621		Rewind Starter (Refer to Division 5, Section C, page 34 or Fiche 25, Grid G-1 for breakdown)
416	390309		Spark Arrestor Kit (Can be used on an y model)