


Ref #	Part Number Qty	
1	34920A	Cylinder (Incl. 8,11,106,106A,107)(2- 5/8")
2	28277	Washer, Flat
3	30669	Rod, Governor
	31357	Lever, Governor
	31335	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	31361	Spring, Governor
	32630	Seal, Oil
	29536	Baffle, Blower housing (Use as requir ed)
	35256A	Blo.Hsg.Baffle (W/E.S.knock-out)(As r eq.)
	650561	Screw, 1/4-20 x 5/8"
	27652	Pin, Dowel
	35023	Crankshaft (Incl. 13 & 14)
	29783	Pin, Crankshaft gear
	27884	Gear, Crankshaft
	31797B	Piston & Pin Ass'y. (Incl.17)(2-5/8") (Std.)
	31798B	Piston & Pin Ass'y. (Incl. 17) (.010" OS)
	31799B	Piston & Pin Ass'y. (Incl. 17) (.020" OS)
	34503	Piston, Pin & Ring Set (2-5/8") (Std.)
	34504	Piston, Pin & Ring Set (.010" OS)
	34505	Piston, Pin & Ring Set (.020" OS)
	34854	Ring Set (2-5/8") (Std.)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	31295C	Rod Assy., Connecting (Incl. 19)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33157	Camshaft
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	30688	Screw, 1/4-20 x 1/2"
	31356	Pump Assy., Oil
	650625	Washer, Thrust
	30684	* Gasket, Cylinder cover
	31471C	Flange Ass'y. (Incl. 29,30,31,33,182 & 183)
	27642	Plug, Pipe (sq.hd, 1/4-28)
	27897	Seal, Oil
	30668	Shaft, Mech. Governor
	31707A	Governor Spacer Assy. (Incl. 33)
	30590A	Washer, Flat (2 required)
	30591	Gear Assy., Governor
	29193	Ring, Retaining
	30588A	Spool, Governor
	31355	Screen, Oil filter (Use as required)
	29117	Screw, 8-32 x 5/16" (Use as required)
	30564	Screw, 1/4-20 x 1"
	32783	Intake Valve (Std.) (Incl. 44)
	32784	Intake Valve (1/32" OS) (Incl. 44)
	27878A	Exhaust Valve (Std.) (Incl. 44)
	27880A	Exhaust Valve (1/32" OS) (Incl. 44)
	27882	Cap, Upper valve spring
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Washer, 1/2-20
50	28938B	* Gasket, Head

	Part Number Qty	
	30938A	Head, Cylinder (Incl. 54)
	33636	Resistor Spark Plug (RJ-8)
	34251	Resistor Spark Plug (RJ-17LM)
	30939A	Cover Assy., Cylinder head
54	650694A	Screw, 5/16-18 x 2" (Use as required)
54	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
54B	650691	Washer, Flat (Use as required)
54A	26073	Washer, Flat (Use as required)
54A	650690	Washer, Belleville (Use as required)
55	31461	Bushing, Crankshaft
56	27896	* Gasket, Breather cover
57	28423	Body, Breather
58	28424	Element, Breather
59	28425	Cover, Valve spring box
	27627	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	26756	* Gasket, Carburetor
	31358	Pipe, Intake
	29752	Nut & Lockwasher Ass'y. 1/4-28
	27272	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	650152	Screw, 8-32 x 3/8"
	27915	* Gasket, Intake to cylinder
	650378	Screw, 5/16-18 x 1-1/8"
	31823	Link, Throttle
	32582	
	32181A	Link, Governor spring
		Control Assy., Speed (Incl. 76, 77 & 78)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Ass'y. (Use as required)
	30200 33030B	Screw, 10-24 x 9/16"
	32629B	Blower Housing (Incl. 121 & 122)(Elec . Str.)
	29747B	Screw, 5/16-24 x 21/32"
	27930	* Gasket, Exhaust
	28269	Muffler
	31588	Plate, Muffler locking
	650696	Screw, 5/16-18 x 2-3/4" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	32125	Cup, Starter
	35009	Screen, Starter
	29716	Screw, 1/4-28 x 7/16"
	32584	Fuel Tank (Incl. 90)
	33032	Fuel Cap (Use as required)
	34210	Fuel Cap (Use as required)
	29774	Fuel Line (8-1/4") (Use as required)
	30962	Fuel Line (32") (Use as required)
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	27625	Plug, Oil fill (Incl. 94A)
94A	29673	* Gasket, Oil fill
96	6201	Screw, 1/4-28 x 7/8" (Use as required)
96	650372	Screw, 1/4-20 x 13/16" (Use as requir ed)
	34235	Ground Wire
	33323	Screen, Muffler (Use as required)
	27276	Cover, Spark plug (Use as required)
		· 1 1 • 1 • 1 · 1 · 1 · 1 · 1 · 1 · 1 ·

Ref #	Part Number (Oty Description
123	610118	Cover, Spark plug (Use as required)
133B	730127	A/C Assy. (Incl.65,66,67,68A,69,70,13 4)
154A	34768	Decal, Name
154	34346	Decal, Instruction
157	631021	Inlet Needle, Seat & Clip Assy.
158	631444	Carburetor (Incl. 62) (Refer to Division 5, Section A, page 78 for breakdown)
160	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
164	33234A	* Gasket Set (Incl. items marked *)

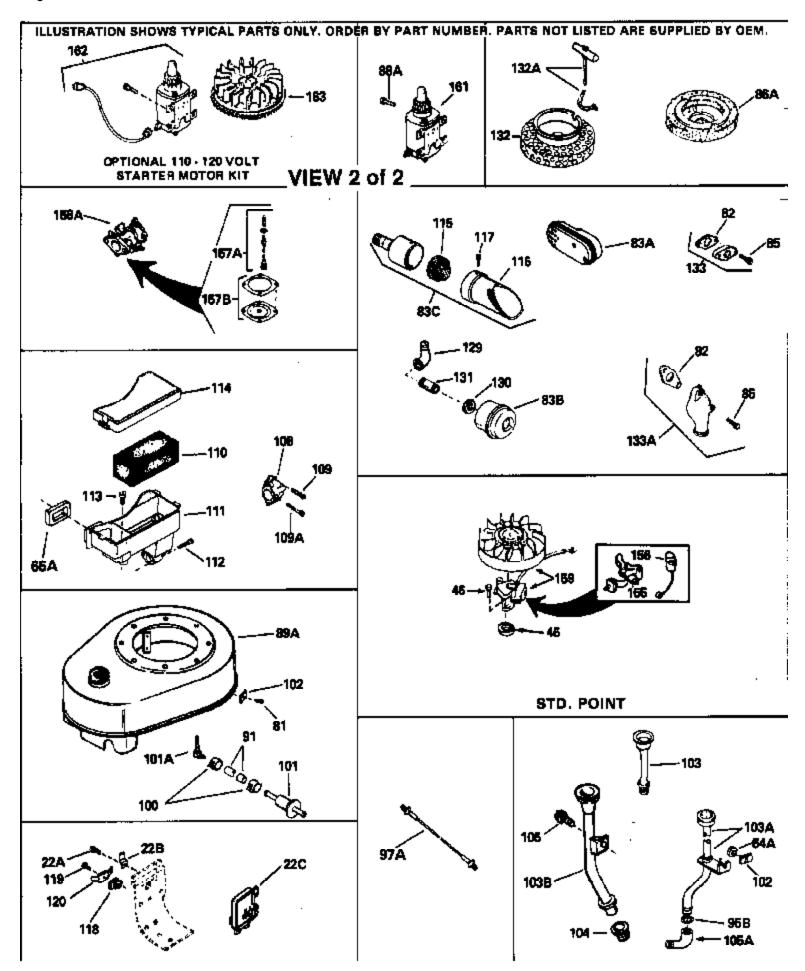

Ref #	Part Number	Qtv	Description
45 46 54A 54A 81 82	33876 650489 26073 650690 29747B 27930 391026	•	Gasket, Stator Screw, 1/4-20 x 5/8" Washer, Flat (Use as required) Washer, Belleville (Use as required) Screw, 5/16-24 x 21/32" * Gasket, Exhaust Muffler (Incl. 115, 116 & 117) (This spark arrestor mufflercan be used on any model)
85 85 91 91 100 115 116 117 133 133A 155	650696 650697A 30196 29774 30962 26460 33323 33700 650578 730130 31288 30547A 30548B 611038		Screw, 5/16-18 x 2-3/4" (Use as requi red) Screw, 5/16-18 x 3/4" (Use as required) Screw, 5/16-18 x 3/4" (Use as required) Fuel Line (8-1/4") (Use as required) Fuel Line (32") (Use as required) Clamp, Fuel line (Use as required) Screen, Muffler (Use as required) Cover & tube, Muffler (Use as required) Screw, 8-18 x 3/8" (Use as required) Muffler Adap. Kit (Incl.82 & 85)(As r eq.) Muffler Adapter Kit (Incl.82 & 85)(As req.) Contact Assy., Breaker Condenser Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
162	33329D		Starter Motor Kit (110-120 volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. For breakdown see Division 5, Section D, Page 16.)
163	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Use on Std. point ignitions)
163	611085		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Use on solid state ignitions)